

AEG ABPK 01

AEG WX7 Performance Cleaning Kit Instruction Manual

Model: ABPK 01

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your AEG WX7 Performance Cleaning Kit, Model ABPK 01. Please read these instructions thoroughly before using the product and retain them for future reference.

1.1. Product Overview

The AEG WX7 Performance Cleaning Kit is designed to facilitate easy and efficient cleaning of windows and various hard surfaces. It includes components necessary for achieving streak-free results.

1.2. What's in the Box

- 2 x Natural rubber blades (29 cm)
- 2 x Washable micro-fibre cloths
- 2 x 20 ml sachets of WX7 Crystal Clean detergent



Image 1.1: Components of the AEG WX7 Performance Cleaning Kit, including rubber blades, microfiber cloths, and detergent sachets.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the product or surfaces.

- Keep the cleaning kit and detergent out of reach of children and pets.
- Avoid contact of the WX7 Crystal Clean detergent with eyes and skin. In case of contact, rinse thoroughly with water. If irritation persists, seek medical attention.
- Do not ingest the detergent. If swallowed, seek immediate medical advice.
- Use the kit only for its intended purpose of cleaning windows and hard surfaces.
- Ensure surfaces are suitable for wet cleaning before application.

3. SETUP

Before beginning the cleaning process, prepare the kit components.

1. **Prepare the Cleaning Solution:** Open one sachet of WX7 Crystal Clean detergent. Mix the contents with the appropriate amount of water as indicated on the sachet or the accompanying WX7 device's instructions (if applicable). Pour the solution into a spray bottle.
2. **Attach Microfiber Cloth:** If using the kit with an AEG WX window cleaner device, attach a washable microfiber cloth to the device's spray head or applicator as per the device's instructions.
3. **Inspect Rubber Blades:** Ensure the natural rubber blades are clean and free from debris or damage before use to prevent streaks.

4. OPERATING INSTRUCTIONS

Follow these steps for effective cleaning of windows and hard surfaces.

1. **Spray Surface:** Evenly spray the prepared WX7 Crystal Clean solution onto the surface to be cleaned. Ensure the entire area is covered with a thin layer of solution.
2. **Clean with Microfiber Cloth:** Use the microfiber cloth (either attached to a device or manually) to gently scrub the surface, loosening dirt and grime.
3. **Squeegee with Rubber Blade:** Using the 29 cm natural rubber blade, start from the top of the wet surface and draw it downwards in a straight, overlapping motion. Ensure consistent pressure for a streak-free finish. Wipe the blade clean after each stroke with a separate clean cloth.
4. **Repeat:** Continue this process until the entire surface is clean and dry.



Image 4.1: Demonstrating the use of the AEG WX7 window cleaner with the kit components for streak-free cleaning.

5. MAINTENANCE

Proper maintenance ensures the longevity and performance of your cleaning kit.

- **Microfiber Cloths:** The microfiber cloths are washable. After each use, rinse them thoroughly with water. For deeper cleaning, machine wash them according to fabric care instructions, typically at a low temperature without fabric softener, and air dry.
- **Rubber Blades:** After each use, rinse the rubber blades with clean water to remove any residue. Store them in a way that prevents bending or damage to the edges. Replace blades if they show signs of wear, nicks, or if streaking occurs consistently.
- **Detergent Storage:** Store unused detergent sachets in a cool, dry place, away from direct sunlight.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

6.1. Streaks on Surface

- **Cause:** Dirty or damaged rubber blade.
- **Solution:** Clean the rubber blade thoroughly or replace it if damaged.
- **Cause:** Too much or too little cleaning solution.
- **Solution:** Adjust the amount of WX7 Crystal Clean solution applied. Ensure even coverage.
- **Cause:** Improper squeegee technique.
- **Solution:** Ensure consistent pressure and overlapping strokes. Wipe the blade after each pass.

6.2. Insufficient Cleaning

- **Cause:** Insufficient detergent concentration.
- **Solution:** Ensure the WX7 Crystal Clean detergent is mixed correctly with water according to instructions.
- **Cause:** Heavily soiled surface.
- **Solution:** Pre-clean heavily soiled areas or apply solution and let it sit for a short period before scrubbing.

7. SPECIFICATIONS

Feature	Specification
Model Number	ABPK 01
Product Dimensions	1.18 x 3.27 x 11.61 inches
Item Weight	5.7 ounces (0.16 Kilograms)
Blade Length	29 cm
Detergent Volume (per sachet)	20 ml
Contains Liquid Contents	Yes
Manufacturer	AEG

8. WARRANTY AND SUPPORT

8.1. Warranty Information

This AEG WX7 Performance Cleaning Kit is covered by the standard manufacturer's warranty. Please refer to the warranty card included with your original purchase or visit the official AEG website for detailed terms and conditions.

8.2. Customer Support

For technical assistance, replacement parts, or further inquiries, please contact AEG customer support through their official website or the contact information provided in your product packaging.

© 2026 AEG. All rights reserved.