

[Manuals.plus](#) /

› [USARemote](#) /

› USARemote Key Fob Keyless Entry Remote Instruction Manual for 2006-2011 Honda Civic LX and 2011-2014 Honda Odyssey (Model N5F-S0084A)

USARemote N5F-S0084A

USARemote Key Fob Keyless Entry Remote Instruction Manual

Model: N5F-S0084A

1. INTRODUCTION

This instruction manual provides essential information for the proper use, programming, and maintenance of your USARemote Key Fob Keyless Entry Remote. Please read this manual thoroughly before attempting to use or program the device to ensure correct functionality and to avoid potential issues.

2. COMPATIBILITY

This key fob is designed for specific Honda vehicle models and years. Verify your vehicle's compatibility before proceeding with programming.

- **Honda Civic LX:** 2006, 2007, 2008, 2009, 2010, 2011
- **Honda Odyssey:** 2011, 2012, 2013, 2014



Image: Visual representation of compatible Honda models and years for the key fob.

3. PRODUCT OVERVIEW

The USARemote Key Fob is a replacement keyless entry remote featuring three buttons for common vehicle functions. It includes the necessary internal electronics and a battery for operation.





Image: Front view of the USARemote Key Fob, showing the integrated key blade and the three control buttons.



Complete key fob with electronics and a battery



New, never used replacement part



Dealer / Locksmith programming only



N5F-S0084A
35111-SVA-305



Image: Detailed view highlighting that the key fob includes electronics and a battery, is a new replacement part, requires dealer/locksmith programming, and lists part numbers N5F-S0084A and 35111-SVA-305.

Key Fob Components:

- Integrated Key Blade
- Lock Button
- Unlock Button
- Panic Button
- Internal Electronics
- Pre-installed Battery

4. SETUP AND PROGRAMMING

This USA Remote Key Fob requires professional programming. It cannot be self-programmed by the user. For proper functionality, both the key blade cutting and the remote's electronic programming must be performed by a qualified professional.

Programming Steps:

1. **Contact a Professional:** Schedule an appointment with an automotive locksmith or a Honda dealership.
2. **Key Blade Cutting:** The integrated key blade must be cut to match your vehicle's ignition.
3. **Remote Programming:** The key fob's internal electronics must be programmed to communicate with your vehicle's keyless entry system. This typically involves specialized diagnostic equipment.

Attempting to program the key fob without professional assistance may result in damage to the device or your vehicle's system, and may void any applicable return policies.

5. OPERATING INSTRUCTIONS

Once successfully programmed, your key fob will operate the keyless entry functions of your vehicle.

- **Lock Button ():** Press once to lock all vehicle doors. Some vehicles may flash lights or honk to confirm.
- **Unlock Button ():** Press once to unlock the driver's door. Press twice within a few seconds to unlock all doors.
- **Panic Button (PANIC):** Press and hold for approximately 2-3 seconds to activate the vehicle's alarm system. Press again or insert the key into the ignition to deactivate.

6. MAINTENANCE

To ensure the longevity and proper function of your key fob, follow these maintenance guidelines:

Battery Replacement:

If the remote's range decreases or it stops responding, the battery may need replacement. The key fob uses a standard coin cell battery (e.g., CR2032, though specific model not provided, consult a professional or the original vehicle manual for exact type).

1. Carefully open the key fob casing using a small flat-head screwdriver or a specialized tool.
2. Note the orientation of the old battery before removing it.
3. Insert the new battery with the positive (+) side facing the correct direction.
4. Carefully snap the key fob casing back together.

General Care:

- Avoid exposing the key fob to extreme temperatures, direct sunlight for prolonged periods, or moisture.
- Do not drop the key fob or subject it to strong impacts.
- Clean the exterior with a soft, dry cloth. Avoid harsh chemicals.

7. TROUBLESHOOTING

If you experience issues with your key fob, consider the following common troubleshooting steps:

- **Remote Not Responding:**
 - Check the battery. Replace if necessary.
 - Ensure you are within range of the vehicle.
 - Verify that the key fob was correctly programmed by a professional. Re-programming may be required.
- **Reduced Range:**
 - This is often an indication of a low battery. Replace the battery.
 - Environmental interference can affect range. Try operating in a different location.
- **Key Blade Not Working:**
 - Ensure the key blade was cut accurately by a professional locksmith.
 - The key blade is for mechanical entry and ignition, not remote functions.

If these steps do not resolve the issue, contact a professional locksmith or the USARemote customer support for further assistance.

8. SPECIFICATIONS

Brand	USARemote
Model Number	N5F-S0084A
Manufacturer Part Number	h-n5f-3btn
OEM Part Number	35111-SVA-305
Product Dimensions	2"L x 1.25"W
Item Weight	1 ounces
Material	Plastic
Number of Buttons	3
UPC	688946484476

9. SUPPORT AND RETURNS

USARemote is committed to providing reliable products. If you encounter any issues or have questions regarding your key fob, please refer to the following:

Customer Support:

For technical assistance or inquiries, please visit the [USARemote Store on Amazon](#) or contact their customer service directly through your purchase platform.

Return Policy:

USARemote offers a hassle-free return policy in case the item does not work as expected. Returns can typically be initiated through the order section of your purchase platform within the specified return period (e.g., 30 days from receipt). Please consult the specific return policy details provided at the time of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question