

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Lexon](#) /
- › [Lexon Slide Clock LR141W7 User Manual](#)

## Lexon LR141W7

### Lexon Slide Clock

MODEL: LR141W7

#### Product Overview

---

The Lexon Slide Clock is a compact and intuitive digital alarm clock designed for portability and ease of use. It features a multi-function display showing time, alarm time, date, and indoor temperature. Its unique sliding mechanism allows for easy activation and deactivation of the alarm, while a touch-sensitive top surface controls the backlight and snooze function. The clock is equipped with a retractable stand for convenient placement.



Figure 1: Front view of the Lexon Slide Clock (Beige model) displaying current time, date, and temperature.

## Setup

---

1. **Battery Installation:** The Lexon Slide Clock requires batteries for operation. Locate the battery compartment on the rear of the device. Insert the required batteries, ensuring correct polarity (+/-).
2. **Initial Power-On:** Once batteries are installed, the display should illuminate, showing default time settings.
3. **Using the Retractable Stand:** A retractable stand is located on the back of the clock. Gently pull it out to position the clock upright on a flat surface. Push it back in for compact storage or travel.



Figure 2: Rear view with the retractable stand extended.

## Operating Instructions

---

The Lexon Slide Clock features intuitive controls located on the rear of the device and a touch-sensitive top surface.

### Setting Time and Date

1. Locate the **SET**, **+HR**, and **+MIN** buttons on the back of the clock.



Figure 3: Rear view showing control buttons.

2. Press the **SET** button once to enter time setting mode. The hour digits will flash.
3. Use the **+HR** button to adjust the hour.
4. Press **SET** again to move to minute setting. The minute digits will flash.
5. Use the **+MIN** button to adjust the minutes.
6. Continue pressing **SET** to cycle through setting the date (month and day). Use **+HR** and **+MIN** to adjust.
7. Press **SET** one last time to exit setting mode.

### Setting and Activating the Alarm

1. To set the alarm time, press and hold the **SET** button until the alarm time digits (usually smaller, below the main time) begin to flash.
2. Use the **+HR** and **+MIN** buttons to set your desired alarm time.
3. Press **SET** to confirm the alarm time.
4. To activate or deactivate the alarm, slide the screen of the clock to the right (to activate) or left (to deactivate). When activated, an alarm icon (e.g., "ALM") will appear on the display.



Figure 4: Display showing activated alarm time.

## Snooze and Backlight Function

- **Snooze:** When the alarm sounds, gently tap the top surface of the clock to activate the snooze function. The alarm will pause and sound again after a short interval (typically 5-10 minutes).
- **Backlight:** Tap the top surface of the clock to briefly illuminate the display backlight for better visibility in low light conditions.

## Maintenance

- **Cleaning:** Wipe the clock's surface with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or display.
- **Battery Replacement:** Replace batteries when the display dims or functions become erratic. Always use the recommended battery type. Dispose of old batteries responsibly.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage.

## Troubleshooting

| Problem                    | Possible Cause  | Solution  |
|----------------------------|---|---|
| Display is blank or dim.   | Low or dead batteries; incorrect battery installation.  | Replace batteries with new ones, ensuring correct polarity.   |
| Alarm does not sound.      | Alarm is not activated; alarm volume is too low (if adjustable, though not specified for this model); incorrect alarm time set. | Ensure the screen is slid to the "ON" position for the alarm. Verify the alarm time is set correctly. |
| Buttons are unresponsive.  | Temporary software glitch; very low batteries.  | Remove and reinsert batteries to reset the device. Replace batteries if they are old.                 |
| Time or date is incorrect. | Time/date was not set correctly; accidental button press.   | Follow the "Setting Time and Date" instructions to re-adjust.   |

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

## Specifications

| Feature                | Detail   |
|------------------------|--|
| Brand                  | Lexon  |
| Model Number           | LR141W7  |
| Color                  | Beige  |
| Dimensions (L x W x H) | 8.4 x 5.3 x 2.3 cm (3.3 x 2.1 x 0.9 inches)  |
| Weight                 | 90 grams (3.17 ounces)   |
| Material               | Plastic (Acrylonitrile Butadiene Styrene)  |
| Display Type           | Digital (Electroluminescent LCD)   |
| Special Features       | Multi-function display (Time, Alarm, Date, Temperature), Sliding alarm activation, Snooze, Backlight, Retractable stand. |
| Power Source           | Batteries (type not specified in input, assuming common AAA/AA)  |

## Warranty and Support

For warranty information and customer support, please refer to the official Lexon website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

You can visit the official Lexon store for more information: [Lexon Store](#)

### Related Documents - LR141W7



[Lexon Flip Classic Mint LR157 - Digital Alarm Clock User Manual](#)

Comprehensive user guide for the Lexon Flip Classic Mint LR157 digital alarm clock, covering setup, operation, features, specifications, and safety information.



[Lexon Flip Premium LR152: User Manual and Features](#)

Comprehensive user guide for the Lexon Flip Premium LR152 digital alarm clock, covering setup, features, alarm settings, and safety information.



[Lexon Flip+ Travel LR151 Digital Alarm Clock User Guide](#)

User guide for the Lexon Flip+ Travel LR151 digital alarm clock, featuring time setting, alarm functions, snooze, backlight, travel lock, and technical specifications. This compact travel clock offers a reversible design with ON/OFF faces and a touch-sensitive light.



[Lexon Flip Plus LR150: Radio Controlled Alarm Clock User Guide](#)

This guide provides instructions for the Lexon Flip Plus LR150 alarm clock, a modern desk clock featuring a reversible LCD display, automatic time setting via Radio Controlled Clock (RCC) technology, and essential alarm functions. Learn how to set up, operate, and maintain your Lexon Flip clock.



[LEXON Flip Premium LR152 User Guide: Features, Setup, and Operation](#)

Explore the LEXON Flip Premium LR152 digital alarm clock. This user guide details its dual-sided flip design, noise-activated display, alarm settings, night mode, and USB-C charging. Learn how to set up and operate this versatile bedside companion.



LR 154  
MINUT

Design by Manuela Simonelli & Andrea Guglio

[Lexon Minut LR154 Alarm Clock User Manual](#)

User manual for the Lexon Minut LR154 alarm clock, detailing setup, operation, charging, and safety information. Features include time and alarm setting, brightness adjustment, and a night mode.