

[Manuals.plus](#) /

› [Fastrack](#) /

› Fastrack Digital Watch NK38033SP03 User Manual

Fastrack NK38033SP03

Fastrack Digital Watch NK38033SP03 User Manual

Model: NK38033SP03

[Introduction](#) [Setup](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)
[Warranty & Support](#)

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Fastrack Digital Grey Dial Silicone Strap Watch, model NK38033SP03. Please read this manual carefully to ensure proper use and longevity of your watch.



Image: Fastrack Digital Grey Dial Silicone Strap Watch, model NK38033SP03. This image displays the watch face with its digital display, the grey silicone strap, and the overall design.

SETUP

1. Initial Power On

Your watch comes with a pre-installed battery. If the display is not active, press any button to activate it. The watch is ready for initial setup upon activation.

2. Setting Time and Date

1. Locate the mode button (usually labeled 'M' or similar) and the adjustment button (usually labeled 'A' or similar). Refer to the watch diagram for exact button locations.
2. Press the mode button repeatedly until the time setting mode is displayed (e.g., flashing hours).
3. Use the adjustment button to change the flashing value (hours, minutes, date, month, year).

4. Press the mode button again to move to the next setting parameter.
5. Once all settings are adjusted, press the mode button one last time to exit the setting mode.

3. Strap Adjustment

The silicone strap is designed for comfort and durability. Adjust the buckle to achieve a snug yet comfortable fit on your wrist. Ensure the watch is not too tight to avoid discomfort or too loose to prevent inaccurate readings (if applicable) or movement.

OPERATING INSTRUCTIONS

1. Basic Time Display

In normal mode, the watch displays the current time (hours, minutes, seconds) and often the date. The digital display ensures clear readability.

2. Mode Navigation

Your Fastrack digital watch may include various functions accessible via the mode button. Common modes include:

- **Time Mode:** Displays current time and date.
- **Alarm Mode:** Allows setting and activating an alarm.
- **Stopwatch Mode:** For measuring elapsed time.
- **Light Function:** Press the light button (if available) to illuminate the display in low-light conditions.

Press the mode button ('M') to cycle through available functions. Use the adjustment button ('A') to start/stop functions or adjust settings within a specific mode.

3. Water Resistance

This watch has a water resistance rating of 5 ATM (50 meters). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is *not* recommended for swimming, diving, or prolonged water activities. Do not operate buttons while the watch is wet or submerged.

MAINTENANCE

1. Cleaning Your Watch

- Wipe the watch case and strap with a soft, damp cloth.
- For silicone straps, mild soap and water can be used, then rinse thoroughly and dry.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or strap material.

2. Battery Replacement

The watch uses a product-specific battery. When the display dims or stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

3. Storage

Store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields when not in use. This helps preserve battery life and prevents material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or depleted battery.	Replace the battery. Contact a service center if issues persist.
Time is incorrect.	Time settings were not saved or accidentally changed.	Re-set the time and date according to the "Setting Time and Date" section.
Buttons are unresponsive.	Watch may be in a locked mode or internal malfunction.	Try pressing all buttons to see if it responds. If not, contact customer support.
Condensation inside the watch.	Exposure to extreme temperature changes or compromised water resistance.	Stop using the watch immediately and take it to a qualified technician for inspection and repair.

SPECIFICATIONS

Feature	Detail
Brand	Fastrack
Model Number	NK38033SP03
Display Type	Digital
Movement Type	Quartz
Case Material	Stainless Steel
Case Diameter	38 mm
Case Thickness	13.55 mm
Band Material Type	Silicone
Band Colour	Grey
Dial Colour	Grey
Water Resistance Depth	50 Metres (5 ATM)
Clasp Type	Tang Buckle
Item Weight	160 g
Batteries	1 Product Specific battery (included)

WARRANTY & SUPPORT

Warranty Information

Your Fastrack Digital Watch NK38033SP03 comes with a**24 Months Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your purchase receipt as proof of purchase for warranty claims.

The warranty does not cover:

- Damage resulting from improper use, accidents, or unauthorized repairs.
- Normal wear and tear of the strap, case, or crystal.
- Battery replacement.
- Water damage if the watch was exposed to conditions beyond its specified water resistance rating or if buttons were operated underwater.

Customer Support

For warranty claims, service, or technical assistance, please contact Fastrack customer support. You can typically find contact information on the official Fastrack website or through your retailer.

For more information, visit the [Fastrack Store on Amazon](#).

© 2023 Fastrack. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question