

Manuals.plus /

› Panasonic /

› Panasonic ER9500 Body Trimmer Replacement Blade Instruction Manual

Panasonic ER9500

Panasonic ER9500 Body Trimmer Replacement Blade Instruction Manual

INTRODUCTION

This manual provides essential instructions for the proper installation, use, and maintenance of your Panasonic ER9500 replacement blade. This blade is designed to restore the cutting performance of compatible Panasonic body trimmers, ensuring a smooth and efficient grooming experience. Please read these instructions carefully before replacing the blade.

PRODUCT OVERVIEW

The Panasonic ER9500 is a genuine replacement blade for select Panasonic body trimmers. It features a durable stainless steel construction, engineered for precise and comfortable body hair trimming. Regular replacement of your trimmer blade ensures optimal performance and hygiene.

- **Stainless Steel Blade:** Crafted from high-quality stainless steel for lasting sharpness and durability.
- **Body Trimmer Compatibility:** Specifically designed for trimming and shaping body hair.
- **Lightweight Design:** Weighs approximately 0.17 ounces (0.0047 kg) for easy handling.
- **Smooth Gliding:** Engineered for fast and effortless trimming across various body areas.
- **Comprehensive Trimming:** Suitable for use on arms, legs, chest, back, and other body areas.

COMPATIBILITY

The Panasonic ER9500 replacement blade is compatible with the following Panasonic body trimmer models:

- ER-GK60
- ER-GD60
- ER-GK70

Always verify your trimmer's model number to ensure proper fit and function.

SAFETY INFORMATION

WARNING: To reduce the risk of injury, electric shock, fire, or damage to the product, always observe the following safety precautions:

- The blade is thin and precise. Avoid strong pressure or impact, as this may cause damage.
- Always apply oil to the blade after each use to prevent friction and seizing.
- After use, remove any hair from the blade part using the brush provided with the product. Store the blade properly.
- May cause skin irritation if not used correctly or if the blade is dull/damaged.
- Avoid contact with eyes.
- Keep the blade away from water sources unless the trimmer itself is designed for wet use and the blade is properly attached.
- Always follow recommended cleaning and maintenance procedures outlined in your trimmer's main instruction manual.

BLADE INSTALLATION AND REPLACEMENT

Follow these steps to safely replace the blade on your compatible Panasonic body trimmer:

1. Removing the Old Blade:

Hold the trimmer firmly. Press the blade release button or push the blade forward until it detaches from the trimmer body. Refer to your trimmer's original manual for specific blade removal instructions if needed.

2. Installing the New Blade:

Align the new ER9500 replacement blade with the blade attachment part of the trimmer. Gently push the blade into place until it clicks securely. Ensure the blade is firmly attached and does not wobble.

Panasonic

刃の交換のめやす


3年

適用品番
ER-GD60・GK60・GK70


ご注意事項

1. ご使用商品の取扱説明書をお読みのうえ、正しくお使いください。
2. 刃は薄く精密なため、強く押さえたり衝撃を与えないでください。
3. ご使用前後は刃の摩耗・焼きつきを防ぐため注油をしてください。
4. ご使用後は、商品ご購入時に付属のブラシで刃の部分についた毛を払い落とし、注油をして保管してください。

取りはずしかた

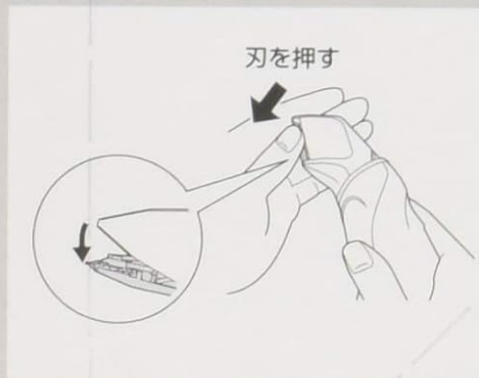

取りつけかた

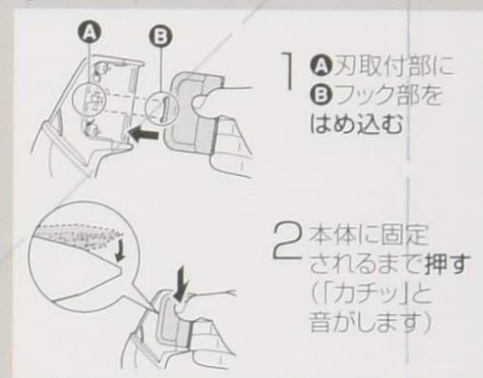

台紙



パック

PET

パナソニック株式会社

〒525-8555 滋賀県草津市野路東2丁目3番1-2号

ER9500



T4549077922304

日本製

Y.No3 B680

Image: Visual guide for blade removal and installation. The left side illustrates pressing the blade to detach it, and the right side shows aligning and pushing the new blade until it clicks into the main unit.

3. Initial Check:

After installation, gently test the blade's movement and ensure it is securely fastened before turning on the trimmer. It should feel stable and not loose.



Image: The Panasonic ER9500 replacement blade, demonstrating its size and design.

OPERATING INSTRUCTIONS

Once the ER9500 replacement blade is securely installed on your Panasonic body trimmer, you can resume normal operation. For detailed instructions on using your specific trimmer model, including attachment combs and wet/dry operation, please refer to your trimmer's original instruction manual. General tips for effective trimming:

- Ensure your skin is clean and dry (or wet, if your trimmer supports wet use) before trimming.
- Move the trimmer slowly and steadily against the direction of hair growth for best results.
- Use light pressure to avoid skin irritation.
- For sensitive areas, use caution and consider using a guard or comb attachment.

Your browser does not support the video tag.

Video: This video demonstrates the general appearance and features of a body trimmer, providing context for the ER9500 blade's function.

Your browser does not support the video tag.

Video: A short demonstration of a body hair trimmer in use, showing its effectiveness on body hair.

Your browser does not support the video tag.

Video: This video illustrates the process of trimming leg hair using a body trimmer, highlighting smooth operation.

MAINTENANCE AND CLEANING

Proper maintenance extends the life of your ER9500 blade and ensures hygienic use:

1. After Each Use:

Turn off the trimmer and detach the blade. Use the cleaning brush (typically provided with your trimmer) to remove any trapped hair from the blade and the trimmer head. Rinse the blade under running water if your trimmer is waterproof and designed for wet cleaning.

2. Lubrication:

After cleaning and drying the blade, apply a drop of lubricating oil (usually included with your trimmer or available separately) to the moving parts of the blade. This reduces friction, maintains sharpness, and prevents rust. Run the trimmer for a few seconds to distribute the oil.

3. Storage:

Store the blade and trimmer in a clean, dry place, away from direct sunlight and high humidity.

Ensure the blade is protected from impacts to prevent damage to the delicate cutting edges.

TROUBLESHOOTING

If you encounter issues with your ER9500 replacement blade, consider the following:

Problem	Possible Cause	Solution
Blade not cutting effectively / pulling hair	Blade is dull or clogged with hair. Insufficient lubrication.	Clean the blade thoroughly and apply lubricating oil. If the problem persists, the blade may need replacement.
Skin irritation or nicks	Blade is dull, damaged, or used with excessive pressure. Incorrect trimming technique.	Ensure the blade is sharp and undamaged. Use light pressure and trim slowly. Replace the blade if damaged.
Blade not attaching securely	Incorrect alignment during installation. Debris in the attachment mechanism.	Remove the blade and re-align carefully, ensuring it clicks into place. Clean any debris from the trimmer head.

If these steps do not resolve the issue, please contact Panasonic customer support.

SPECIFICATIONS

- **Model Number:** ER9500
- **Material:** Stainless Steel
- **Product Dimensions:** Approximately 0.43 x 3.11 x 4.09 inches
- **Item Weight:** Approximately 0.17 ounces (0.0047 kg)
- **Recommended Use:** Body Trimming
- **Color:** White Black (referring to the blade unit's components)
- **UPC:** 4549077922304

WARRANTY AND SUPPORT

For information regarding the warranty of your Panasonic ER9500 replacement blade or for further technical assistance, please refer to the warranty documentation included with your original Panasonic body trimmer or visit the official Panasonic support website. You can also contact Panasonic customer service directly for support.

Panasonic Official Website: www.panasonic.com