

[Manuals.plus](#) /

› [Lavatools](#) /

› Lavatools KT1 Digital Kitchen Timer & Stopwatch User Manual

Lavatools KT1

Lavatools KT1 Digital Kitchen Timer & Stopwatch User Manual

INTRODUCTION

Thank you for choosing the Lavatools KT1 Digital Kitchen Timer & Stopwatch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your device. Please read this manual thoroughly before use to ensure optimal performance and longevity of your timer.

PRODUCT FEATURES

- Ultra large 3-inch display with easy-to-read bold digits.
- Simple count-down timer and count-up stopwatch operation.
- Maximum setting of 99 minutes and 59 seconds.
- Super loud beeper alarm ensures you hear it from another room.
- Integrated magnet for attaching to metal surfaces.
- Built-in kickstand for tabletop use.
- Hang hole for wall mounting.



Image: Front view of the Lavatools KT1 Digital Kitchen Timer, displaying 4 minutes and 59 seconds.

SETUP

Battery Installation

The Lavatools KT1 timer requires one AAA battery (included). To install or replace the battery:

1. Locate the battery compartment cover on the back of the timer.
2. Slide the cover downwards to open the compartment.
3. Insert one AAA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

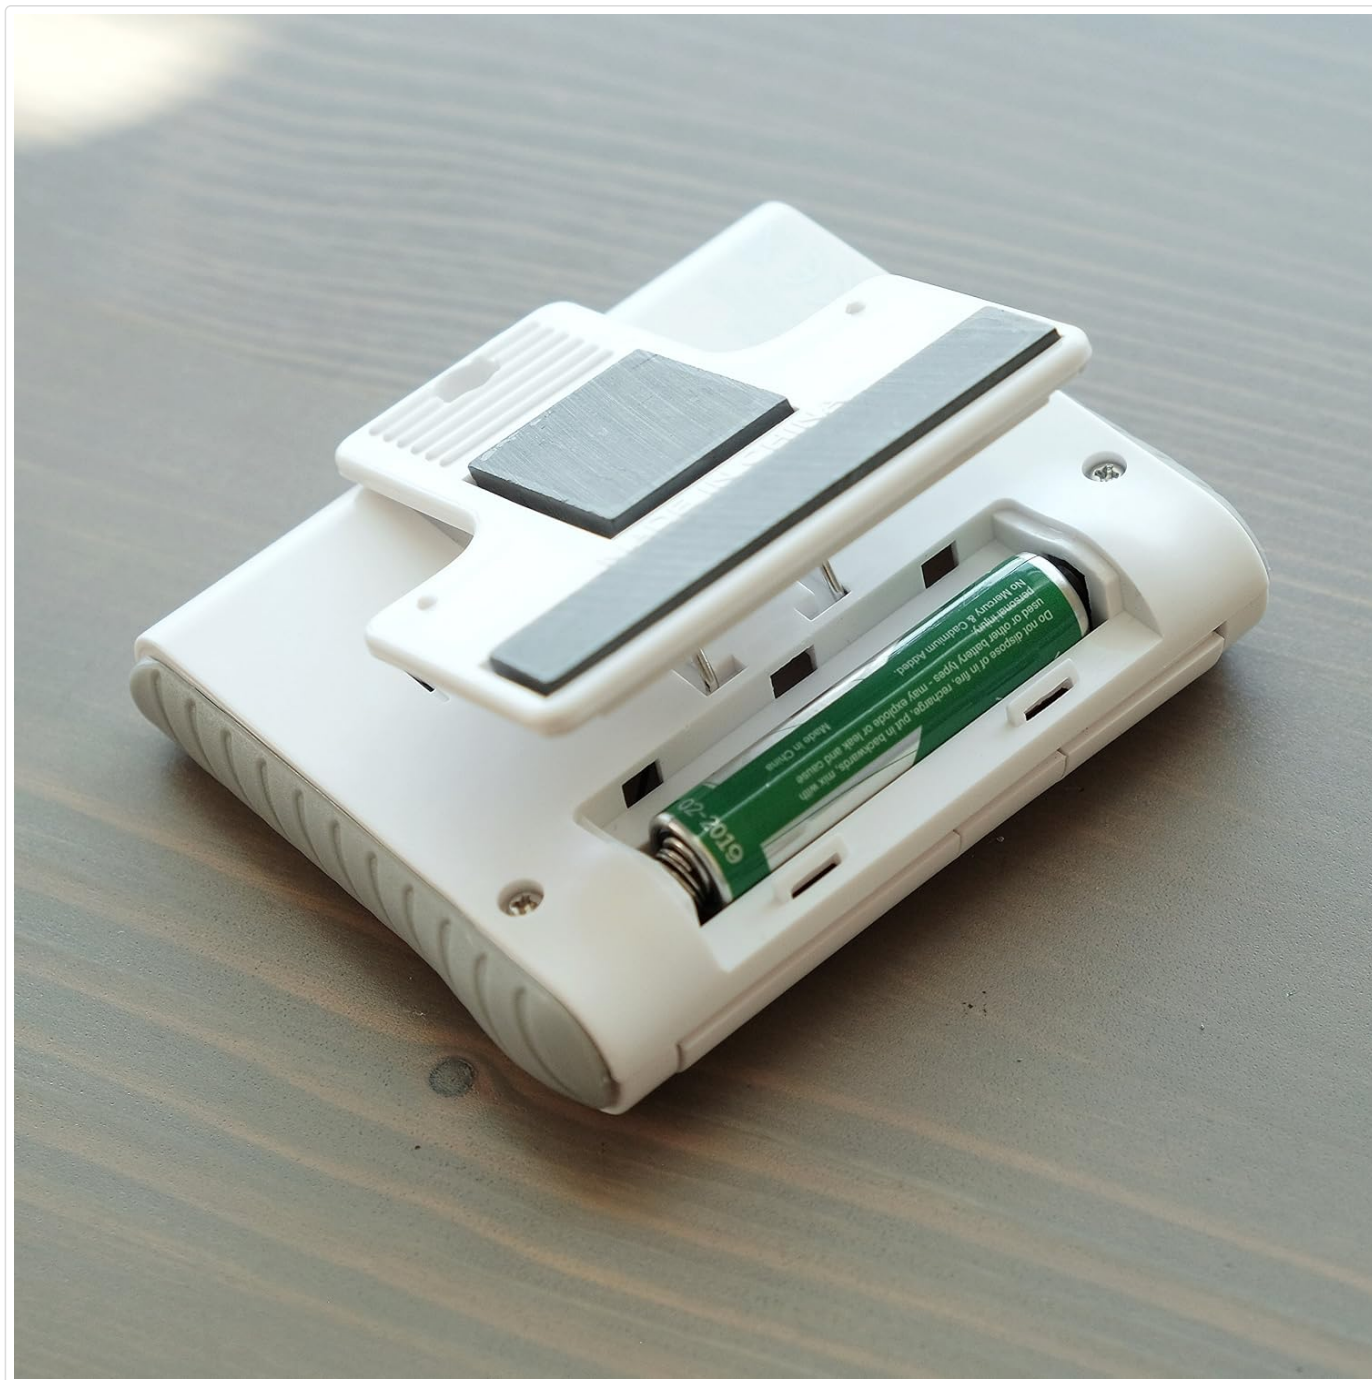


Image: Rear view of the timer showing the open battery compartment with a AAA battery inserted.

OPERATING INSTRUCTIONS

Timer Mode (Countdown)

To set and start a countdown timer:

1. Press the **M** button to set the desired minutes. Hold to advance rapidly.
2. Press the **S** button to set the desired seconds. Hold to advance rapidly.
3. To clear the current setting, press both **M** and **S** buttons simultaneously. The display will show 00:00.
4. Press the **START/STOP** button to begin the countdown.
5. To pause the countdown, press **START/STOP** again. Press it once more to resume.
6. When the timer reaches 00:00, a loud alarm will sound for 60 seconds. Press any button to stop the alarm.

Stopwatch Mode (Count-up)

To use the stopwatch function:

1. Ensure the display shows 00:00. If not, press **M** and **S** simultaneously to clear any previous timer setting.
2. Press the **START/STOP** button to begin counting up.
3. To pause the stopwatch, press **START/STOP** again. Press it once more to resume.
4. To reset the stopwatch to 00:00, pause the count-up and then press **M** and **S** simultaneously.

Alarm Function

The KT1 features a super loud beeper alarm designed to be heard even from another room. The alarm will sound for 60 seconds when the countdown timer reaches zero. Press any button to silence the alarm.

MOUNTING OPTIONS

The Lavatools KT1 offers versatile mounting options for convenience:

- **Magnetic Back:** Two strong magnets on the back allow you to attach the timer securely to metal surfaces like refrigerators, ovens, or whiteboards.
- **Kickstand:** A foldable kickstand is integrated into the back, allowing the timer to stand upright on any flat surface, such as a countertop or desk.
- **Hang Hole:** A small hole is provided on the kickstand for hanging the timer on a hook or nail.



Image: The timer attached magnetically to a metal surface.



Image: The timer standing upright on a wooden countertop using its integrated kickstand.



Image: Side profile of the timer, illustrating the kickstand in its extended position.

MAINTENANCE

To ensure the longevity and proper functioning of your Lavatools KT1 timer:

- **Cleaning:** Wipe the timer with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the timer in a dry place at room temperature when not in use.
- **Battery Replacement:** Replace the AAA battery when the display becomes dim or the timer stops functioning correctly. Always dispose of used batteries responsibly.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Timer display is blank or dim.	Check battery installation. Replace with a new AAA battery if necessary.
Alarm is not sounding or is too quiet.	Ensure the timer is not covered or obstructed. Verify battery strength. The alarm volume is fixed and cannot be adjusted.
Timer does not start or stop.	Ensure a time is set before pressing START/STOP for countdown. For stopwatch, ensure display is 00:00. Replace battery if issue persists.
Buttons are unresponsive.	Remove and reinsert the battery. If the issue continues, replace the battery.

SPECIFICATIONS

Feature	Detail
Model Number	KT1
Material	Polycarbonate
Screen Size	3 Inches
Item Weight	30 Grams
Power Source	1 x AAA Battery (included)
Max Timer Setting	99 Minutes, 59 Seconds
Mounting Options	Magnet, Kickstand, Hang Hole
UPC	849256000408

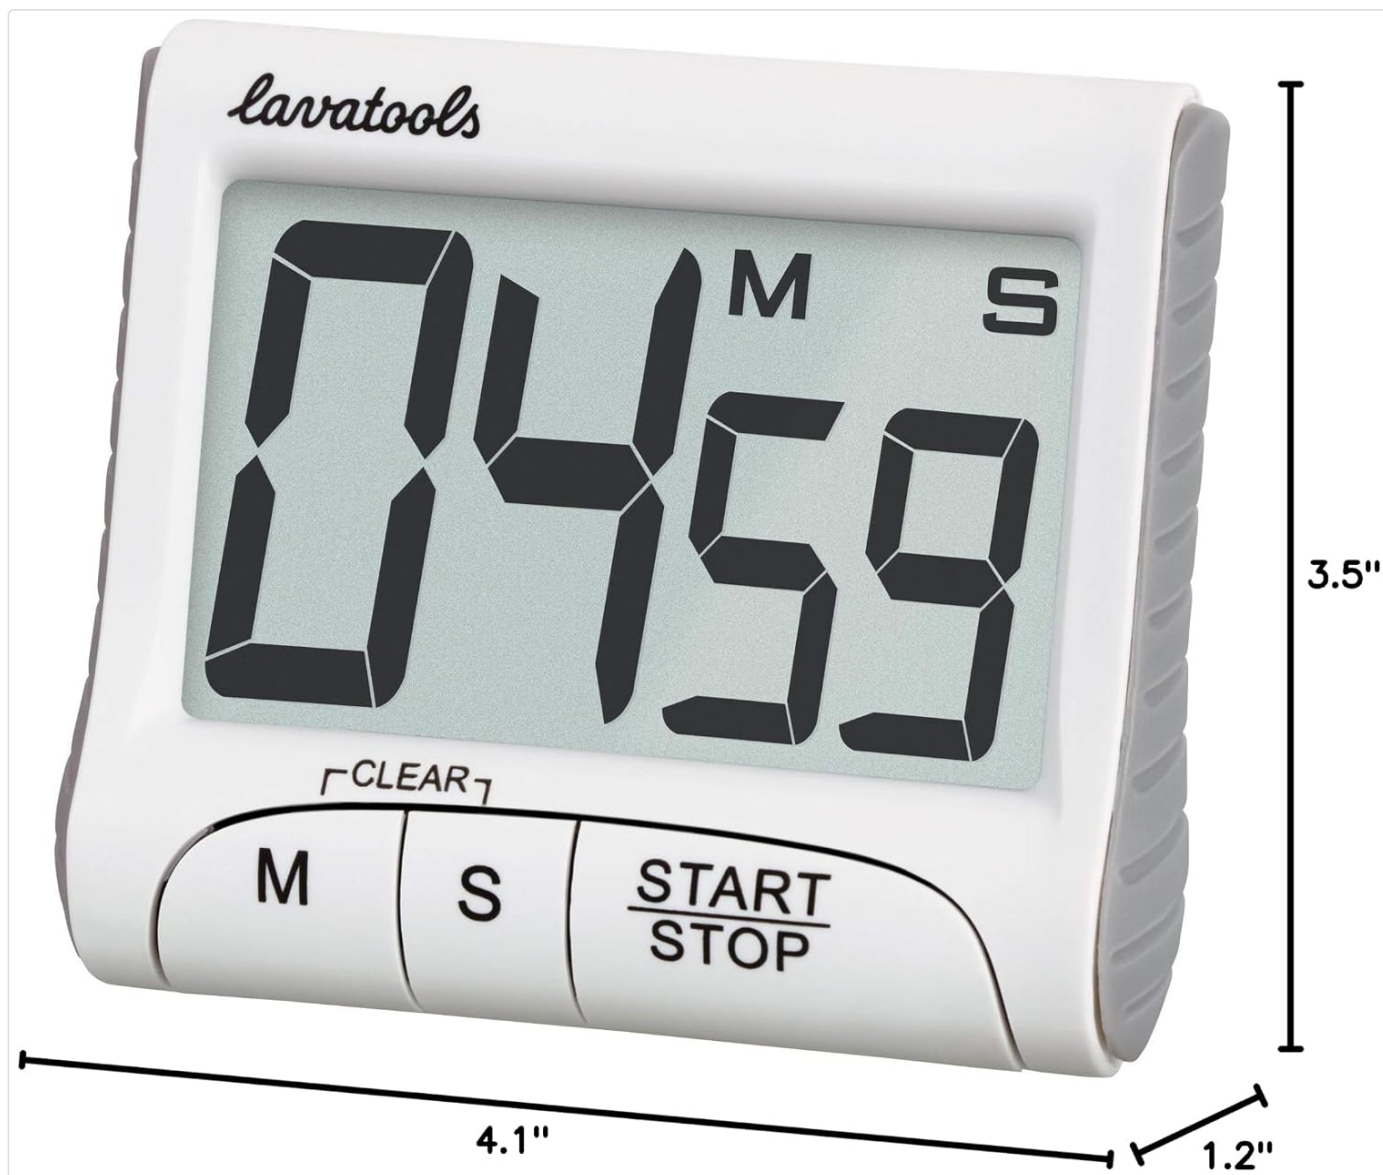


Image: The timer with its physical dimensions indicated.



Image: The timer highlighting its 3-inch display size.

WARRANTY INFORMATION

The Lavatools KT1 Digital Kitchen Timer & Stopwatch is covered by a 3-year limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, unauthorized modification, or improper maintenance. For warranty claims or detailed information, please refer to the manufacturer's official website or contact customer support.

SUPPORT

For further assistance, technical support, or inquiries regarding your Lavatools KT1 timer, please visit the official Lavatools website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question