

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [AEG](#) /

> [AEG Electrolux Dryer Hinge Installation and Maintenance Guide](#)

AEG B06XSF2J1R

AEG Electrolux Dryer Hinge Installation and Maintenance Guide

Model: B06XSF2J1R

1. PRODUCT OVERVIEW

This manual provides essential information for the installation, proper use, and maintenance of your AEG Electrolux dryer hinge. This component is a crucial replacement part designed to restore the functionality of your dryer door, ensuring it opens and closes smoothly and securely.

The hinge is compatible with various Electrolux dryer models, serving as a direct replacement for worn or damaged original hinges. Proper installation and care will extend the lifespan of your appliance.



Image 1.1: Top view of the AEG Electrolux dryer hinge. This image shows the general shape and mounting points of the replacement part.

2. SAFETY INFORMATION

Before attempting any installation or repair, please read and understand the following safety precautions:

- **Disconnect Power:** Always unplug the dryer from the electrical outlet before beginning any

work to prevent electric shock.

- **Wear Protective Gear:** Use appropriate personal protective equipment, such as gloves and safety glasses, to prevent injury.
- **Handle with Care:** The dryer door can be heavy. Exercise caution when removing or reattaching it to avoid injury or damage.
- **Consult Professional:** If you are unsure about any step or uncomfortable performing the repair, consult a qualified appliance technician.
- **Original Parts:** Use only genuine or approved replacement parts to ensure proper fit and safe operation.

3. INSTALLATION GUIDE

3.1. Tools Required

- Screwdriver (Phillips or Flathead, depending on your dryer model)
- Pliers (optional, for stubborn screws)
- Work gloves

3.2. Step-by-Step Installation

1. **Prepare the Dryer:** Ensure the dryer is unplugged from the power source. Move the dryer away from the wall if necessary to access the door area comfortably.
2. **Remove the Dryer Door:**
 - Open the dryer door fully.
 - Locate the screws securing the door hinges to the dryer cabinet.
 - While supporting the door, carefully remove these screws. It is advisable to have a second person assist in holding the door to prevent it from falling.
 - Once the screws are removed, lift the door off the dryer and place it on a clean, flat, protected surface.
3. **Remove the Old Hinge:**
 - On the removed dryer door, locate the damaged hinge.
 - Unscrew the fasteners that secure the old hinge to the dryer door panel.
 - Carefully remove the old hinge.
4. **Install the New Hinge:**
 - Position the new AEG Electrolux dryer hinge (Model B06XSF2J1R) in the same location where the old hinge was removed.
 - Align the screw holes on the hinge with the corresponding holes on the dryer door.
 - Secure the new hinge using the original screws. Do not overtighten, but ensure it is firmly attached.



Image 3.1: Illustration showing the hinge location on a dryer door. The red circle indicates the area where the hinge is installed.

5. Reattach the Dryer Door:

- With assistance, carefully align the new hinge on the door with the mounting points on the dryer cabinet.
 - Insert and secure the screws that attach the door hinges to the dryer cabinet. Ensure all screws are tightened securely.
6. **Test the Door:** Gently open and close the dryer door several times to ensure it operates smoothly and latches correctly.
7. **Restore Power:** Plug the dryer back into the electrical outlet.

4. OPERATING CONSIDERATIONS

While the hinge itself does not have operational controls, proper handling of the dryer door is essential for its longevity:

- **Gentle Operation:** Avoid slamming the dryer door. Always open and close it gently to prevent undue stress on the hinges and latch mechanism.
- **Do Not Overload:** Ensure the dryer is not overloaded, as this can sometimes put strain on the door and its components if items snag.
- **Check for Obstructions:** Before closing the door, ensure no clothing or other items are caught in the door frame, which could prevent proper closure and damage the hinge.

5. MAINTENANCE

Regular maintenance can help ensure the smooth operation and extended life of your dryer hinge:

- **Periodic Inspection:** Periodically inspect the hinges for any signs of wear, rust, or looseness. Check the screws to ensure they are tight.
- **Cleaning:** Keep the hinge area clean from lint and debris. Use a soft, damp cloth to wipe down the hinges if necessary. Avoid harsh chemical cleaners.
- **Lubrication (Optional):** If the door begins to squeak, a small amount of appliance-safe lubricant (e.g., silicone-based spray) can be applied to the hinge pivot points. Wipe away any excess.

6. TROUBLESHOOTING

If you encounter issues after installing the new hinge, consider the following:

Problem	Possible Cause	Solution
Door does not close properly.	Hinge misalignment or loose screws.	Check hinge alignment and tighten all mounting screws. Ensure no obstructions are present.
Door squeaks when opening/closing.	Lack of lubrication or minor friction.	Apply a small amount of appliance-safe lubricant to the hinge pivot points.
Hinge feels loose.	Mounting screws are not tight enough.	Retighten all screws securing the hinge to both the door and the dryer cabinet.

If troubleshooting steps do not resolve the issue, it may indicate a problem with another component of the dryer door or cabinet, or further professional assistance may be required.

7. SPECIFICATIONS

Key specifications for the AEG Electrolux Dryer Hinge (Model B06XSF2J1R):

- **Part Type:** Dryer Door Hinge
- **Compatibility:** Designed for various Electrolux dryer models.
- **Material:** Durable metal alloy (inferred from appearance).
- **Dimensions:**
 - Length: Approximately 17.1 cm (6.7 inches)
 - Width: Approximately 2.3 cm (0.9 inches)
- **Model Number:** B06XSF2J1R



Image 7.1: The dryer hinge with key dimensions indicated: approximately 17.1 cm in length and 2.3 cm in width.

8. WARRANTY AND SUPPORT

For specific warranty information regarding this replacement part, please refer to the documentation provided at the time of purchase or contact the retailer/manufacturer directly. Support for installation or troubleshooting beyond this guide may be available through authorized service centers or the AEG customer support channels.

For further assistance, please visit the [AEG Store on Amazon](#).