

[Manuals.plus](#) /

› [Nordic Ware](#) /

› Nordic Ware Steam Cooker Instruction Manual, Model 68600

Nordic Ware 68600

Nordic Ware Steam Cooker Instruction Manual

Model: 68600 | Brand: Nordic Ware

1. INTRODUCTION

The Nordic Ware Steam Cooker is designed to efficiently steam a variety of foods in your microwave, ensuring tender results while retaining moisture. Its innovative design includes a removable interior tray to elevate food above liquids and a lid with an adjustable valve for steam release. This product is crafted from high-heat, BPA-free, and melamine-free plastic, proudly made in the USA.




The Nordic Ware Steam Cooker features a vibrant red base and a transparent lid with an adjustable red steam vent, designed for microwave use.

2. COMPONENTS

Your Nordic Ware Steam Cooker consists of three main parts:

- **Base:** The main container that holds water and the steaming rack.
- **Removable Steaming Rack:** An interior tray designed to elevate food above the water, allowing steam to circulate.
- **Lid:** Features an adjustable valve to control steam release during cooking.

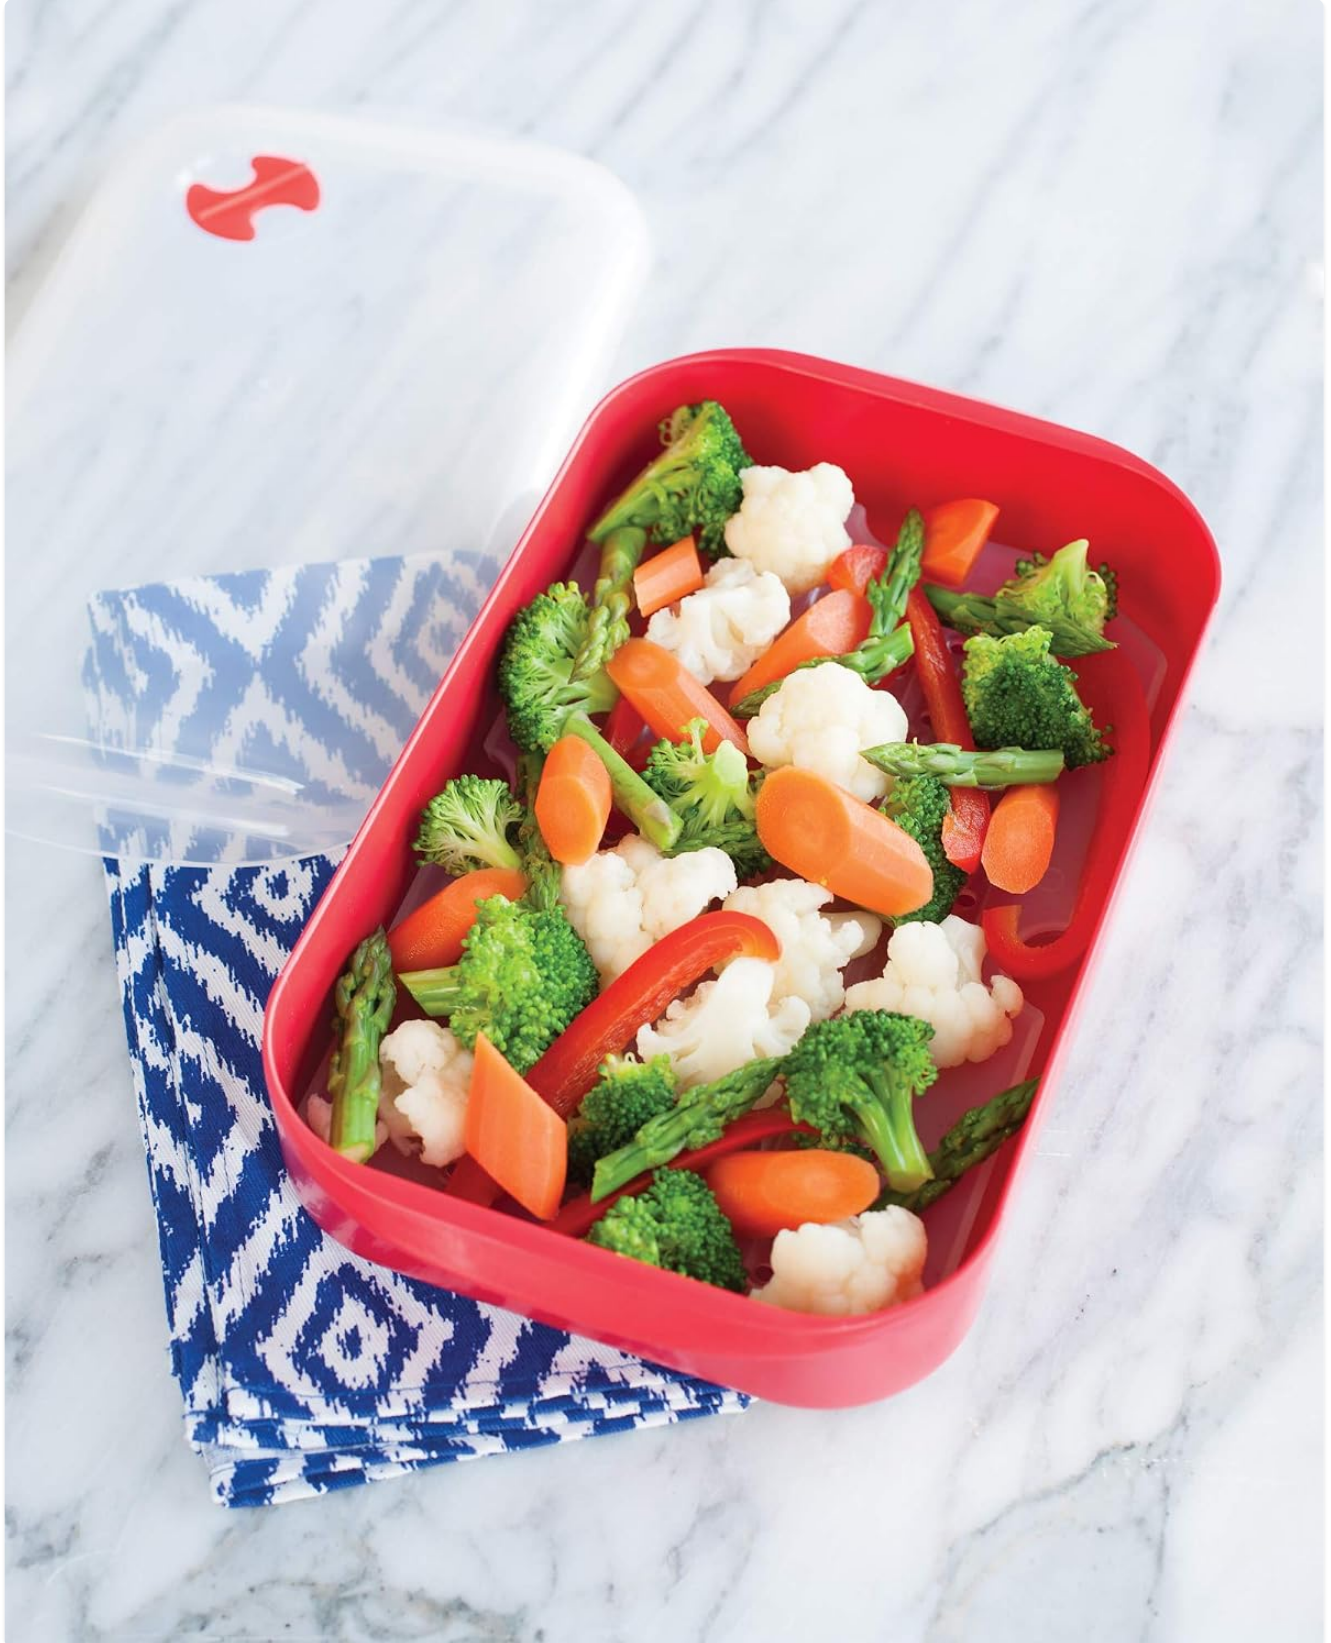

The Nordic Ware Steam Cooker is displayed with its lid removed, revealing perfectly steamed vegetables such as broccoli, carrots, and asparagus inside the red base.

3. SETUP AND INITIAL USE

Before using your steam cooker for the first time, and after each subsequent use, wash and dry all components thoroughly. Refer to the 'Care and Maintenance' section for detailed cleaning instructions.

4. OPERATING INSTRUCTIONS

Follow these steps to steam your food using the Nordic Ware Steam Cooker:

1. **Add Water:** Pour approximately 1/4 cup of water into the steamer base. Ensure the water level is below the steaming rack.
2. **Place Food:** Position the removable steaming rack into the base. Place bite-sized vegetables, meats, or other foods onto the steaming rack.
3. **Secure Lid:** Cover the steamer with the lid and ensure it is properly seated. Close the adjustable vent on the lid.
4. **Microwave:** Place the assembled steamer into your microwave. Cook for 3-5 minutes, or until the food is tender. Cooking times may vary depending on your microwave's wattage and the type/quantity of food.
5. **Serve:** Carefully remove the steamer from the microwave. Open the vent to release steam before removing the lid. Serve immediately.



This image shows the Nordic Ware Steam Cooker containing a colorful assortment of freshly steamed vegetables, including broccoli, carrots, and cauliflower, ready for serving.

5. CARE AND MAINTENANCE

- **Cleaning:** The Nordic Ware Steam Cooker is dishwasher safe. For best results, wash and dry thoroughly before initial use and after subsequent uses.
- **Storage:** Store in a dry place.
- **Avoid:** Do not use sharp metal utensils, as they may scratch the plastic.

6. SAFETY WARNINGS



- **Microwave Use Only:** This product is designed exclusively for microwave use. It is **not safe** for stovetop or oven use.
- **Hot Contents:** Always handle the steam cooker with caution after microwaving, as the contents and the cooker itself will be hot. Use oven mitts or heat-resistant gloves if necessary.
- **Steam Release:** Be careful when opening the lid after cooking, as hot steam will escape. Direct steam away from your face and hands.

7. SPECIFICATIONS

Feature	Detail
Brand	Nordic Ware
Model Number	68600
Material	High-Heat Plastic (BPA-free, Melamine-free)
Color	Red
Product Dimensions	12"L x 6.75"W x 3.25"H
Item Weight	7.4 ounces (0.46 Pounds)
UPC	011172686008
Manufactured In	USA



MICROWAVABLE
BPA & MELAMINE
FREE PLASTIC

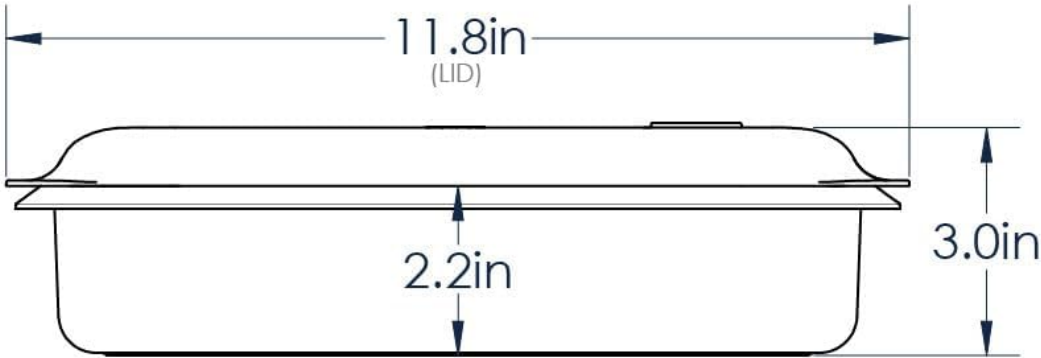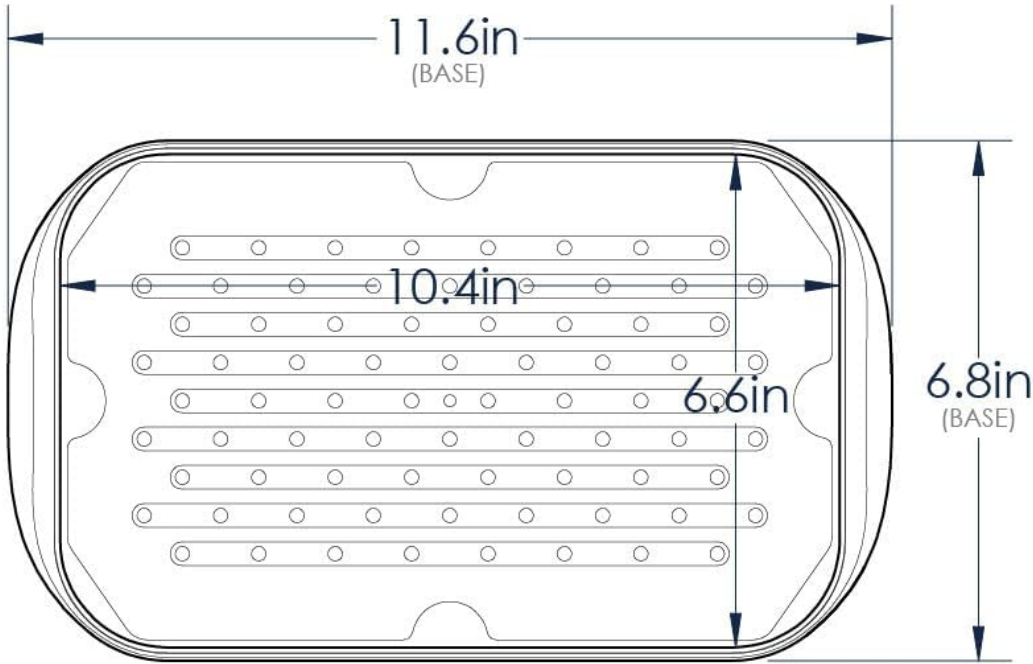

A technical diagram illustrating the precise dimensions of the Nordic Ware Steam Cooker, including length, width, and height measurements for both the base and the lid.

8. TROUBLESHOOTING

If you encounter any issues with your Nordic Ware Steam Cooker, please consider the following common points:

- **Food Not Steaming Properly:** Ensure adequate water (approx. 1/4 cup) is in the base and the lid's vent is closed during cooking. Microwave wattage can affect cooking times; adjust as needed.
- **Lid Not Sealing:** Check that the lid is correctly aligned and seated on the base.

9. WARRANTY AND SUPPORT

For specific warranty information or further assistance, please contact Nordic Ware customer support directly. Refer to the product packaging or the official Nordic Ware website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question