

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RMT-D197A Replacement Remote Control User Manual for Sony DVD Players

ECONTROLLY RMT-D197A

ECONTROLLY RMT-D197A Replacement Remote Control User Manual

Model: RMT-D197A

Brand: ECONTROLLY

INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY RMT-D197A replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of various Sony DVD player models. Please read this manual thoroughly before use to ensure proper operation and to maximize your experience.

SETUP

Battery Installation

The RMT-D197A remote control requires two (2) AAA batteries for operation. Batteries are not included and must be purchased separately. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Battery compartment with two AAA batteries installed. Ensure correct polarity.

Once batteries are installed, the remote control is ready for use. No programming or pairing is typically required for compatible Sony DVD players.

OPERATING INSTRUCTIONS

The RMT-D197A remote control provides full functionality for your compatible Sony DVD player. The layout is designed for intuitive use, mirroring the original remote's button configuration.



Figure 2: Front view of the RMT-D197A remote control.

Key Functions Overview

- **Power (I/O):** Turns the DVD player on or off.
- **Open/Close:** Opens or closes the disc tray.
- **TV Input:** Switches the TV input source (if programmed).

- **Volume (+/-):** Adjusts the volume (if programmed for TV control).
- **Number Buttons (0-9):** For direct track selection or menu navigation.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used for menu navigation and selection.
- **Play, Pause, Stop, Fast/Slow Play, Prev, Next, Replay, Advance:** Standard media playback controls.
- **Display:** Shows on-screen information.
- **Top Menu/Menu:** Accesses the disc's top menu or main menu.
- **Return:** Returns to the previous screen or menu.
- **Audio:** Changes audio tracks or modes.
- **Subtitle:** Toggles or selects subtitle options.
- **Setup:** Accesses the DVD player's setup menu.

COMPATIBLE MODELS

This ECONTROLLY RMT-D197A replacement remote control is compatible with the following Sony DVD player models:

- Sony DVP-SR210
- Sony DVP-SR201P
- Sony DVP-SR405P
- Sony DVP-SR510
- Sony DVP-SR510H

Functionality may vary slightly depending on the specific features of your DVD player model.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace the batteries with fresh AAA batteries.
 - Ensure there are no obstructions between the remote control and the DVD player's infrared sensor.
 - Confirm that the remote control is pointed directly at the DVD player.
- **Some buttons not working:**
 - This remote is specifically designed for DVD player functions. TV control functions (like TV Input,

Volume) may require programming or may not be fully supported on all TV models.

- Ensure the remote is set to the correct mode (e.g., DVD mode if applicable, though this model is primarily for DVD).
- **Short operating range:**
 - Replace the batteries. Low battery power can reduce the remote's effective range.
 - Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the infrared signal.

SPECIFICATIONS

Model Number	RMT-D197A
Brand	ECONTROLLY
Compatible Devices	Sony DVP-SR210, DVP-SR201P, DVP-SR405P, DVP-SR510, DVP-SR510H DVD Players
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	0.81 ounces
Color	Black

WARRANTY AND SUPPORT

This product is typically covered by a standard manufacturer's warranty. For specific warranty details, return policies, or technical support, please refer to the information provided by your retailer or contact ECONTROLLY customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B06XSQXYMH>

More documents and user manuals: <https://manuals.plus/>