

VOICE CADDIE VC300SE_WH

VOICE CADDIE VC300SE Voice Golf GPS User Manual

Model: VC300SE_WH | Brand: VOICE CADDIE

1. INTRODUCTION

The VOICE CADDIE VC300SE is a compact and lightweight voice golf GPS device designed to provide accurate distance information on the golf course. It features automatic course and hole recognition, shot distance measurement, and a unique swing tempo function to assist with rhythm. The device offers audio distance information in 8 different spoken languages, ensuring a focused and efficient game.



Image: The VOICE CADDIE VC300SE Voice Golf GPS device, showcasing its compact white design.

2. WHAT'S IN THE BOX

Upon unboxing your VOICE CADDIE VC300SE, please ensure all the following components are present:

- VOICE CADDIE VC300SE Device
- Rechargeable Lithium Battery (pre-installed)
- USB Charging Cable
- User Manual (this document)

3. SETUP

3.1 Initial Charging

Before first use, fully charge your VC300SE device. Connect the provided USB charging cable to the device and a compatible USB power source. A full charge provides up to 8 hours of golf playing time.

HIGH BATTERY CAPACITY AND RAPID CHARGING

QUICK RECHARGEABLE BATTERY. A FULL CHARGE PROVIDES UP TO 9 HOURS OF GOLF PLAYING TIME.



Image: The VC300SE device with its USB charging cable, illustrating the charging process.

3.2 Course Updates

The VC300SE comes preloaded with over 30,000 courses worldwide. For the latest course data and updates, the device supports free and easy updates. Refer to the official VOICE CADDIE website for instructions on how to update your device's course database.

SIMPLE AND EASY CLICK

**DISTANCE TO THE FRONT/CENTER/
BACK OF THE GREEN**



Image: The VC300SE device highlighting its free course update capability.

3.3 Language Selection

The VC300SE offers a choice of 8 different spoken languages for audio distance information. Consult the full manual on the manufacturer's website for specific instructions on how to change the language setting.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

To power on the device, press and hold the main button until you hear a voice prompt. To power off, press and hold the main button again until the device shuts down.

4.2 Automatic Course and Hole Recognition

The VC300SE automatically recognizes the course and hole you are playing, allowing you to focus on your game without manual input.

4.3 Distance Measurement

The device provides audio distance information to the front, center, and back of the green.

- **Click the Main Button Once:** Hear the distance to the *center* of the green.
- **Double Click the Main Button:** Hear the distance to the *front* and *back* of the green.



Image: Visual guide on using the main button for single-click (center), double-click (front/back), and press-and-hold (shot measurement) functions.

4.4 Shot Distance Measurement

To measure your shot distance:

1. At your starting point, press and hold the main button for 2 seconds until you hear a confirmation.
2. Walk to your ball. The device will automatically calculate and announce the distance traveled.

4.5 Swing Tempo Function

The VC300SE includes a unique swing tempo function, acting as a golf metronome system to help improve your

swing rhythm. Refer to the detailed manual for instructions on activating and utilizing this feature.

4.6 Wearing the Device

The VC300SE is designed to be lightweight and compact, easily clipping onto your hat or belt for convenient access during play.



Image: The VC300SE device shown clipped onto a golf hat, demonstrating its wearability.

5. MAINTENANCE

5.1 Cleaning

To clean your VC300SE, gently wipe the device with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the device's surface.

5.2 Battery Care

The device uses a rechargeable Lithium Ion battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Store the device in a cool, dry place when not in use.
- Charge the device regularly, even if not used for extended periods, to maintain battery health.

6. TROUBLESHOOTING

6.1 Device Not Powering On

- Ensure the battery is sufficiently charged. Connect the device to a power source and allow it to charge for at least 30 minutes before attempting to power on again.
- Verify that the charging cable is securely connected to both the device and the power source.

6.2 No GPS Signal / Incorrect Distances

- Ensure you are in an open area with a clear view of the sky for optimal GPS signal reception.
- Confirm that the device has the latest course updates installed.
- Restart the device to re-acquire GPS satellites.

6.3 Audio Issues

- Check if the volume is set appropriately.
- Ensure there is no obstruction to the speaker.

For further troubleshooting or issues not listed here, please refer to the official VOICE CADDIE support resources.

7. SPECIFICATIONS

The following table details the key specifications of the VOICE CADDIE VC300SE:

Feature	Specification
Model Number	VC300SE_WH
Item Weight	1 ounces
Product Dimensions	6 x 8 x 4 inches
Battery Type	1 Lithium Ion battery (included)
Battery Life	8 Hours
Audio Output Mode	Voice Output
Connectivity Technology	Wireless
Special Feature	Voice Output Technology
Included Components	Rechargeable Lithium Battery, USB Charging Cable, Manual

LIGHTWEIGHT AND COMPACT DESIGN



Image: The VC300SE device demonstrating its lightweight and compact design, with dimensions shown.

8. WARRANTY INFORMATION



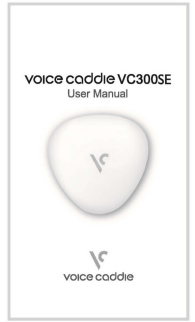

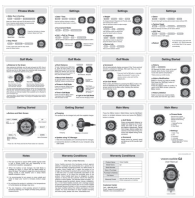

The VOICE CADDIE VC300SE comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. For warranty claims or detailed terms and conditions, please retain your proof of purchase and contact VOICE CADDIE customer support.

9. SUPPORT AND CONTACT INFORMATION

For additional support, frequently asked questions, or to contact customer service, please visit the official VOICE CADDIE website or their Amazon Brand Store:

- VOICE CADDIE Official Website: www.voicecaddie.com
- VOICE CADDIE Amazon Brand Store: [Visit Store](#)

Related Documents - VC300SE_WH

	<p>Voice Caddie VC300SE User Manual</p> <p>Comprehensive user manual for the Voice Caddie VC300SE, a voice-guided golf GPS device. Learn about its features, operation, and specifications for an enhanced golf experience.</p>
	<p>Voice Caddie VC300 User Manual: Getting Started, Features, and Warranty</p> <p>Comprehensive user manual for the Voice Caddie VC300 golf GPS device. Learn how to set up, measure distances, manage settings, and understand warranty information.</p>
	<p>Voice Caddie VC300SE Golf GPS Rangefinder User Manual</p> <p>User manual for the Voice Caddie VC300SE golf GPS rangefinder, detailing its features, operation, charging, and warranty information.</p>
	<p>Voice Caddie G3 User Manual - Golf and Fitness Watch</p> <p>Comprehensive user manual for the Voice Caddie G3 GPS golf and fitness watch, covering setup, modes, features, and warranty information.</p>
	<p>Voice Caddie G2 User Manual: Golf and Fitness GPS Watch Features</p> <p>Explore the features and operation of the Voice Caddie G2 golf and fitness GPS watch. This user manual covers modes, settings, golf tracking, fitness tracking, and warranty information.</p>
	<p>Voice Caddie T1 Hybrid Golf Watch User Manual</p> <p>Comprehensive user manual for the Voice Caddie T1 Hybrid Golf Watch, covering setup, fitness modes (Walk/Run, Cycle, Stopwatch), golf features (Play Golf, Shot Distance, Swing Tempo), settings, and warranty information.</p>