



Manuals.plus /

› TEWELL /

› TEWELL Vintage Bluetooth Speaker M1A-BN User Manual

## TEWELL M1A-BN

# TEWELL Vintage Bluetooth Speaker M1A-BN User Manual

Model: M1A-BN

## 1. INTRODUCTION

---

Thank you for choosing the TEWELL Vintage Bluetooth Speaker, Model M1A-BN. This speaker combines classic aesthetics with modern audio technology, offering both wireless Bluetooth connectivity and a wired 3.5mm auxiliary input. Designed for optimal sound performance, it features bass-enhanced technology and intuitive controls. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your speaker to ensure a satisfying audio experience.

## 2. PACKAGE CONTENTS

---

Please verify that all items listed below are included in your package:

- TEWELL Vintage Bluetooth Speaker (M1A-BN)
- Power Adapter
- 3.5mm Aux-in Cable



Image: Contents of the TEWELL Vintage Bluetooth Speaker package, including the speaker, power adapter, and auxiliary cable.

### 3. PRODUCT OVERVIEW AND CONTROLS

---

Familiarize yourself with the speaker's controls and connection ports.

#### Front Panel Controls

- **Power Toggle Switch:** Used to turn the speaker ON or OFF.
- **Volume Knob:** Rotates to adjust the audio output volume.
- **Bluetooth Pairing Button:** Initiates Bluetooth pairing mode.
- **Playback Control Buttons:** For Play/Pause, Next Track, and Previous Track.
- **AUX Input Jack:** For wired audio connections using the 3.5mm aux-in cable.



Image: Detailed view of the speaker's control panel, highlighting the power toggle, volume knob, and media control buttons.

## Rear Panel Connections

- **DC Power Input:** Connects to the provided power adapter.
- **Bass Reflex Port:** Enhances bass performance.



Image: The back of the speaker, illustrating the power input and the bass reflex port.

## 4. SETUP

---

Follow these steps to set up your TEWELL Vintage Bluetooth Speaker:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Positioning:** Place the speaker on a stable, flat surface. For optimal sound, avoid placing it in enclosed spaces or directly against walls.
3. **Power Connection:** Connect the provided power adapter to the DC power input on the rear of the speaker. Plug the adapter into a standard AC power outlet.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Power On/Off

- To turn ON the speaker, flip the power toggle switch to the 'ON' position.
- To turn OFF the speaker, flip the power toggle switch to the 'OFF' position.

### 5.2 Bluetooth Connectivity

Connect your speaker wirelessly to Bluetooth-enabled devices.

1. Ensure the speaker is powered ON.
2. The speaker will automatically enter Bluetooth pairing mode, indicated by a flashing light around the volume knob. If not, press the Bluetooth pairing button.
3. On your audio device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "TEWELL M1A-BN" (or similar name) from the list of devices.
5. Once paired, the light around the volume knob will become solid, and you can begin streaming audio.

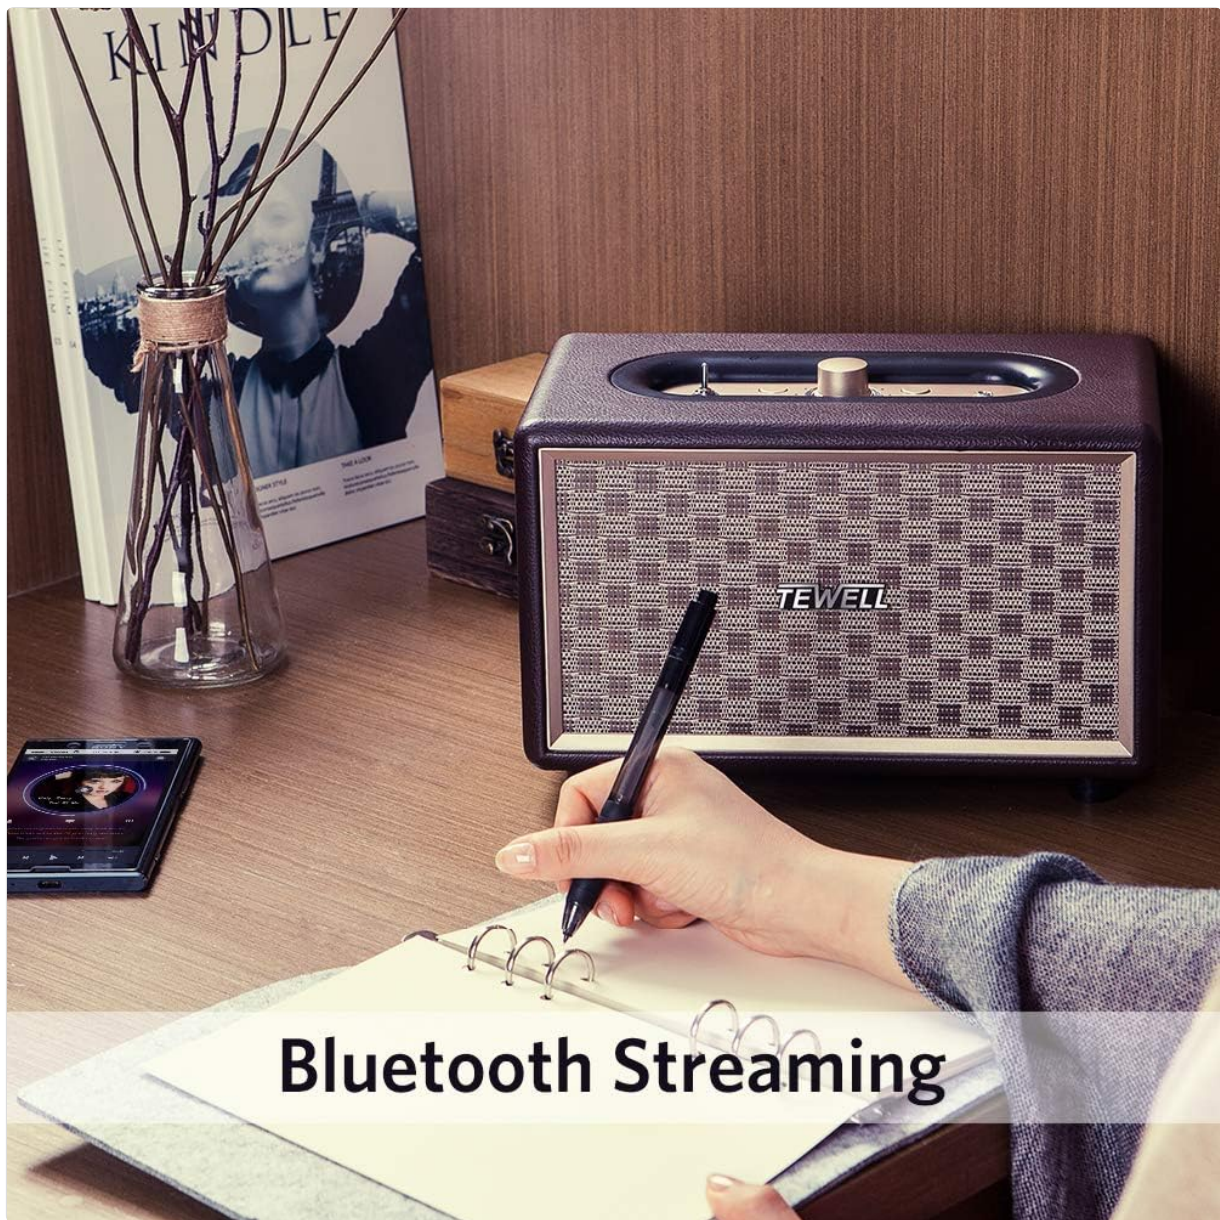


Image: A user interacting with a smartphone to initiate Bluetooth streaming to the speaker.

### 5.3 Auxiliary (AUX) Input

For wired connections to devices without Bluetooth capability or for a direct audio experience.

1. Ensure the speaker is powered ON.
2. Connect one end of the provided 3.5mm aux-in cable to the AUX input jack on the speaker's front panel.
3. Connect the other end of the 3.5mm aux-in cable to the headphone jack or audio output of your external device (e.g., turntable, computer, projector).
4. The speaker will automatically switch to AUX input mode.

## 3.5mm Aux Input



Image: The speaker connected to a turntable using the 3.5mm auxiliary input cable.

### 5.4 Volume and Playback Control

- **Volume:** Rotate the volume knob clockwise to increase volume and counter-clockwise to decrease volume.
- **Play/Pause:** Press the central playback button to play or pause audio.
- **Next Track:** Press the right arrow button to skip to the next track.
- **Previous Track:** Press the left arrow button to go to the previous track.

## 6. MAINTENANCE

---

Proper care ensures the longevity and performance of your speaker.

- **Cleaning:** Use a soft, dry cloth to wipe the speaker's exterior. Avoid abrasive cleaners, solvents, or harsh chemicals.
- **Environment:** Keep the speaker away from direct sunlight, heat sources, and excessive moisture. Do not expose it to water or other liquids.
- **Storage:** If storing for an extended period, disconnect the power adapter and store the speaker in a cool, dry place.

## 7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not power on.	Power adapter not connected or faulty. Power outlet not working.	Ensure the power adapter is securely connected to the speaker and a working power outlet. Try a different outlet.
No sound from speaker.	Volume too low. Incorrect input source selected. Device not paired (Bluetooth). Aux cable not connected properly.	Increase speaker volume. Ensure your source device's volume is also up. Verify Bluetooth pairing or secure aux cable connection.
Bluetooth device cannot pair.	Speaker not in pairing mode. Device Bluetooth is off. Speaker too far from device. Interference.	Ensure speaker is ON and in pairing mode (flashing light). Turn Bluetooth ON on your device. Move device closer to speaker (within 10 meters). Turn off other Bluetooth devices.
Sound is distorted or unclear.	Volume too high (speaker or source). Low quality audio source.	Reduce volume on both the speaker and the source device. Try a different audio source or file.

## 8. SPECIFICATIONS

Detailed technical specifications for the TEWELL Vintage Bluetooth Speaker M1A-BN:

- **Model Name:** M1A-BN
- **Brand:** TEWELL
- **Connectivity Technology:** Bluetooth, Auxiliary (3.5mm)
- **Power Source:** Corded Electric (AC Powered)
- **Speaker Type:** Bookshelf
- **Audio Output Mode:** Stereo
- **Speaker Maximum Output Power:** 24 Watts
- **Frequency Response:** 50 Hz - 20 kHz
- **Bluetooth Range:** Up to 10 meters (33 feet)
- **Product Dimensions (D x W x H):** 5.9" x 10.2" x 5.9" (15 cm x 26 cm x 15 cm)
- **Item Weight:** 4 Pounds (1.8 kg)
- **Material:** Leather, Wood
- **Included Components:** Speaker, Power Adapter, 3.5mm Aux-in Cable



Image: Visual representation of the speaker's dimensions.

## 9. WARRANTY AND SUPPORT

The TEWELL Vintage Bluetooth Speaker M1A-BN comes with an extended warranty. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact TEWELL customer support.

If you require technical assistance, troubleshooting beyond this manual, or have questions regarding your product, please contact TEWELL customer support through their official website or the retailer where the product was purchased.