

Timegyro CRS1G

Timegyro Digital Alarm Clock CRS1G User Manual

Model: CRS1G

1. INTRODUCTION

Thank you for choosing the Timegyro Digital Alarm Clock. This manual provides detailed instructions for the setup, operation, and maintenance of your new alarm clock. This device is designed for convenience, featuring a large LED display and battery-powered operation for portability.

2. IMPORTANT SAFETY INFORMATION

- Use only the specified battery type (4 x AA batteries).
- Do not mix old and new batteries, or different types of batteries.
- Insert batteries with correct polarity (+ and -).
- Remove exhausted batteries promptly to prevent leakage and damage.
- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Keep out of reach of children.

3. PACKAGE CONTENTS

- Timegyro Digital Alarm Clock (CRS1G)
- User Manual
- *Note: 4 x AA batteries are not included and must be purchased separately.*

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Timegyro Digital Alarm Clock.

Front View



Image: Front view of the Timegyro Digital Alarm Clock, displaying the time 10:33 in large red LED digits. The clock has a gold-colored casing.

Top View and Size Reference



Image: The Timegyro Digital Alarm Clock resting in a person's hand, demonstrating its compact and portable design. The top features a large 'SNOOZE AL STOP' button.

Rear View and Controls



Image: The back panel of the alarm clock, detailing the control buttons. These include buttons for setting time and alarm, adjusting hours and minutes, switching between 12/24-hour format, turning the alarm on/off, resetting the device, and adjusting display brightness.

Battery Compartment



Image: The open battery compartment located on the rear of the clock, designed to hold four AA batteries. The battery cover is shown detached.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment cover on the back of the clock.
2. Slide the cover downwards to open the compartment.
3. Insert four (4) new AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.

The clock display should now light up, indicating successful battery installation.

6. OPERATING INSTRUCTIONS

6.1 Setting the Time

1. Press and hold the **TIME SET** button until the hour digits begin to flash.
2. Press the **HOUR** button repeatedly to adjust the hour.
3. Press the **MIN** button repeatedly to adjust the minutes.
4. Press **TIME SET** again to confirm and exit time setting mode.

6.2 Setting the Alarm

1. Press and hold the **AL SET** button until the alarm hour digits begin to flash.
2. Press the **HOUR** button repeatedly to adjust the alarm hour.
3. Press the **MIN** button repeatedly to adjust the alarm minutes.
4. Press **AL SET** again to confirm and exit alarm setting mode.

6.3 Activating/Deactivating the Alarm

Press the **AL ON/OFF** button to toggle the alarm function. An alarm icon (usually a bell) will appear on the display when the alarm is active.

6.4 Snooze Function

When the alarm sounds, press the large **SNOOZE AL STOP** button on top of the clock. The alarm will pause for approximately 7 minutes before sounding again.

6.5 Stopping the Alarm

To stop the alarm completely after it sounds (without snoozing), press any button on the back of the clock, or press and hold the **SNOOZE AL STOP** button for 2 seconds.

6.6 Adjusting Display Brightness

The clock features 3 levels of brightness. Press the **light bulb icon button** on the back to cycle through the brightness levels. The display also has a night mode that automatically dims the display between 8 PM and 6 AM.

6.7 12/24 Hour Mode

Press the **12/24** button to switch between 12-hour (with AM/PM indicator) and 24-hour time formats.

6.8 Flashing Dots Between Numbers

To start or stop the flashing of the dots between the hour and minute digits, press and hold the **MIN** button for 2 seconds.

7. MAINTENANCE

7.1 Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface.

7.2 Battery Replacement

When the display becomes dim or the clock stops functioning, it is time to replace the batteries. Refer to section 5.1 for battery installation instructions. It is recommended to replace all four batteries at the same time.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or very dim.	Batteries are low or incorrectly installed.	Replace batteries with new AA batteries, ensuring correct polarity.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the alarm is turned ON (alarm icon visible). Verify the alarm time is set correctly.
Time or alarm cannot be set.	Buttons not pressed correctly or device unresponsive.	Press and hold the RESET button on the back of the clock using a pointed object (e.g., paperclip) to restart the device. Then try setting again.

9. SPECIFICATIONS

Model Number	CRS1G
Brand	Timegyro
Dimensions (L x W x H)	13 x 6.9 x 4 cm (5.1 x 2.7 x 1.6 inches)
Weight	140.61 grams (0.31 lbs)
Power Source	4 x AA Batteries (not included)
Display Type	Digital LED
Special Features	Large LED display, Battery operated, Adjustable brightness, Snooze function, 12/24-hour mode, Night mode

10. WARRANTY AND SUPPORT

This Timegyro Digital Alarm Clock comes with a **1-year quality guarantee**.

If you encounter any issues or have questions regarding your product, please contact our customer support. We are committed to responding within 24 hours to assist you.

For support, please refer to the contact information provided with your purchase or visit the official Timegyro website.