

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [STYLER](#) /

› [STYLER GL021 Black Glass Picture User Manual](#)

STYLER GL021

STYLER GL021 Black Glass Picture User Manual

Model: GL021

INTRODUCTION

This manual provides essential information for the proper installation, care, and maintenance of your STYLER GL021 Black Glass Picture. The GL021 is a modern wall decoration designed to enhance your living space with its brilliant visual effect and high-quality construction. Please read this manual thoroughly before installation to ensure safe and optimal use.



Figure 1: Front view of the STYLER GL021 Black Glass Picture, showcasing its abstract design with warm, flowing lines on a dark background.

KEY FEATURES

- **Sturdy Wall Hangers:** Equipped with robust hangers for secure mounting.
- **4 mm Thick Float Glass:** Constructed from durable, high-quality float glass.
- **Brilliant Effect:** Achieves high color saturation and contrast for a vibrant display.
- **Compact Dimensions:** Measures 30 x 30 x 0.4 cm (approximately 11.81 x 11.81 x 0.16 inches).
- **European Craftsmanship:** Proudly made in Europe, ensuring quality manufacturing.



Figure 2: The STYLER GL021 Black Glass Picture displayed in a room, illustrating its aesthetic integration into a modern interior design.

SETUP AND INSTALLATION

Follow these steps for safe and secure installation of your glass picture:

1. **Choose Location:** Select a suitable wall location, ensuring it is clean, dry, and capable of supporting the picture's weight (approximately 1.98 pounds). Avoid direct sunlight or areas with extreme temperature fluctuations.
2. **Prepare Wall:** Mark the desired hanging point on the wall. Use a level to ensure the picture will hang straight.
3. **Install Wall Fastener:** Depending on your wall type (drywall, plaster, concrete), use appropriate wall anchors and screws (not included) to securely fasten a hook or screw into the marked spot. Ensure the fastener is strong enough to hold the picture.
4. **Hang Picture:** Carefully align the metal hanger on the back of the glass picture with the installed wall fastener. Gently lower the picture until it rests securely on the fastener.



Figure 3: Detail of the rear of the glass picture, highlighting the integrated metal hanger for wall mounting. This hanger is designed for secure and stable installation.

Important: Always ensure the wall fastener is properly installed and can support the weight of the glass picture to prevent accidental falls and potential damage or injury.

OPERATION

The STYLER GL021 Black Glass Picture is designed for static display as a decorative art piece. Once securely mounted, no further operation is required. Enjoy the visual enhancement it brings to your space.

CARE AND MAINTENANCE

To maintain the brilliant appearance of your glass picture, follow these care instructions:

- **Cleaning:** Use a soft, lint-free cloth and a standard glass cleaner. Spray the cleaner onto the cloth, not directly onto the glass, to avoid streaks or drips behind the picture.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the glass surface.
- **Dusting:** Regularly dust the surface with a dry, soft cloth to prevent dust buildup.
- **Handling:** When moving or adjusting the picture, always handle it by the edges to avoid fingerprints on the glass surface.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Picture is not level.	Wall fastener is not level or picture is not properly seated.	Carefully remove the picture. Re-adjust the wall fastener using a level, or re-hang the picture ensuring it is fully seated on the hanger.
Glass appears dirty or streaky after cleaning.	Incorrect cleaning method or residue from cleaner.	Ensure you are using a lint-free cloth and spraying cleaner onto the cloth first. Wipe in a consistent direction. Try a different glass cleaner if streaks persist.
Picture feels loose on the wall.	Wall fastener is not secure or is damaged.	Immediately remove the picture. Inspect the wall fastener and the wall for damage. Replace or reinforce the fastener as necessary before re-hanging.

SPECIFICATIONS

Model Number:	GL021
Brand:	STYLER
Product Dimensions:	0.16 x 11.81 x 11.81 inches (30 x 30 x 0.4 cm)
Item Weight:	1.98 pounds
Material:	4 mm thick Float Glass
Manufacturer:	STYLER
ASIN:	B06XTS4Z9C
Date First Available:	October 29, 2017

WARRANTY AND SUPPORT

For specific warranty information regarding your STYLER GL021 Black Glass Picture, please refer to the documentation included with your purchase or contact STYLER customer support directly. STYLER is committed to providing high-quality products and customer satisfaction.

If you encounter any issues not covered in the troubleshooting section or require further assistance, please reach out to the manufacturer's customer service department. Keep your purchase receipt and model number (GL021) ready when contacting support.

