

Alcatel Smile

Alcatel Smile Cordless Phone User Manual

Model: Smile

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your Alcatel Smile Cordless Phone. Please read this manual carefully before operating the device and retain it for future reference.

2. SAFETY INFORMATION

- Use only the provided power adapter and battery pack.
- Do not expose the phone to water or moisture.
- Avoid placing the phone near heat sources or direct sunlight.
- Keep the phone out of reach of children.
- Do not attempt to disassemble or repair the phone yourself. Contact qualified service personnel.
- Dispose of batteries according to local regulations. Do not incinerate.

3. PACKAGE CONTENTS

Verify that your package contains the following items:

- Alcatel Smile Handset
- Alcatel Smile Base Unit
- Power Adapter
- Telephone Line Cord
- Rechargeable NiMH Battery Pack (2/3 AAA, 400mAh 2.4V)
- User Manual (this document)

4. PRODUCT OVERVIEW

4.1 Handset

The handset features a clear display and an intuitive keypad for easy navigation and calling.



Image: The Alcatel Smile Cordless Phone handset resting on its base unit. The handset is white with a blue backlit display showing 'DECT HANDSET 10:00 12-10'. The keypad is visible with standard numeric and function keys. The base unit is a sleek, curved design in white and grey.

4.2 Base Unit

The base unit connects to your telephone line and power supply, and serves as the charging station for the handset.



Image: A close-up view of the Alcatel Smile Cordless Phone base unit. The base has a minimalist design, primarily white with grey accents, and a subtle indicator light. The handset is not shown in this image, focusing on the base's form factor.

5. SETUP

5.1 Battery Installation

1. Open the battery compartment cover on the back of the handset.
2. Insert the provided NiMH battery pack, ensuring correct polarity.
3. Close the battery compartment cover securely.

5.2 Connecting the Base Unit

1. Connect one end of the telephone line cord to the LINE port on the base unit.
2. Connect the other end of the telephone line cord to your telephone wall socket.
3. Plug the power adapter into the DC IN port on the base unit.
4. Plug the power adapter into a wall outlet.

5.3 Charging the Handset

Place the handset on the base unit. The handset will begin charging. For optimal battery performance, charge the handset for at least 16 hours before initial use.

5.4 Registering Additional Handsets (Optional)

Your Alcatel Smile phone supports up to 5 handsets per base. If you have additional handsets, refer to the specific registration instructions in their respective manuals or the on-screen prompts on your primary handset.

6. OPERATING YOUR PHONE



Image: A close-up of the Alcatel Smile Cordless Phone handset's display and keypad. The blue backlit display shows 'DECT HANDSET 10:00 12-10'. The white keypad features clearly labeled buttons for navigation (up/down arrows), menu (OK/MENU), call (green receiver), end call/intercom (red receiver/C/INT), and numeric input.

6.1 Making Calls

- **Dialing:** Enter the phone number using the keypad, then press the **Call** button.
- **Pre-dialing:** Enter the number first, review it on the display, then press the **Call** button.
- **Redial:** Press the **Redial** button to access the list of the last 10 dialed numbers. Select a number and press **Call**.

6.2 Receiving Calls

When the phone rings, press the **Call** button to answer. The flashing LED on the handset indicates an incoming call. The caller's name and/or number will be displayed if Caller ID is active.

6.3 Phonebook

The phonebook can store up to 50 names and numbers. To access, add, or edit entries:

1. Press the **MENU/OK** button.
2. Navigate to 'Phonebook' using the arrow keys.
3. Select 'Add New' or 'View' to manage entries.

6.4 Call Log

The phone stores a log of the last 20 incoming calls with date and time. New, unanswered calls will be indicated. To view:

1. Press the **MENU/OK** button.
2. Navigate to 'Call Log' using the arrow keys.
3. Select an entry to view details or call back.

6.5 Hands-free Function

During a call, press the **Hands-free** button (often integrated with the Call button or a dedicated speaker icon) to activate speakerphone mode. There are 5 adjustable hands-free volume levels.

6.6 Intercom and Conference Calls

If you have multiple registered handsets:

- **Intercom:** Press the **INT** button (often combined with the End Call button) and dial the desired handset number.
- **3-Way Conference:** During an external call, you can initiate an intercom call to another handset and then join all three parties into a conference.

6.7 Settings

Access the menu to adjust various settings:

- **Language:** Select from 8 available languages.
- **Ringtones:** Choose from 10 ringtones (5 classic, 5 polyphonic) and set 5 volume levels (plus off). You can also assign different ringtones for external/internal calls and VIP callers.
- **Alarm:** Set an alarm using the alarm function.
- **Keypad Lock:** Activate or deactivate the keypad lock to prevent accidental dialing.

7. MAINTENANCE

- Clean the phone with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure the charging contacts on the handset and base are clean and free of debris.
- If the phone will not be used for an extended period, remove the battery pack.

8. TROUBLESHOOTING

Problem	Solution
No dial tone	Check if the telephone line cord is securely connected to both the base unit and the wall socket. Ensure the power adapter is plugged in.
Handset not charging	Ensure the handset is correctly placed on the base unit. Check that the power adapter is connected. Clean the charging contacts.
Poor call quality / Static	Move closer to the base unit. Ensure there are no large metal objects or other electronic devices interfering with the signal.
Handset displays "Out of Range"	Move the handset closer to the base unit. The maximum indoor range is approximately 50 meters.
Low battery indicator	Place the handset on the base unit to charge.

9. SPECIFICATIONS

- **Display:** Single line dot matrix / 1 line 7 segments alphanumeric / 1 line icons, light blue backlight
- **Languages:** 8
- **Earpiece Volume:** 5 levels
- **Ringtones:** 10 (5 classic, 5 polyphonic), 5 volume levels + off
- **Phonebook Capacity:** 50 names and numbers
- **Call Log Capacity:** 20 incoming calls with date and time
- **Multi-handset Capability:** Up to 5 handsets per base

- **Intercom:** Yes
- **Conference Call:** 3-way (2 internal + 1 external)
- **Range (Outdoor):** Up to 300 meters
- **Range (Indoor):** Up to 50 meters
- **Battery:** 2/3 AAA NiMH rechargeable pack, 400mAh 2.4V
- **Standby Time:** Up to 100 hours
- **Talk Time:** Up to 8 hours
- **Base Dimensions (L x W x H):** 238 x 67 x 22 mm
- **Handset Dimensions (L x W x H):** 211 x 51 x 22.5 mm
- **Functions:** Hands-free (5 levels), 10 last number redial, flashing LED for incoming calls, auto answer/hang up, keypad lock, pre-dialing, alarm, handset search (paging), out of range visual indicator, low battery visual indicator, Caller ID.

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Alcatel website. Keep your proof of purchase for warranty claims.

© 2023 Alcatel. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

