

[Manuals.plus](#) /

> [AtGames](#) /

> AtGames Sega Genesis Ultimate Portable Game Player (Model GP3288) Instruction Manual

## AtGames GP3288

# AtGames Sega Genesis Ultimate Portable Game Player

Model: GP3288 | Instruction Manual

## INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your AtGames Sega Genesis Ultimate Portable Game Player. This handheld console features a 2.8-inch LCD screen and comes pre-loaded with a collection of classic Sega Genesis games, offering portable entertainment.



Image: AtGames Sega Genesis Ultimate Portable Game Player in hand, displaying Sonic the Hedgehog 2 on its screen.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- AtGames Sega Genesis Ultimate Portable Game Player

- USB Charging Cable
- Instruction Manual
- Rechargeable Battery (pre-installed)

An SD card is not included and must be purchased separately if you wish to add additional games.



Image: Retail packaging for the AtGames Sega Genesis Ultimate Portable Game Player, showing product features and included games.

## PRODUCT FEATURES

- **Portable Design:** Compact and lightweight for gaming on the go.
- **Built-in Games:** Includes 85 classic Sega Genesis titles.
- **2.8-inch LCD Screen:** Provides clear visual display for gaming.
- **Rechargeable Battery:** For extended playtime.
- **SD Card Slot:** Expandable memory for additional game downloads (SD card sold separately).
- **USB Charging:** Convenient charging via standard USB.

## SETUP

### 1. Charging the Device

1. Locate the USB charging port on the device.
2. Connect the included USB charging cable to the device.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer USB port, USB

wall adapter).

4. The device will indicate charging status (e.g., an LED indicator). Allow the device to fully charge before first use.

## 2. Inserting an SD Card (Optional)

If you plan to play games from an SD card:

1. Ensure the device is powered off.
2. Locate the SD card slot on the device.
3. Gently insert a compatible SD card into the slot until it clicks into place. Do not force the card.
4. To remove, gently push the SD card inward until it clicks, then release to eject.

## OPERATING INSTRUCTIONS

### 1. Power On/Off

- **To Power On:** Press and hold the Power button (usually located on the top or side) until the screen illuminates.
- **To Power Off:** Press and hold the Power button until the screen turns off.

### 2. Menu Navigation

- Use the directional pad (D-pad) or joystick on the left side of the device to navigate through game lists and menu options.
- Press the 'Start' or 'A' button to confirm a selection.

### 3. Game Selection and Play

1. From the main menu, use the D-pad to scroll through the list of built-in games.
2. Highlight the desired game and press the 'Start' or 'A' button to begin.
3. During gameplay, use the D-pad for movement and the action buttons (A, B, C, X, Y, Z) for in-game actions.
4. Press the 'Start/Pause' button to pause or resume gameplay.

### 4. Volume Control

Adjust the volume using the dedicated volume buttons or slider, typically located on the side of the device.

### 5. Playing Games from SD Card

If an SD card with compatible games is inserted, an option to access SD card games will appear in the main menu. Select this option to browse and play games stored on your SD card.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. For stubborn dirt, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive materials.
- **Screen Care:** Use a microfiber cloth specifically designed for electronics to clean the LCD screen. Do not press hard on the screen.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Store the device in a cool, dry place when not in use for extended periods. Charge the device periodically if stored for a long time.

- **Storage:** Store the device away from extreme temperatures, direct sunlight, and high humidity.

## TROUBLESHOOTING

- **Device Not Turning On:** Ensure the battery is sufficiently charged. Connect the USB charging cable and allow it to charge for at least 30 minutes before attempting to power on again.
- **Screen Issues (No Display/Flickering):** Try restarting the device. If the issue persists, ensure the battery is charged.
- **No Sound:** Check the volume level and ensure it is not muted. Try connecting headphones to determine if the issue is with the internal speaker.
- **Games Not Loading/Freezing:** Restart the device. If playing from an SD card, ensure the card is properly inserted and the game files are compatible.
- **Buttons Unresponsive:** Ensure the device is clean and free from debris around the buttons. Restart the device.

If problems persist after attempting these steps, please refer to the support information section.

## SPECIFICATIONS

Feature	Detail
Model Number	GP3288
Platform	Sega Genesis
Screen Size	2.8 inches
Display Type	LCD
Controller Type	Button Control
Number of Players	1
Power Source	Battery Powered
Battery Type	1 Lithium Polymer (included)
Hardware Interface	USB
Form Factor	Handheld
Item Weight	0.13 Kilograms
Item Dimensions	10.24 x 6.69 x 2.17 inches
Material Type	Plastic, Acrylonitrile Butadiene Styrene (ABS)
Color	Blue
UPC	857847003806

## WARRANTY INFORMATION

Warranty details for the AtGames Sega Genesis Ultimate Portable Game Player are typically provided with the product packaging or can be found on the official AtGames website. Please retain your proof of purchase

for any warranty claims.

## **SUPPORT**

For further assistance, technical support, or frequently asked questions, please visit the official AtGames support website. Contact information for customer service may also be available on the product packaging.