

AR ANNOVI REVERBERI 475AR

Annovi Reverberi 475AR Cold Water Pressure Washer User Manual

Model: 475AR | Brand: AR ANNOVI REVERBERI

1. INTRODUCTION

Thank you for choosing the Annovi Reverberi 475AR Cold Water Pressure Washer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new pressure washer. Please read this manual thoroughly before assembly, operation, or maintenance to ensure proper use and to prevent injury or damage.

The Annovi Reverberi 475AR is designed for effective cleaning tasks, featuring a robust 3-axial piston pump with tempered stainless steel pistons, an oscillating plate control system, and an aluminum head. It includes an automatic safety valve with pressure zeroing in the pump head and a total stop system for user convenience and safety.

2. IMPORTANT SAFETY INFORMATION

Always observe basic safety precautions when using this product to reduce the risk of injury, electric shock, or fire. Failure to follow these instructions may result in serious injury or property damage.

- **Read All Instructions:** Familiarize yourself with the controls and proper use of the pressure washer.
- **Electrical Safety:** Ensure the power supply matches the specifications on the product label. Always connect to a grounded outlet. Do not operate with damaged cords or plugs. Keep all connections dry and off the ground.
- **Water Connection:** Connect the pressure washer to a cold water supply only. Do not use hot water. Ensure the water supply is clean and free of debris; use the inspectable water filter provided.
- **High Pressure Hazard:** The high-pressure jet can be dangerous if misused. Never direct the jet at people, pets, electrical devices, or the unit itself. Wear appropriate personal protective equipment, including eye protection, gloves, and sturdy footwear.
- **Stability:** Operate the pressure washer on a stable, level surface to prevent tipping.
- **Children and Pets:** Keep children and pets away from the operating area.
- **Thermal Protection:** The motor is equipped with thermal protection. If the unit overheats, it will shut off automatically. Allow it to cool before restarting.

- **Maintenance:** Disconnect from the power supply and water source before performing any maintenance or cleaning.

3. PACKAGE CONTENTS

Verify that all items listed below are present and undamaged upon unpacking:

- Annovi Reverberi 475AR Pressure Washer Unit
- Pistol Grip Gun
- Lance with Adjustable Jet Nozzle
- Lance with Rotary Jet Nozzle
- Inspectable Transparent Water Filter
- 8-meter High-Pressure PVC Hose
- Mini Patio Cleaner Attachment
- 5-meter Electrical Cable (integrated)
- User Manual



Figure 1: Annovi Reverberi 475AR Pressure Washer with included accessories.

4. SETUP AND ASSEMBLY

Follow these steps to assemble and prepare your pressure washer for first use:

1. **Attach Wheels and Handle:** Secure the wheels to the base of the unit and attach the handle according to the diagrams in the separate assembly guide (if provided). The unit features a 2-wheel trolley with a handle for easy transport.
2. **Connect Water Supply:**
 - Attach a standard garden hose (not included) to the water inlet connection on the pressure washer. Ensure the inspectable transparent water filter is properly installed at the inlet.
 - Connect the other end of the garden hose to a cold water tap.
 - Turn on the water tap fully to ensure a steady water flow to the unit.

3. Connect High-Pressure Hose:

- Connect one end of the 8-meter high-pressure PVC hose to the high-pressure outlet on the pressure washer.
- Connect the other end of the high-pressure hose to the pistol grip gun.

4. **Attach Lance/Nozzle:** Select the desired lance (adjustable jet or rotary jet) and attach it to the pistol grip gun. Ensure it clicks securely into place.

5. **Connect Power:** Uncoil the 5-meter electrical cable completely and plug it into a grounded electrical outlet. Ensure your hands are dry.

6. **Prime the Pump:** Before starting the motor, squeeze the trigger on the pistol grip gun to allow water to flow through the system and expel any trapped air. Continue until a steady stream of water emerges from the nozzle. This prevents damage to the pump.



Figure 2: Side view of the Annovi Reverberi 475AR Pressure Washer, illustrating the hose reel and handle.

5. OPERATING INSTRUCTIONS

Once the unit is set up and primed, you can begin operation.

5.1 Starting the Pressure Washer

1. Ensure the water supply is fully open and the pump is primed.
2. Turn the ON/OFF switch on the unit to the "ON" position. The motor will start.
3. Squeeze the trigger on the pistol grip gun to begin spraying. The unit features a total stop system, meaning the motor will stop when the trigger is released and restart when squeezed again.

5.2 Using Different Lances and Nozzles

- **Adjustable Jet Lance:** This lance allows you to vary the spray pattern from a concentrated pencil jet to a wide fan spray by twisting the nozzle. Use the pencil jet for stubborn dirt and the fan spray for general cleaning.
- **Rotary Jet Lance:** This nozzle creates a powerful, pulsating jet that is highly effective for removing tough dirt, grime, and moss from hard surfaces like concrete and paving.
- **Mini Patio Cleaner:** Attach the mini patio cleaner to the pistol grip gun for efficient and splash-free cleaning of flat surfaces such as patios, driveways, and decks. Follow the specific instructions provided with the patio cleaner for optimal use.

5.3 Detergent Application (If Applicable)

If your model includes a detergent tank (often located at the rear), fill it with a pressure washer-safe detergent. To apply detergent, typically you will need to use the adjustable jet lance set to its lowest pressure or widest fan setting. The pressure washer's automatic safety valve with pressure zeroing in the pump head may facilitate detergent suction. Refer to the detergent manufacturer's instructions for dilution ratios.

5.4 Shutting Down the Pressure Washer

1. Turn the ON/OFF switch to the "OFF" position.
2. Turn off the water supply tap.
3. Squeeze the trigger on the pistol grip gun to release any remaining pressure in the system.
4. Disconnect the high-pressure hose from the unit and the gun.
5. Disconnect the garden hose from the water inlet.
6. Unplug the electrical cable from the outlet.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Clean Water Filter:** Regularly inspect and clean the transparent water filter at the water inlet. Remove any debris to ensure unrestricted water flow to the pump.
- **Nozzle Cleaning:** If the nozzle becomes clogged, use the provided nozzle cleaning tool (if included) or a thin wire to clear any obstructions.
- **Hose and Connections:** Inspect the high-pressure hose and all connections for wear, leaks, or damage before each use. Replace damaged parts immediately.

- **Winter Storage:** If storing the pressure washer in an area where temperatures may drop below freezing, it is crucial to drain all water from the pump and hoses to prevent damage. Run a pressure washer pump protector/antifreeze solution through the unit, or consult your dealer for proper winterization procedures.
- **General Cleaning:** Wipe down the exterior of the unit with a damp cloth. Do not use harsh chemicals.

7. TROUBLESHOOTING

Before contacting customer support, try these common solutions for minor issues:

Problem	Possible Cause	Solution
Motor does not start	No power supply Thermal overload activated Faulty switch	Check power connection and outlet. Allow motor to cool down for 30 minutes. Contact customer support.
No pressure or low pressure	Insufficient water supply Air in the pump Clogged nozzle Water filter clogged	Ensure water tap is fully open. Prime the pump by squeezing the trigger with the motor off until water flows steadily. Clean the nozzle. Clean the water filter.
Water leaks	Loose connections Damaged O-rings or seals	Tighten all connections. Inspect and replace damaged O-rings or seals.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	475AR
Brand	AR ANNOVI REVERBERI
Power Source	Corded Electric
Maximum Pressure	160 Bar
Power (Wattage)	2000W
Hose Length	8 Meters (High-Pressure PVC)
Electrical Cable Length	5 Meters
Item Weight	19 Kilograms

Feature	Specification
Pump Type	3-axial piston pump with tempered stainless steel pistons, aluminum head
Safety Features	Automatic safety valve with pressure zeroing, Total Stop System, Thermal motor protection

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your product packaging or visit the official AR ANNOVI REVERBERI website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact AR ANNOVI REVERBERI customer support. Contact details can typically be found on the manufacturer's website or in your product documentation.

© 2023 AR ANNOVI REVERBERI. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

