

A2017032803

User Manual for Goldstar Air Conditioner Remote Control

Replacement Model: 6711A20066A, 6711A90019A

1. INTRODUCTION

This manual provides instructions for the replacement remote control compatible with various Goldstar Air Conditioner models. This remote is designed to provide seamless control over your air conditioning unit, restoring full functionality if your original remote is lost or damaged. Please read this manual carefully before use.

2. SETUP: BATTERY INSTALLATION

Your remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Front view of the remote control. The battery compartment is located on the back of the device.

3. OPERATING INSTRUCTIONS

This section describes the functions of the buttons on your remote control.

Button	Function
Power	Turns the air conditioner unit ON or OFF.
Temp ▲ / ▼	Adjusts the desired temperature setting upwards (▲) or downwards (▼).
Fan Speed	Cycles through available fan speed settings (e.g., Low, Medium, High, Auto).
Timer	Sets the timer for automatic ON/OFF operation of the unit. Refer to your air conditioner's main manual for specific timer programming details.
Mode	Selects the operating mode (e.g., Cool, Heat, Fan, Dry, Auto).
Energy Saver	Activates or deactivates the energy-saving mode, which optimizes operation for reduced power consumption.
Auto Swing	Controls the automatic vertical or horizontal swing of the air conditioner's louvers for better air distribution.

4. COMPATIBLE AIR CONDITIONER MODELS

This replacement remote control is compatible with the following Goldstar Air Conditioner models:

- BG5200ER
- GWHD6005R
- GWHD6500R
- GWHD6500RY6
- GWHD6507R
- GWHD6507RY7
- GWHD650OR
- HWC061JAMK7
- WG1205RY7
- WG6000RH4
- WG6005R
- WG6007R

It also replaces original remote control models 6711A20066A and 6711A90019A.

5. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, please observe the following maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or buttons become unresponsive. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and corrosion.
- **Environment:** Avoid exposing the remote to direct sunlight, high temperatures, humidity, or extreme cold. Do not drop

the remote or subject it to strong impacts.

6. TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new AAA batteries.
- Ensure there is a clear line of sight between the remote control and the air conditioner's receiver. Obstructions can block the signal.
- Move closer to the air conditioner unit.

- **Intermittent Operation:**

- This often indicates low battery power. Replace the batteries.
- Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the infrared signal.

- **Buttons Not Working:**

- Ensure the remote is pointed directly at the air conditioner.
- If only specific buttons are not working, the remote might be damaged.

If the problem persists after trying these steps, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	6.3 x 2.36 x 0.79 inches
Item Weight	3.52 ounces
Power Source	2 x AAA batteries (not included)
Compatible Devices	Goldstar Air Conditioners
Replaces Models	6711A20066A, 6711A90019A
Special Feature	Ergonomic design

8. SUPPORT AND CONTACT INFORMATION

For any questions, concerns, or assistance with your remote control, please feel free to contact us. We specialize in remote controls for various appliances, including AC units, TVs, DVDs, and projectors.

Please refer to the seller's contact information on your purchase platform for direct support, or leave a message if direct contact details are not immediately available.



