

[manuals.plus](#) /› [Karlsson](#) /› [Karlsson LED Alarm Clock KA5652BK User Manual](#)

## Karlsson KA5652BK

# Karlsson LED Alarm Clock KA5652BK User Manual

Model: KA5652BK

## 1. INTRODUCTION

Thank you for choosing the Karlsson LED Alarm Clock KA5652BK. This manual provides essential information for the safe and efficient use of your new alarm clock. Please read these instructions carefully before use and retain them for future reference.

## 2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Dispose of batteries according to local regulations.

## 3. PACKAGE CONTENTS

Please check that all items are present in your package:

- Karlsson LED Alarm Clock KA5652BK
- USB Power Cable (may vary by region)
- User Manual

## 4. PRODUCT OVERVIEW

The Karlsson LED Alarm Clock KA5652BK is a compact digital alarm clock featuring an LED display and temperature indication. Its design is suitable for various indoor settings, such as bedrooms or offices.



Image 1: Front view of the Karlsson LED Alarm Clock KA5652BK, displaying the current time and temperature.



Image 2: The Karlsson LED Alarm Clock KA5652BK with its display off, highlighting its wooden casing.

## 5. SETUP

### 5.1 Powering the Device

The alarm clock can be powered via batteries or a USB cable.

- **Battery Power:** Insert the required batteries (not included) into the battery compartment located on the back of the clock. Ensure correct polarity. Battery life may vary.
- **USB Power:** Connect the provided USB cable to the clock's power input and plug the other end into a compatible USB power adapter (not included) or a powered USB port.

### 5.2 Initial Time Setting

Upon first power-up or after a power interruption, the display may flash or show a default time. Refer to the operating instructions for setting the correct time.

## 6. OPERATING INSTRUCTIONS

The Karlsson LED Alarm Clock typically features buttons on the back or bottom for setting time, alarm, and other functions. Specific button labels and sequences may vary slightly, but the general process is as follows:

### 6.1 Setting the Time

1. Press the **SET** or **MODE** button to enter time setting mode. The hour digits will typically flash.
2. Use the **UP** and **DOWN** buttons (or similar) to adjust the hour.
3. Press **SET** or **MODE** again to move to minute setting. Adjust minutes using **UP** and **DOWN**.
4. Press **SET** or **MODE** one more time to confirm and exit time setting.

### 6.2 Setting the Alarm

1. Press the **ALARM** button (or press **MODE** until 'AL' or an alarm icon appears). The alarm hour digits will flash.
2. Use the **UP** and **DOWN** buttons to adjust the alarm hour.
3. Press **ALARM** (or **MODE**) again to move to alarm minute setting. Adjust minutes using **UP** and **DOWN**.
4. Press **ALARM** (or **MODE**) to confirm. An alarm indicator (e.g., a bell icon) should appear on the display.

### 6.3 Turning Alarm On/Off and Snooze

- To **activate/deactivate** the alarm: Press the **ALARM** button briefly outside of setting mode. The alarm indicator will toggle on or off.
- To **snooze**: When the alarm sounds, press any button other than the alarm off button (often the large top button or a dedicated snooze button). The alarm will pause and sound again after a few minutes.
- To **turn off** the alarm: Press the designated **ALARM OFF** button or hold the **ALARM** button for a few seconds.

### 6.4 Display Brightness and Temperature Display

- **Brightness:** Some models allow adjustment of display brightness. Look for a dedicated **DIMMER** button or a function accessible via the **MODE** button. If the display turns off after a few seconds, tapping the clock or pressing a button usually reactivates it.
- **Temperature Display:** The clock automatically displays the ambient temperature. No specific setting is usually required for this feature.

## 7. MAINTENANCE

### 7.1 Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish and electronic components.

### 7.2 Battery Replacement

If using battery power, replace all batteries when the display dims or the clock stops functioning. Ensure to use the correct battery type and insert them with the correct polarity.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low batteries or no power connection. Display set to turn off automatically.	Replace batteries or connect to USB power. Tap the clock or press a button to reactivate the display. Check brightness settings.
Alarm does not sound.	Alarm not activated or set incorrectly.	Ensure the alarm is set and the alarm indicator is visible on the display. Verify alarm time.
Time is incorrect.	Time not set after power interruption or initial setup.	Follow the 'Setting the Time' instructions to reset the current time.
Buttons make a beeping sound.	This is a standard operational sound.	This is a normal function and cannot typically be disabled.

## 9. SPECIFICATIONS

- Brand:** Karlsson
- Model Number:** PTG-KA5652BK
- Color:** Black
- Material:** Wood
- Dimensions (L x W x H):** 17.6 x 3.81 x 11 cm (6.9 x 1.5 x 4.3 inches)
- Weight:** 290 g (0.64 lbs)
- Power Source:** Battery powered (USB power option typically available)
- Special Feature:** Temperature Display
- Display Type:** Digital

## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. You may also visit the official Karlsson website for further assistance.

© 2024 Karlsson. All rights reserved.