Manuals+

Q & A | Deep Search | Upload

Karlsson KA5655BK

Karlsson Mini Cube Black LED Alarm Clock User Manual

Model: KA5655BK Brand: Karlsson

INTRODUCTION

This user manual provides detailed instructions for the setup, operation, and maintenance of your Karlsson Mini Cube Black LED Alarm Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.

PRODUCT OVERVIEW

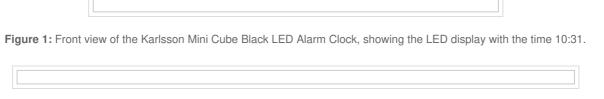


Figure 2: The Karlsson Mini Cube Black LED Alarm Clock placed on a side table in a home environment, displaying the time 6:03.

The Karlsson Mini Cube Black LED Alarm Clock is a compact and stylish timepiece designed to provide time, calendar, and temperature information. It features a black wood veneer coating and an energy-saving LED display that activates with a touch. The clock also includes a triple alarm setting for convenience.

SETUP

1. Power Connection

The alarm clock is powered via a USB cable. Connect the provided USB cable to the clock's power input port and plug the other end into a compatible USB power adapter (not included) or a USB port on a computer.

- Ensure the power source provides stable voltage.
- The LED display will light up once power is connected.

2. Initial Settings (Time, Date, Temperature Unit)

Upon first power-up, you may need to set the current time, date, and preferred temperature unit. Refer to the 'Operating' section for detailed instructions on adjusting these settings.

OPERATING INSTRUCTIONS

The clock supports multiple display modes:

- Time Mode: Displays the current time (12-hour or 24-hour format).
- Calendar Mode: Displays the current date (Year/Month/Day).
- Temperature Mode: Displays the ambient temperature (Celsius or Fahrenheit).

Use the mode button (usually labeled 'SET' or 'MODE' on the back/bottom of the clock) to cycle through these display modes.

Setting Time and Date

- 1. Press and hold the 'SET' button until the display flashes, indicating setting mode.
- 2. Use the 'UP' and 'DOWN' buttons to adjust the hour, then press 'SET' to confirm and move to minutes.
- 3. Repeat for minutes, year, month, and day.
- 4. Press 'SET' again to exit setting mode.

Setting Alarms (Triple Alarm)

The clock allows for up to three independent alarm settings (A1, A2, A3).

- 1. Press the 'ALARM' button (or 'SET' repeatedly until 'ALARM' appears) to enter alarm setting mode.
- 2. Use 'UP'/'DOWN' to select A1, A2, or A3. Press 'SET' to confirm.
- 3. Adjust the alarm hour and minute using 'UP'/'DOWN', confirming each with 'SET'.
- 4. After setting the time, you may be prompted to enable/disable the alarm (ON/OFF).
- 5. Repeat for other alarms as needed.

To turn off a sounding alarm, press any button. The alarm will automatically stop after 60 seconds if no button is pressed.

Energy Saving Mode

The clock features an energy-saving mode where the LED display turns off automatically after a short period of inactivity. To activate the display, simply touch the clock or make a sound (e.g., clap your hands) near it. This feature helps conserve power. To toggle energy-saving mode (often labeled 'SD' for Sound Detection or 'ON/OFF' for power saving), refer to the specific button on your device, usually accessible via the 'MODE' or 'SET' button sequence.

MAINTENANCE

Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the wood veneer and electronic components.

Care for Wood Veneer

The clock features a black wood veneer coating. To maintain its appearance:

- Avoid exposing the clock to direct sunlight or extreme temperatures, which can cause fading or warping.
- Keep the clock away from excessive moisture or humidity.
- Do not place heavy objects on top of the clock.

TROUBLESHOOTING

Problem Possible Cause	Solution
------------------------	----------

Problem	Possible Cause	Solution
Display is blank or flickering.	No power, loose USB connection, or energy-saving mode is active.	Ensure USB cable is securely connected to both the clock and the power source. Try a different USB port or power adapter. Touch the clock or make a sound to activate the display if in energy-saving mode.
Alarm does not sound.	Alarm is not set, alarm volume is too low, or alarm is disabled.	Verify alarm settings (A1, A2, A3) are correctly set and enabled (ON). Ensure the alarm time is correct.
Incorrect time or date displayed.	Time/date not set correctly or power interruption.	Reset the time and date following the 'Setting Time and Date' instructions.

SPECIFICATIONS

Feature	Detail
Brand	Karlsson
Model Number	KA5655BK
Color	Black
Dimensions (L x W x H)	8 x 3.81 x 8 cm (3.15 x 1.5 x 3.15 inches)
Weight	220 grams (0.48 lbs)
Special Features	Alarm, Energy-saving LED display, Time, Calendar, Temperature display
Power Source	Electric Cable (USB cable included)
Display Type	Digital
Style	Minimalist
Indoor/Outdoor Use	Indoor

WARRANTY AND SUPPORT

Information regarding product warranty and spare parts availability is not provided within this manual. For warranty claims, technical support, or inquiries about spare parts, please contact Karlsson customer service directly or refer to the official Karlsson website for the most up-to-date information.

Please retain your proof of purchase for any warranty-related inquiries.



[pdf]

IM KA5653 KA5654 KA5655 indd Voir le marquage CE Karlsson Pendule sur pied Hexagon Brown Bois bol original media s QKOM4zrv95o5 |||

NL HANDLEIDING KA5651DW - KA5651BK - KA5653BK - KA5653DW - KA5654BK - KA5654DW - **KA5655BK** - KA5655DW Algemene Functies 1. Weergave van tijd: 2. Kalender Modus: 3. Alarm Modus: 4. Temperatuur Modus: 5. 3 weergave Modi: 6. Batterij besparing modus: 7. Voeding: Volledig scherm weergave PM Indicatie Al... lang:nl score:17 filesize: 459.02 K page_count: 6 document date: 2017-04-03



[pdf]

IM KA5653 KA5654 KA5655 indd Bekijk de CE markering Karlsson Wekker Zeshoek Zwart fineer Witte LED bol original media s RKLN9AvkRDBw |||

NL HANDLEIDING KA5651DW - KA5651BK - KA5653BK - KA5653DW - KA5654BK - KA5654DW - **KA5655BK** - KA5655DW Algemene Functies 1. Weergave van tijd: 2. Kalender Modus: 3. Alarm Modus: 4. Temperatuur Modus: 5. 3 weergave Modi: 6. Batterij besparing modus: 7. Voeding: Volledig scherm weergave PM Indicatie Al... lang:nl score:17 filesize: 459.61 K page_count: 6 document date: 2017-04-03