

[Manuals.plus](#) /

› [Skullcandy](#) /

› Skullcandy Jib Wireless In-Ear Earbuds Instruction Manual

Skullcandy SCS2DUW-K003

Skullcandy Jib Wireless In-Ear Earbuds Instruction Manual

Model: SCS2DUW-K003

INTRODUCTION

The Skullcandy Jib Wireless In-Ear Earbuds offer a convenient Bluetooth listening experience. Designed for comfort and portability, these earbuds provide up to 6 hours of rechargeable battery life and feature an in-line microphone and remote for call and track control. This manual provides essential information for the proper use and care of your Jib Wireless earbuds.



Image: Skullcandy Jib Wireless In-Ear Earbuds in black, showcasing the sleek design and in-line controls.

WHAT'S IN THE BOX

Verify that all components are present in your product packaging:

- **Jib Wireless Earbuds:** The main in-ear headphones unit.
- **Micro USB to USB Charging Cable:** Used for recharging the earbuds.
- **2 Pair Silicone Ear Gels (Small, Medium):** Additional ear tip sizes for a customized and comfortable fit.



*INCLUDED CONTENTS (BLACK COLORWAY SHOWN)

Image: All items included with the Skullcandy Jib Wireless Earbuds: the earbuds, a Micro USB charging cable, and two pairs of silicone ear gels (small and medium).

SETUP

Charging Your Earbuds

Before initial use, fully charge your Jib Wireless earbuds. Connect the supplied Micro USB cable to the charging port on

the in-line remote and the other end to a USB power source. A full charge provides up to 6 hours of battery life.

Bluetooth Pairing

1. Ensure your earbuds are powered off.
2. Press and hold the multi-function button on the in-line remote until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "Jib Wireless" from the list of available devices.
5. Once connected, the LED indicator on the earbuds will flash blue periodically.

Your browser does not support the video tag.

Video: This video demonstrates the key features of the Skullcandy Jib Wireless earbuds, including battery life, in-line microphone, and Bluetooth connectivity, which are relevant for setup and operation.

OPERATING YOUR EARBUDS

In-Line Remote Functions

The in-line remote provides convenient control over your audio and calls:

- **Power On/Off:** Press and hold the multi-function button.
- **Play/Pause Music:** Press the multi-function button once.
- **Next Track:** Press and hold the "+" button.
- **Previous Track:** Press and hold the "-" button.
- **Volume Up:** Press the "+" button.
- **Volume Down:** Press the "-" button.
- **Answer/End Call:** Press the multi-function button once.
- **Reject Call:** Press and hold the multi-function button.



Image: A detailed view of the in-line remote control on the Skullcandy Jib Wireless earbuds, highlighting the multi-function button and volume controls.

MAINTENANCE

To ensure the longevity and optimal performance of your Skullcandy Jib Wireless earbuds, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the earbuds and ear gels with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the earbuds in a clean, dry place away from extreme temperatures and direct sunlight.
- **Water Exposure:** While designed for general use, avoid submerging the earbuds in water. Excessive moisture can damage internal components.
- **Cable Care:** Avoid sharp bends or excessive pulling on the cables to prevent internal wire damage.

TROUBLESHOOTING

If you encounter issues with your Jib Wireless earbuds, try the following steps:

- **No Power:** Ensure the earbuds are fully charged using the provided Micro USB cable.
- **Cannot Pair:** Make sure the earbuds are in pairing mode (LED flashing blue and red). Turn off and on your device's Bluetooth, then try pairing again. Ensure the earbuds are not already connected to another device.

- **No Sound:** Check the volume levels on both your earbuds and your connected device. Ensure the earbuds are properly paired and connected.
- **Poor Sound Quality:** Ensure the ear gels provide a secure seal in your ear. Try different sized ear gels for a better fit. Move closer to your connected device to improve Bluetooth signal strength.
- **Intermittent Connection:** Reduce the distance between your earbuds and the connected device. Avoid obstacles that may interfere with the Bluetooth signal.

If problems persist, refer to the Skullcandy support website for further assistance.

SPECIFICATIONS

Model Name	SCS2DUW-K003
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Battery Life	Up to 6 Hours
Charging Time	6 Hours
Microphone	Yes (In-line)
Control Type	Call Control, Track Control, Volume Control
Noise Control	Sound Isolation
Ear Placement	In Ear
Impedance	16 Ohms
Item Weight	0.332 ounces (9.4 Grams)
Product Dimensions	3.23 x 0.91 x 7.28 inches
UPC	878615090118

Note: The "Charging Time" specification from the source data appears to be identical to "Battery Life". Typically, charging time is shorter than playback time. Please refer to the official Skullcandy website or product packaging for the most accurate charging time information.

WARRANTY AND SUPPORT

The Skullcandy Jib Wireless In-Ear Earbuds come with a**2-year warranty**. This warranty covers manufacturing defects and ensures your product performs as expected under normal use.

For warranty claims, technical support, or additional product information, please visit the official Skullcandy support website or contact their customer service. Keep your proof of purchase for warranty validation.

For more information, visit: [Skullcandy Support](#)

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question