

[Manuals.plus](#) /

› [Geyes](#) /

› Geyes Portable Folding Wireless Keyboard User Manual

Geyes 608

Geyes Portable Folding Wireless Keyboard User Manual

Model: GK608

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Geyes Portable Folding Wireless Keyboard. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.

The Geyes Portable Folding Wireless Keyboard is a compact and versatile input device designed for use with various operating systems, including iOS, Android, and Windows. Its foldable design and lightweight aluminum alloy construction make it highly portable, ideal for users on the go.

PRODUCT OVERVIEW



Figure 1: The Geyes Portable Folding Wireless Keyboard in its unfolded state, featuring a smartphone securely placed in the integrated kickstand. This image demonstrates the keyboard's full size and layout when ready for use.



Figure 2: A comparison view showing the Geyes keyboard both in its compact folded state and its expanded, ready-to-use configuration. This highlights the portability and space-saving design.

Key Features:

- **Foldable Design:** Ultra-slim and lightweight aluminum alloy construction for maximum portability.
- **Wireless Connectivity:** Bluetooth (BT) connectivity for seamless pairing with compatible devices.
- **Wide Compatibility:** Supports iOS, Android, and Windows operating systems.
- **Integrated Kickstand:** Built-in stand to securely hold smartphones and tablets for optimal viewing angles.
- **Rechargeable Battery:** Long-lasting internal battery for extended use.
- **Full-Size Layout:** Provides a comfortable typing experience similar to a standard keyboard.

PACKAGE CONTENTS

Please verify that all items are present in the package:

- Geyes Portable Folding Wireless Keyboard
- Micro USB Charging Cable
- User Manual (this document)



Figure 3: The Geyes Portable Folding Wireless Keyboard shown alongside its included Micro USB charging cable, illustrating the complete package contents.

SETUP

1. Charging the Keyboard

1. Locate the Micro USB port on the side of the keyboard.
2. Connect the provided Micro USB cable to the keyboard's charging port.
3. Connect the other end of the USB cable to a USB power source (e.g., computer USB port, USB wall adapter).
4. The charging indicator light will illuminate. Once fully charged, the light will typically change color or turn off. A full charge provides approximately 64 hours of continuous use or 100 days of standby time.



Figure 4: Close-up view of the Geyes Portable Folding Wireless Keyboard, highlighting the Micro USB charging port for power input.

Excellent Battery Life

64 hours
continuous use

100 Days
Standby Time



Figure 5: An illustration depicting the excellent battery life of the Geyes keyboard, indicating 64 hours of continuous use and 100 days of standby time.

2. Powering On/Off

- **To Power On:** Unfold the keyboard. The keyboard will automatically power on.
- **To Power Off:** Fold the keyboard. The keyboard will automatically power off.

3. Bluetooth Pairing

1. Ensure the keyboard is powered on (unfolded).
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Press the **Fn + C** keys simultaneously on the keyboard to enter pairing mode. The Bluetooth indicator light will blink.
4. On your device, search for available Bluetooth devices. The keyboard will appear as "Geyes Keyboard" or similar.
5. Select the keyboard from the list to pair. If prompted, enter the displayed pairing code on the Geyes keyboard and press **Enter**.
6. Once successfully paired, the Bluetooth indicator light will stop blinking and remain solid or turn off, depending on the model.



Figure 6: The Geyes Portable Folding Wireless Keyboard highlighting its compatibility with Android, Windows, and iOS operating systems, indicating broad device support.

4. Selecting Operating System Mode

To optimize keyboard functionality for your specific device, select the correct operating system mode:

- For Android devices: Press **Fn + Q**
- For Windows devices: Press **Fn + W**
- For iOS devices: Press **Fn + E**

OPERATING THE KEYBOARD

Typing and Function Keys

The Geyes keyboard features a standard QWERTY layout. Many keys have secondary functions accessible by pressing

the **Fn** key in combination with another key.



Figure 7: A user's hands positioned on the Geyes Portable Folding Wireless Keyboard, demonstrating the comfortable typing experience with a smartphone securely held in the integrated kickstand.

Common Function Key Combinations:

- **Fn + F1-F12:** Access multimedia controls, volume adjustments, screen brightness, and other system functions. Refer to the key legends for specific functions.
- **Fn + Q/W/E:** Switch between Android, Windows, and iOS operating system modes.
- **Fn + C:** Enter Bluetooth pairing mode.

Using the Integrated Kickstand

The keyboard includes a hidden kickstand designed to hold your smartphone or tablet at an optimal viewing angle. To deploy the kickstand, gently pull it out from the top edge of the keyboard's base. Place your device securely in the groove.

MAINTENANCE

Cleaning

- Use a soft, dry, lint-free cloth to wipe the surface of the keyboard.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive materials, as these can damage the keyboard's finish.
- Use compressed air to remove debris from between the keys.

Storage

- When not in use, fold the keyboard to protect the keys and conserve battery life.
- Store the keyboard in a cool, dry place, away from direct sunlight and extreme temperatures.
- Avoid placing heavy objects on the keyboard when stored.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard does not power on.	Battery is depleted.	Charge the keyboard using the provided Micro USB cable.
Keyboard does not connect via Bluetooth.	Bluetooth is not enabled on the device. Keyboard is not in pairing mode. Device is out of range. Interference from other devices.	Ensure Bluetooth is enabled on your device. Press Fn + C to enter pairing mode. Move the keyboard closer to your device (within 10 meters/32.8 feet). Move away from other wireless devices.
Keys are not responding or typing incorrectly.	Incorrect operating system mode selected. Low battery. Connection issue.	Press Fn + Q (Android), Fn + W (Windows), or Fn + E (iOS) to select the correct mode. Charge the keyboard. Disconnect and re-pair the keyboard with your device.
Keyboard frequently disconnects.	Low battery. Device is out of range. Bluetooth interference.	Charge the keyboard. Move the keyboard closer to your device. Ensure no strong wireless signals are interfering.

SPECIFICATIONS

Feature	Detail
Model Name	GK608
Connectivity Technology	Bluetooth (BT)
Keyboard Layout	QWERTY
Operating Systems Supported	iOS, Android, Windows
Product Dimensions (Unfolded)	8.74"L x 6.69"W x 0.23"H (22.2 x 17 x 0.58 cm)
Product Dimensions (Folded)	6.69"L x 2.16"W x 0.78"H (17 x 5.5 x 2 cm)
Item Weight	7 ounces (198.45 grams)
Battery Life (Continuous Use)	Up to 64 hours
Battery Life (Standby)	Up to 100 days
Charging Port	Micro USB

Feature	Detail
Bluetooth Range	More than 10 meters (32.8 feet)

Product Size

Weight: 7.05 oz

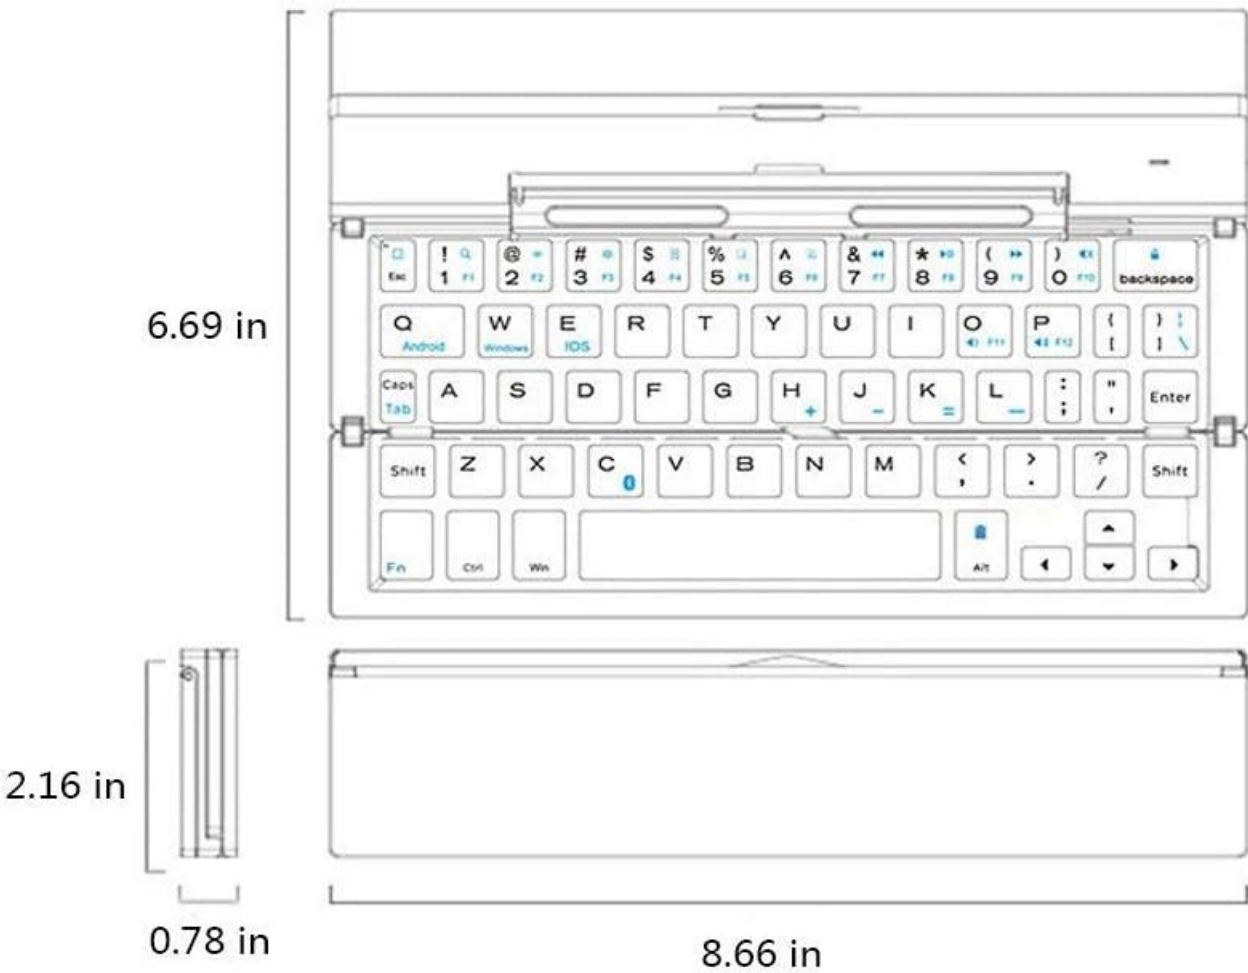


Figure 8: A diagram illustrating the dimensions of the Geyes Portable Folding Wireless Keyboard, including its length, width, and thickness in both unfolded and folded states.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Geyes website or contact Geyes customer service directly. Contact details may be found on the product packaging or the official brand website.

Geyes Official Store: [Visit Geyes Store on Amazon](#)

User Manual (PDF): [Download PDF Manual](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question