

Composad CT 2651

Composad Mi-Piace 4-Drawer Chest Instruction Manual

Model: CT 2651 | Brand: Composad

			Introduction	Safety Information	Package		
Contents	Assembly	Operation	Maintenance	Troubleshooting	Specifications	Warranty & Support	

1. INTRODUCTION

Thank you for purchasing the Composad Mi-Piace 4-Drawer Chest, Model CT 2651. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.



2. SAFETY INFORMATION

- **Anti-Tip Device:** Always secure the chest to a wall using the provided anti-tip device. This prevents serious injury from tipping furniture.
- **Weight Limits:** Do not overload drawers. Distribute weight evenly. The top surface has a maximum weight capacity; refer to specifications.
- **Assembly:** Assemble the product on a soft, clean surface to prevent scratches. Ensure all fasteners are tightened securely before use.
- **Children:** Keep small parts and packaging materials away from children during assembly. Do not allow children to climb on or play with the chest.
- **Placement:** Place the chest on a level surface to ensure stability.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components and hardware are present and undamaged. Refer to the parts list and hardware diagram included in your product packaging. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

4. ASSEMBLY INSTRUCTIONS

Assembly of the Composad Mi-Piace 4-Drawer Chest requires two people. Follow the step-by-step diagrams and instructions provided in the separate assembly guide included with your product. General steps include:

1. **Unpack and Identify:** Carefully unpack all components and lay them out on a protected surface. Identify each part using the provided labels and diagrams.
2. **Assemble Frame:** Connect the side panels, back panel, and top/bottom panels according to the instructions, ensuring all cam locks and dowels are properly aligned and secured.
3. **Install Drawer Slides:** Attach the drawer slides to the inner sides of the chest frame. Ensure they are level and correctly oriented.
4. **Assemble Drawers:** Construct each of the four drawers, attaching the drawer sides, back, bottom, and front panel. Install the drawer slides onto the assembled drawers.
5. **Insert Drawers:** Carefully slide the assembled drawers into the chest frame.
6. **Attach Handles:** Secure the handles to the front of each drawer.
7. **Install Anti-Tip Device:** Crucially, attach the anti-tip device to the back of the chest and securely fasten it to a wall stud using appropriate hardware.



Figure 2: Detail of the Beton/White High Gloss finish and wood grain on the chest.

5. OPERATING INSTRUCTIONS

The Composad Mi-Piace chest features four smooth-gliding drawers for storage. To operate:

- **Opening Drawers:** Gently pull the handle of the desired drawer outwards. Avoid excessive force.
- **Closing Drawers:** Push the drawer inwards until it is fully closed and flush with the chest frame.
- **Loading:** Distribute items evenly within the drawers. Avoid placing heavy items at the front of the drawer to prevent tipping when open.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or polishes that may damage the finish. Dry immediately with a clean cloth.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood and high-gloss surfaces.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration.
- **Heat and Moisture:** Keep the chest away from direct heat sources and areas of high humidity to prevent warping or damage.
- **Fasteners:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as necessary.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Misaligned drawer slides, loose fasteners, obstruction.	Check that drawer slides are correctly installed and aligned. Ensure all fasteners are tight. Remove any obstructions.

Problem	Possible Cause	Solution
Chest feels unstable or wobbly.	Uneven floor, loose fasteners, anti-tip device not installed.	Ensure the chest is on a level surface. Tighten all assembly fasteners. Verify the anti-tip device is securely attached to the wall.
Drawer does not close completely.	Overloaded drawer, obstruction, misaligned drawer front.	Reduce drawer contents. Check for items blocking the drawer. Adjust drawer front if necessary (refer to assembly guide).

8. SPECIFICATIONS

Brand:	Composad
Model Number:	CT 2651
Product Dimensions (L x W x H):	40 x 90 x 113 cm
Item Weight:	59 Kilograms
Material:	Wood
Color:	Beton/White High Gloss
Number of Drawers:	4
Assembly Required:	Yes
Finish Type:	Brilliant (High Gloss)

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Composad website. If you require assistance with assembly, missing parts, or have any questions about your Composad Mi-Piace 4-Drawer Chest, please contact Composad customer support directly. Contact details can typically be found on the product packaging or the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question