

EtoBesy B06XY917BF

EtoBesy Mini Portable Wireless Cube Speaker

INSTRUCTION MANUAL

Model: B06XY917BF

Introduction

Thank you for purchasing the EtoBesy Mini Portable Wireless Cube Speaker. This device combines Bluetooth audio streaming, TF card playback, AUX input, FM radio, and hands-free calling in a compact design with colorful LED lighting. Please read this manual carefully to ensure proper use and optimal performance.

What's in the Box

- 1 x Wireless Bluetooth 4.0 Radio Speaker
- 1 x Audio Cable
- 1 x USB Charging Cable
- 1 x User Manual (this document)

Product Overview

The EtoBesy Mini Portable Wireless Cube Speaker features a unique cube design with integrated controls and ports. Understanding these components is essential for operation.

Ports and Connections

The speaker includes several ports for various connectivity options:

- **LINE IN:** 3.5mm audio input for connecting external devices via AUX cable.
- **DC-5V:** Micro USB port for charging the speaker.
- **TF CARD:** Slot for inserting a TF (Micro SD) memory card to play MP3 files directly.

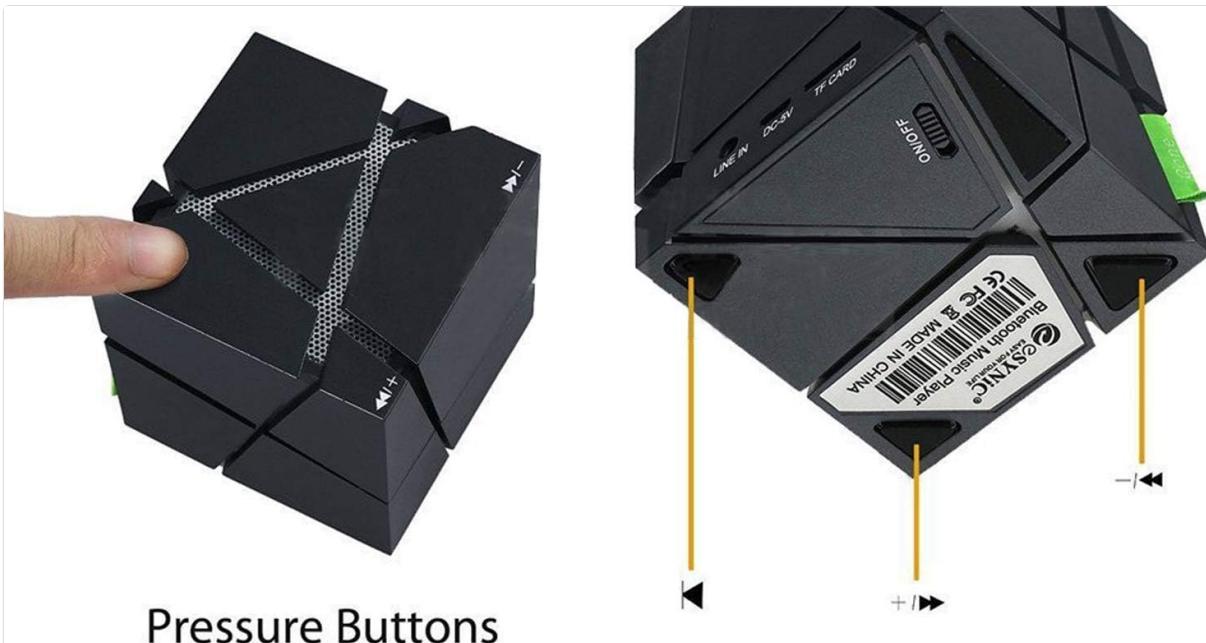


Image: Rear view of the speaker showing the LINE IN, DC-5V charging, and TF CARD slots.

Control Buttons

The speaker's control buttons are integrated into its design, specifically located on the feet of the device. These are pressure-sensitive buttons.

- **Minus Button (-):** Used to decrease volume or navigate tracks. Double-pressing this button turns off the LED lights.
- **Plus Button (+):** Used to increase volume or navigate tracks.
- **Play/Pause Button:** Controls media playback and answers/ends calls.



Pressure Buttons

The buttons are actually the feet.

1, Press the **MINUS** button twice in succession to **turn off** the light.

2, It's quite a load little speaker and the bass can make it **JUMP**. To stop this from happening, remove the **plastic film** from the feet.

Image: Underside of the speaker, illustrating the pressure buttons (feet) and the power switch.

Setup

Initial Charging

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the DC-5V port on the speaker and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The charging indicator light will show the charging status.

Powering On/Off

Locate the power switch on the underside of the speaker (refer to the "Control Buttons" image). Slide the switch to the "ON" position to power on the speaker. Slide it to the "OFF" position to power off.

Operating Instructions

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (it usually defaults to this mode upon power-on). A voice prompt or indicator light will confirm.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.

3. Select "EtoBesy Speaker" or a similar name from the list of devices.
4. Once paired, the speaker will indicate a successful connection, and you can begin playing audio wirelessly.

The speaker supports Bluetooth 4.0 technology with a transmission distance of up to 10 meters (32.8 feet).



Image: The speaker demonstrating Bluetooth connectivity with multiple devices.

TF Micro SD Card Playback

To play music directly from a memory card:

1. Insert a TF (Micro SD) card containing MP3 audio files into the TF CARD slot.
2. The speaker will automatically detect the card and begin playing the audio files.
3. Use the Plus (+) and Minus (-) buttons to skip tracks and the Play/Pause button to control playback.

AUX Input

For wired audio connection:

1. Connect one end of the supplied audio cable to the LINE IN port on the speaker.
2. Connect the other end of the audio cable to the 3.5mm audio output jack of your external device.
3. The speaker will automatically switch to AUX mode.

FM Radio

To use the built-in FM radio function:

1. Ensure the speaker is powered on.
2. Press the Mode button (if available, or cycle through modes using the Play/Pause button if it has multiple functions) until you hear the FM radio.
3. Use the Plus (+) and Minus (-) buttons to scan for radio stations.

Colorful LED Lights

The speaker features dynamic colorful LED lights. To turn off the lights, press the **Minus (-) button twice in quick succession**.



Image: The speaker showcasing its colorful LED light feature.

Your browser does not support the video tag.

Video: A demonstration of the EtoBesy Cube Speaker's sound quality and dynamic LED lighting effects in a dark environment.

Hands-free Calling

When connected via Bluetooth to your smartphone, the built-in microphone allows for hands-free phone

calls. Press the Play/Pause button to answer or end a call.

Charging

To charge the speaker, connect the provided USB charging cable to the DC-5V port on the speaker and to a standard USB power source. The charging indicator will illuminate during charging and turn off or change color when fully charged. A full charge typically takes a few hours.

Maintenance

- Keep the speaker away from water and excessive moisture. The product is not waterproof.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the speaker to extreme temperatures.
- When not in use for extended periods, store the speaker in a cool, dry place and charge it periodically to maintain battery health.

Troubleshooting

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the USB charging cable. Verify the power switch is in the "ON" position.
Cannot pair via Bluetooth.	Make sure the speaker is in Bluetooth pairing mode. Ensure Bluetooth is enabled on your device and it is within 10 meters of the speaker. Try restarting both the speaker and your device.
No sound or low volume.	Check the volume levels on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, TF, AUX) is selected.
LED lights are not working or stuck.	Double-press the Minus (-) button to cycle the lights or turn them off and on again.
Speaker "jumps" due to bass.	Remove any plastic film from the feet of the speaker to ensure stable placement.

Specifications

Brand	EtoBesy
Model Name	Mini Portable Wireless Cube Speaker
Model Number	B06XY917BF
Connectivity Technology	Auxiliary, Bluetooth, USB

Wireless Communication Technology	Bluetooth 4.0
Bluetooth Range	Up to 10 meters (32.8 feet)
Speaker Type	3D Stereo
Special Feature	Colorful LED Light, Hands-free Calling, FM Radio, TF Card Playback
Power Source	Battery Powered (Built-in lithium battery)
Battery Capacity	500 Milliamp Hours
Input Voltage	5 Volts
Speaker Maximum Output Power	3 Watts
Frequency Response	150 KHz
Product Dimensions	2.75"D x 2.75"W x 2.75"H
Item Weight	8.5 Ounces
Is Waterproof	No



Image: Dimensional diagram of the EtoBesy Cube Speaker.

Warranty and Support

This product comes with a limited warranty. For warranty claims or technical support, please refer to the contact information provided at the point of purchase or visit the official EtoBesy website.