

[Manuals.plus](#) /

> [LG](#) /

> LG DP132 Region Free DVD Player User Manual

## LG DP-132

# LG DP132 Region Free DVD Player User Manual

Model: DP-132

Brand: LG

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your LG DP132 Region Free DVD Player. Designed to play DVDs from various regions, including PAL and NTSC formats, this player also features a convenient USB input for multimedia playback.

Key features include:

- Region-free DVD playback (PAL/NTSC compatible)
- USB input for media files
- Compact design

## WHAT'S IN THE BOX

Please check that all items are present:

- LG DP132 DVD Player
- Remote Control
- RCA Audio/Video Cable
- User Manual (this document)



Image: Front view of the LG DP132 DVD Player, showing the disc tray, power button, and USB port.





Image: The remote control for the LG DP132 DVD Player, featuring buttons for power, play, pause, stop, menu navigation, volume, and other functions.



Image: A set of RCA audio/video cables, typically red, white, and yellow, used for connecting the DVD player to a television.

## SETUP

### 1. Connecting to Your TV

The LG DP132 DVD Player connects to your television using RCA audio/video cables. Ensure your TV has corresponding input ports (yellow for video, white for left audio, red for right audio).

1. Locate the "VIDEO OUT" (yellow), "AUDIO OUT L" (white), and "AUDIO OUT R" (red) ports on the back of the DVD player.
2. Connect the yellow plug of the RCA cable to the yellow "VIDEO OUT" port on the DVD player.
3. Connect the white plug to the white "AUDIO OUT L" port and the red plug to the red "AUDIO OUT R" port on the DVD player.
4. Connect the other end of the RCA cable to the corresponding "VIDEO IN" and "AUDIO IN" ports on your television.

### 2. Power Connection

After connecting the audio/video cables, plug the power cord of the DVD player into a standard electrical outlet.

### 3. Initial Power On

Press the **POWER** button on the front of the DVD player or on the remote control. The player will power on, and you should see the LG logo or a setup screen on your TV.

### 4. TV Input Selection

On your television, select the correct input source (e.g., AV1, Video, Input, Source) that corresponds to where you connected the DVD player. Refer to your TV's manual if you are unsure.

## OPERATING INSTRUCTIONS

### Playing a DVD

1. Press the **OPEN/CLOSE** button on the front of the player or on the remote control to open the disc tray.
2. Place a DVD disc gently onto the disc tray with the label side facing up.
3. Press the **OPEN/CLOSE** button again to close the tray.
4. The player will automatically begin reading the disc. If a menu appears, use the arrow buttons on the remote to navigate and the **ENTER** button to select.
5. Use the **PLAY**, **PAUSE**, **STOP**, **FAST FORWARD**, and **REWIND** buttons on the remote for playback control.

### Using the USB Input

The LG DP132 features a USB input on the front panel, allowing you to play compatible media files from a USB flash drive.

1. Insert your USB flash drive into the USB port on the front of the DVD player.
2. The player should automatically detect the USB device and display a menu for media selection (e.g., Photos, Music, Movies).
3. Use the arrow buttons and **ENTER** button on the remote to navigate and select the desired file.
4. Supported file formats include MP4 and AVI for video, and various audio formats.

### Remote Control Functions

Familiarize yourself with the remote control buttons for full functionality:

- **POWER:** Turns the player on or off.
- **OPEN/CLOSE:** Opens and closes the disc tray.
- **PLAY/PAUSE/STOP:** Controls disc playback.
- **ARROW BUTTONS (Up/Down/Left/Right) & ENTER:** For menu navigation and selection.
- **DVD MENU/TITLE:** Accesses the DVD's main menu or title menu.
- **AUDIO:** Changes audio tracks or languages.
- **SUBTITLE:** Toggles or selects subtitle tracks.
- **SETUP:** Accesses the player's system settings menu.
- **DISPLAY:** Shows playback information on screen.

## MAINTENANCE

### Cleaning the Unit

To maintain the performance and appearance of your DVD player, follow these cleaning guidelines:

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces. Do not use liquid cleaners, aerosol sprays, or strong chemical solvents, as these may damage the finish.
- For stubborn marks, lightly dampen the cloth with water and then wipe dry immediately.
- Do not attempt to clean the inside of the disc tray or the lens. If the player is not reading discs properly, consult the troubleshooting section or contact customer support.

### Disc Care

Handle discs by their edges to avoid fingerprints. Keep discs clean and free of scratches. Store discs in their cases when not in use.

## TROUBLESHOOTING

If you experience issues with your LG DP132 DVD Player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not securely plugged in.	Ensure the power cord is firmly connected to the player and the electrical outlet.
No picture on TV	Incorrect TV input selected; A/V cables not connected properly.	Select the correct input source on your TV (e.g., AV1, Video). Check that the RCA cables are securely connected to both the player and the TV, matching colors.
No sound	Audio cables not connected; TV or player volume too low/muted.	Ensure the white and red RCA audio cables are connected. Check the volume levels on both the DVD player and your TV. Ensure neither is muted.
Disc does not play or "No Disc" error	Disc is dirty, scratched, or inserted incorrectly; incompatible disc format.	Clean the disc with a soft, lint-free cloth. Ensure the disc is inserted label-side up. Try a different disc. Verify the disc format is supported (DVD, CD, CD-R/RW).
Remote control not working	Batteries are dead or inserted incorrectly; obstruction between remote and player; remote not pointed directly at sensor.	Replace the batteries with new ones, ensuring correct polarity. Remove any obstructions. Point the remote directly at the player's front panel sensor.

Problem	Possible Cause	Solution
USB device not recognized	USB drive not formatted correctly; incompatible file types; drive too large or requires too much power.	Ensure the USB drive is formatted to FAT32. Check that the media files are supported (MP4, AVI). Try a different USB drive.

## SPECIFICATIONS

Feature	Detail
Model Number	DP-132
Brand	LG
Product Dimensions	11 x 9 x 3 inches
Item Weight	2 pounds
Media Type	DVD, CD, CD-R/RW
Special Feature	Compact, Region Free Playback (PAL/NTSC)
Connector Type	USB, RCA Audio/Video
Connectivity Technology	USB
Color	Black
Audio Output Mode	Stereo, Multi-channel
Supported File Format (USB)	MP4, AVI
On-mode power consumption	9 watts

## WARRANTY AND SUPPORT

### Manufacturer's Warranty

For information regarding the manufacturer's warranty for your LG DP132 DVD Player, please refer to the warranty card included with your product or visit the official LG website. Warranty terms and conditions may vary by region.

### Customer Support

If you require further assistance or have questions not covered in this manual, please contact LG customer support. Contact information can typically be found on the LG official website or on your product packaging. You may also visit the [LG Store on Amazon](#) for additional product information and resources.

