

Dibeia KB-9008

Dibeia KB-9008 Cordless Upright Vacuum Cleaner User Manual

Model: KB-9008

INTRODUCTION

Thank you for choosing the Dibeia KB-9008 Cordless Upright Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors. Put away after use to prevent accidents.
- Use only the charger supplied by the manufacturer to recharge.

PRODUCT COMPONENTS

The Dibea KB-9008 Cordless Upright Vacuum Cleaner comes with several components designed for versatile cleaning. Familiarize yourself with each part before assembly and operation.



Figure 1: The package includes the main vacuum unit, a charging base, power adapter, crevice tool, and the user manual.

Included Accessories:

- Main Vacuum Unit (Upright and Handheld)
- Charging Base
- Power Adapter
- Crevice Tool

- Bristle Brush
- User Manual

ASSEMBLY INSTRUCTIONS

Your Dibeas KB-9008 vacuum cleaner is designed for easy assembly. Follow these steps to set up your device:

1. **Attach the Handle:** Align the handle with the main body of the vacuum and push firmly until it clicks into place.
2. **Connect the Floor Nozzle:** Insert the main vacuum unit into the floor nozzle until it securely locks.
3. **Install the Charging Base:** Place the charging base in a convenient location near a power outlet.

Ensure all connections are secure before operating the vacuum cleaner.

CHARGING THE BATTERY

Before first use, fully charge the vacuum cleaner for optimal performance. The Dibeas KB-9008 features a rechargeable 2200mAh Li-ion battery.

1. Place the vacuum cleaner onto the charging base.
2. Connect the power adapter to the charging base and then plug it into a wall outlet.
3. The charging indicator light will illuminate, indicating that the vacuum is charging.
4. Allow the vacuum to charge completely. Charging time may vary.

Your browser does not support the video tag.


Video 1: This video demonstrates the versatile features of the Dibeas KB-9008, including its cordless convenience, multi-surface cleaning capability, flexible swivel steering, detachable handheld vacuum function with various attachments, two-speed control, long-lasting battery, one-click trash emptying, and space-saving folded storage. The charging process is shown at approximately 1:16.

OPERATING THE VACUUM CLEANER

The Dibeas KB-9008 offers flexible cleaning options as both an upright stick vacuum and a detachable handheld unit.

1. Upright Mode

For general floor cleaning on carpets and hard floors, use the vacuum in its upright configuration.

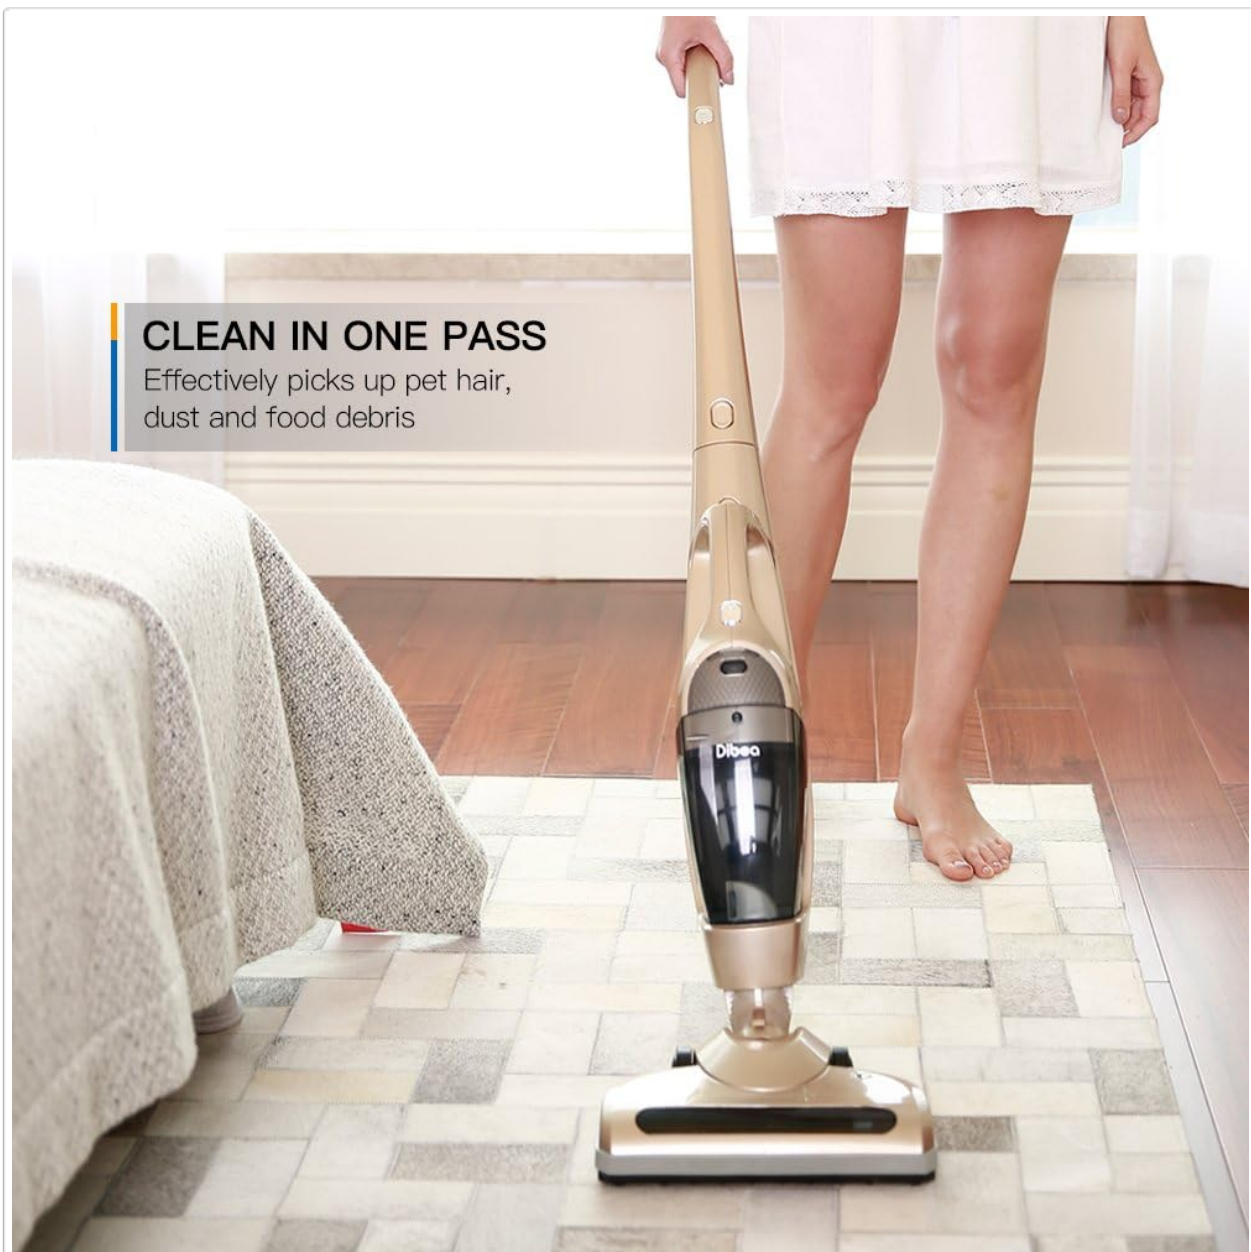

CLEAN IN ONE PASS

Effectively picks up pet hair,
dust and food debris

Figure 2: The Dibeo KB-9008 in upright mode, effectively cleaning a rug. This mode is suitable for general floor cleaning.

- Press the power button on the handle to turn on the vacuum.
- Utilize the flexible swivel steering to maneuver around furniture and obstacles.



Figure 3: The flexible swivel steering allows the vacuum to maneuver easily around and under furniture, reaching difficult spots.

2. Handheld Mode

To clean smaller areas, upholstery, or tight spaces, detach the handheld unit.



REMOVABLE HAND VAC

Clean curtains, sofa and cars with equipped crevice tool and stiff brush.

Figure 4: The vacuum easily converts to a handheld unit, ideal for cleaning curtains, upholstery, and car interiors with the crevice tool or stiff brush.

1. Press the release button to detach the handheld unit from the main body.
2. Attach the desired accessory (crevice tool or bristle brush) to the nozzle of the handheld unit.
3. Press the power button to begin cleaning.

3. Two-Speed Control

Adjust the suction power based on your cleaning needs.



Figure 5: Features a non-slip handle for comfortable grip and a two-speed control button to adjust suction power for different cleaning needs.

- The vacuum features a two-speed control button, typically located near the handle.
- Press the button to toggle between standard and high suction modes.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Dibeo KB-9008 vacuum cleaner.

1. Emptying the Dustbin

Empty the dustbin regularly to maintain strong suction and prevent blockages.

1. Ensure the vacuum is turned off.
2. Locate the dustbin release button, usually near the dustbin.
3. Press the button to open the dustbin and empty its contents into a trash receptacle.
4. Close the dustbin securely until it clicks.

2. Cleaning the Filter

The washable filter should be cleaned periodically to maintain air flow and suction power.



Figure 6: The vacuum's filter is washable, allowing for easy maintenance and prolonged filter life. Ensure the filter is completely dry before reinserting.

1. Remove the dustbin from the handheld unit.
2. Carefully remove the filter assembly from the dustbin.
3. Tap the filter gently to remove loose dirt.
4. Rinse the filter under cool running water until the water runs clear.
5. Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use a dryer or other heating methods.
6. Reassemble the filter and dustbin, then reattach to the vacuum.

STORAGE

The Dibeas KB-9008 is designed for convenient, space-saving storage.

- The vacuum features a foldable body for compact storage.
- To fold, locate the folding mechanism on the main body and activate it to collapse the vacuum.
- Store the vacuum in a dry, cool place, preferably on its charging base to ensure it's ready for next use.

TROUBLESHOOTING

If you encounter issues with your Dibeas KB-9008, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted; Power button not pressed; Charging issue.	Charge the battery fully; Ensure power button is pressed firmly; Check charger connection and power outlet.
Low suction power	Dustbin full; Filter clogged; Blockage in nozzle or hose.	Empty the dustbin; Clean or replace the filter; Remove any blockages.
Vacuum stops during operation	Battery depleted; Overheating.	Recharge the battery; Turn off the vacuum and allow it to cool down for at least 30 minutes.
Brush roll not spinning	Hair or debris tangled; Brush roll jammed.	Turn off and unplug the vacuum. Carefully remove any tangled hair or debris from the brush roll.

PRODUCT SPECIFICATIONS

Below are the technical specifications for the Dibea KB-9008 Cordless Upright Vacuum Cleaner:

Feature	Specification
Brand	Dibea
Model Number	SVC-KB9008-A
Surface Recommendation	Carpet, Hard Floor
Power Source	Battery Powered
Voltage	12 Volts
Included Components	Crevice Tool
Capacity	500 Milliliters
Color	Gold
Noise Level	60 Decibels
Wattage	100 watts
Item Weight	6.8 Pounds

WARRANTY INFORMATION

Dibea products are manufactured to the highest quality standards. This product is covered by a limited warranty from the date of purchase. Please refer to the warranty card included in your packaging for specific terms and conditions. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Dibeas customer service. Contact information can typically be found on the official Dibeas website or on the product packaging.

Website: Visit the Dibeas Store on Amazon