

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [WarnerBrothers](#) /
- › [Max/Max 2 \(Double Feature\) DVD Instruction Manual](#)

## WarnerBrothers B06Y1GTNPF

# Max/Max 2 (Double Feature) DVD Instruction Manual

Model: B06Y1GTNPF

## INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Max/Max 2 (Double Feature) DVD. Please read this guide thoroughly before use to ensure optimal viewing experience and longevity of your product.



This image displays the front cover of the Max/Max 2 Double Feature DVD. It features a prominent image of a German Shepherd dog, representing the main character Max, with movie titles and branding.

## SETUP INSTRUCTIONS

- 1. Unpack the DVD:** Carefully remove the DVD disc from its packaging. Avoid touching the playback surface of the disc.
- 2. Prepare Your DVD Player:** Ensure your DVD player is connected to your television or display device and is powered on. Refer to your DVD player's manual for specific connection instructions if needed.
- 3. Insert the DVD:** Open the disc tray of your DVD player and place the Max/Max 2 DVD with the label side facing up. Gently close the disc tray.

4. **Power On:** Turn on your television or display device and select the correct input source (e.g., HDMI 1, AV) that your DVD player is connected to.

## OPERATING INSTRUCTIONS

Once the DVD is inserted and your player is powered on, the disc should load automatically. You will typically see a main menu.

- **Navigating Menus:** Use the arrow keys (Up, Down, Left, Right) on your DVD player's remote control to highlight options on the screen. Press the "Enter" or "OK" button to select an option.
- **Selecting a Movie:** From the main menu, select either "Max" or "Max 2" to begin playback of the desired film.
- **Language and Subtitles:** Most DVDs offer language and subtitle options. These can usually be accessed from the main menu or by pressing the "Audio" or "Subtitle" button on your remote during playback.
- **Playback Controls:**
  - **Play/Pause:** Press the "Play" or "Pause" button to start or temporarily stop the movie.
  - **Stop:** Press the "Stop" button to end playback and return to the main menu or disc start.
  - **Fast Forward/Rewind:** Use the "FF" (Fast Forward) or "RW" (Rewind) buttons to quickly move through the movie.
  - **Chapter Skip:** Use the "Next Chapter" or "Previous Chapter" buttons to jump between scenes.

## MAINTENANCE AND CARE

Proper care of your DVD will ensure its longevity and consistent performance.

- **Handling:** Always hold the DVD by its edges or by placing a finger through the center hole. Avoid touching the shiny playback surface to prevent fingerprints and scratches.
- **Cleaning:** If the disc becomes dirty, gently wipe the playback surface with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the DVD in its original case when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Bending:** Do not bend or flex the disc, as this can cause irreparable damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Disc does not play or load.	Disc is dirty, scratched, or inserted incorrectly. DVD player malfunction.	Clean the disc carefully. Ensure the disc is inserted label-side up. Try playing another DVD to check if the player is functioning correctly.
No audio or video during playback.	Incorrect input selected on TV. Loose cables. TV or player volume too low/muted.	Verify your TV is on the correct input source. Check all audio/video cables are securely connected. Increase volume on both TV and DVD player. Ensure audio settings on DVD player are correct.

Problem	Possible Cause	Solution
Disc skips or freezes.	Disc is dirty or scratched. Player lens is dirty.	Clean the disc as described in the Maintenance section. If the problem persists, the disc may be damaged. Consider using a DVD lens cleaner for your player.
Remote control not working.	Dead batteries. Obstruction between remote and player.	Replace batteries in the remote control. Ensure there is a clear line of sight between the remote and the DVD player's sensor.

## SPECIFICATIONS

- **MPAA Rating:** PG (Parental Guidance Suggested)
- **Product Dimensions:** 0.7 x 7.5 x 5.4 inches; 2.05 ounces
- **Item Model Number:** B06Y1GTNPF
- **Director:** Various
- **Media Format:** NTSC
- **Run Time:** 3 hours and 42 minutes (combined)
- **Release Date:** May 23, 2017
- **Actors:** Various
- **Dubbed Language:** English
- **Studio:** WarnerBrothers
- **ASIN:** B06Y1GTNPF
- **Number of Discs:** 1
- **Genre:** Kids & Family
- **Language:** English

## WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your DVD purchase or contact the retailer from whom the product was acquired. Specific warranty terms are typically provided by the point of sale or the distributor.

For technical support or inquiries related to the content of the films, please contact WarnerBrothers customer service or visit their official website for assistance.