

## Frigidaire FGID2479SF

# Frigidaire FGID2479SF Dishwasher Instruction Manual

Model: FGID2479SF

## 1. INTRODUCTION

---

Thank you for choosing the Frigidaire FGID2479SF 24" Energy Star Fully Integrated Built-In Dishwasher. This appliance is designed to provide efficient and thorough cleaning for your dishes. It features the innovative OrbitClean® Wash System for comprehensive water coverage and EvenDry™ drying for remarkably dry dishes. The Store-More™ removable third rack offers flexible loading options, and DishSense™ Technology automatically adjusts cycle times for optimal cleaning.



Figure 1.1: Frigidaire FGID2479SF Dishwasher (Front View)

## 2. SAFETY INFORMATION

---

Please read all instructions before using this appliance to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher unless all enclosure panels are properly in place.
- Do not tamper with controls.
- Use only detergents and rinse agents recommended for dishwashers.

- Keep children away from detergent and rinse aid.
- Always use caution when opening the door during or after a wash cycle, as hot steam may escape.

### 3. INSTALLATION

---

The Frigidaire FGID2479SF is a built-in dishwasher and requires professional installation. Ensure proper water supply, drainage, and electrical connections are established according to local codes and the provided installation guide. The unit is designed to fit standard 24-inch wide openings.



Figure 3.1: Dishwasher ready for installation

### 4. OPERATING INSTRUCTIONS

---

#### 4.1 Control Panel Overview

The control panel is located on the top edge of the dishwasher door, providing a sleek, fully integrated look. It features touch controls for cycle selection and options.



Figure 4.1: Control Panel

## 4.2 Wash Cycles and Options

Select the appropriate wash cycle and options based on your load's soil level and dish type.

- **Wash Cycles:** China Crystal, Energy Saver, Favorite Cycle, Heavy, Normal, Quick, Rinse Only.
- **30-Minute Quick Wash:** Ideal for lightly soiled dishes that need a fast clean.
- **EvenDry™ System:** Ensures dishes come out remarkably dry.
- **Delay Start:** Allows you to set the dishwasher to start at a later time.
- **LED Floor Beam Indicator:** A blue light illuminates the floor when the dishwasher is running, and a green light indicates the cycle is complete.

## 5. LOADING THE DISHWASHER

Proper loading is crucial for optimal cleaning performance. The SpaceWise® Adjustable Rack and Store-More™ removable third rack provide flexibility for various dish sizes.

- **Upper Rack:** Ideal for glasses, cups, and smaller bowls. The adjustable rack allows for taller items below.
- **Lower Rack:** Best for plates, larger bowls, and pots and pans.
- **Third Rack:** Use for serving utensils, small cups, and other flat items.



Figure 5.1: Properly Loaded Dishwasher

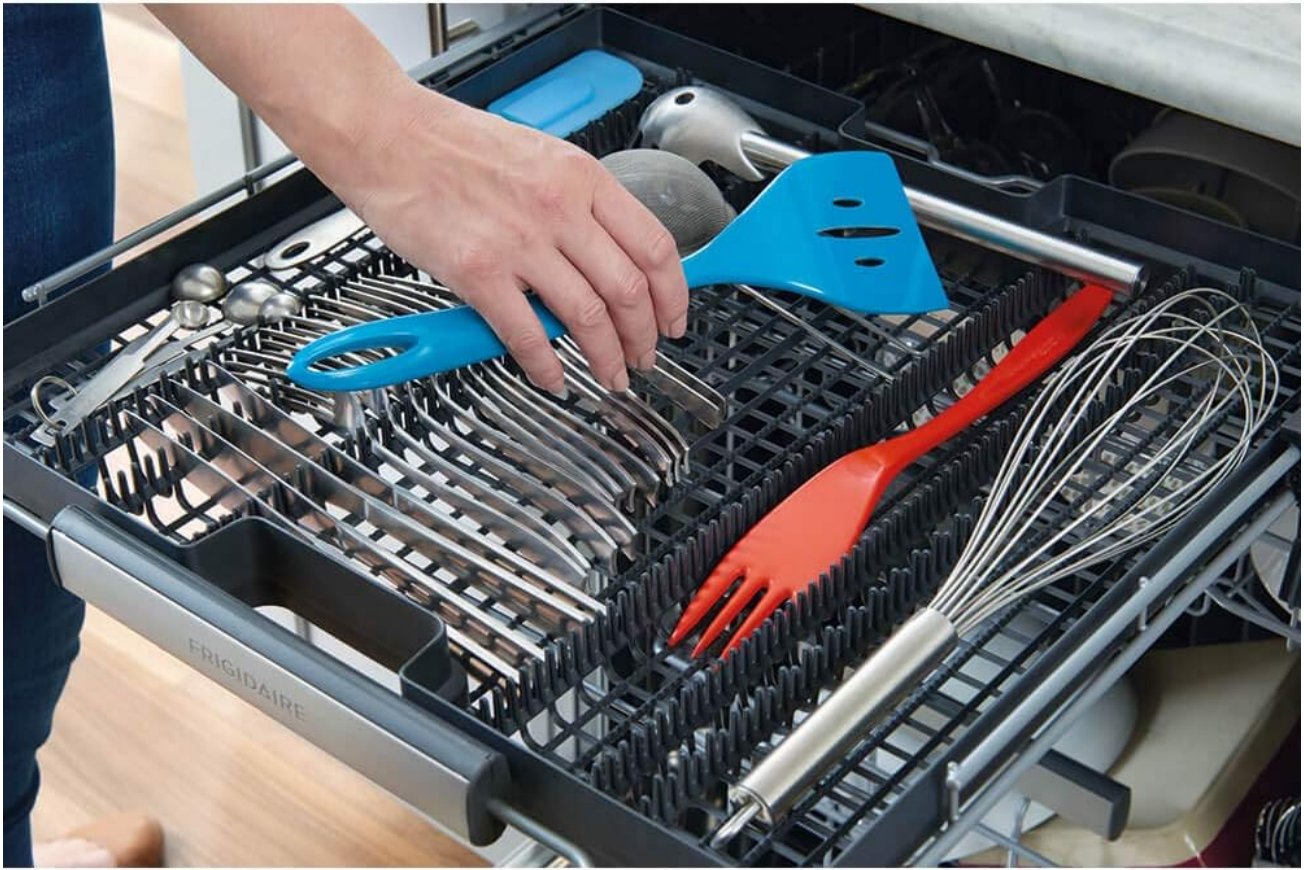


Figure 5.2: Utilizing the Third Rack

## 6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

- **Cleaning the Filter:** The removable stainless steel filter should be cleaned regularly to prevent food particles from redepositing on dishes. Refer to the detailed cleaning instructions in the full user manual.
- **Cleaning the Interior:** Wipe down the stainless steel interior periodically to remove any residue.
- **Exterior Care:** Clean the stainless steel exterior with a soft cloth and a mild cleaner designed for stainless steel to resist fingerprints and maintain its appearance.

## 7. TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the table below for common problems and their solutions. For more complex issues, contact customer support.

Problem	Possible Cause	Solution
Dishwasher does not start or finish cycle	Door not fully closed; power interruption; cycle not properly selected.	Ensure door is latched; check power supply; re-select cycle and press START.
Dishes not clean	Improper loading; clogged filter; insufficient detergent; spray arms blocked.	Review loading instructions; clean filter; use recommended detergent; ensure spray arms rotate freely.

Problem	Possible Cause	Solution
Dishwasher making unusual noise	Foreign object in pump; improper installation; normal operating sounds.	Inspect for foreign objects; verify proper installation; some sounds (e.g., water spray) are normal.
Control panel unresponsive	Temporary electronic glitch; power issue.	Try resetting power to the unit (turn off breaker for 1 minute); if issue persists, contact service.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Name	FGID2479SF
Brand	Frigidaire
Finish Type	Stainless Steel
Form Factor	Built-In
Item Weight	91 Pounds
Voltage	120 Volts
Cycle Options	China Crystal, Energy Saver, Favorite Cycle, Heavy, Normal, Quick, Rinse Only
Display Type	LED
Number of Settings	14 Place Settings
Product Dimensions	24.25 x 24 x 33.75 inches
Noise Level	49 dB
Certification	Energy Star, NSF

## 9. WARRANTY AND CUSTOMER SUPPORT

---

The Frigidaire FGID2479SF Dishwasher is covered under a **1-year parts and labor warranty** from the date of purchase. For warranty claims, technical assistance, or any product-related inquiries, please contact Frigidaire Customer Support. Refer to your purchase documentation for specific contact details or visit the official Frigidaire website.

For additional support and resources, you may visit the [Frigidaire Store on Amazon](#).