

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Landmann](#) /

› [Landmann Vista 560202 Barbecue Grill with Offset Smoker Box Instruction Manual](#)

## Landmann 560212

# Landmann Vista 560202 Barbecue Grill with Offset Smoker Box

## INSTRUCTION MANUAL

### Introduction

---

This manual provides detailed instructions for the assembly, operation, and maintenance of your Landmann Vista 560202 Charcoal Grill with Offset Smoker Box. Designed for versatility, this unit allows for both charcoal grilling and smoking, offering a comprehensive outdoor cooking experience. Please read all instructions carefully before use to ensure safe and efficient operation.



*Image: The Landmann Vista 560202 Barbecue Grill with Offset Smoker Box, showcasing its main grilling chamber, offset smoker box, and side shelf.*

## Safety Information

---

Always follow these safety guidelines to prevent injury or damage:

- Use outdoors only in a well-ventilated area.
- Keep children and pets away from the grill during use.
- Do not move the grill while it is hot or in use.
- Use heat-resistant gloves when handling hot components.
- Ensure the grill is on a stable, level surface.
- Never use gasoline or kerosene to start or restart charcoal.
- Clean the grill regularly to prevent grease fires.

## Parts List

---

Before assembly, ensure all components are present:

- Barbecue Grill Main Body

- Offset Smoker Box
- Porcelain Coated Cast Iron Grates
- Chrome Plated Steel Warming Rack
- Adjustable Charcoal Pan (with crank handle)
- Removable Ash Tray
- Chimney with Adjustable Damper
- Large Stainless Steel Handles
- Temperature Gauge
- Side Shelf (foldable)
- Wheels and Legs
- Assembly Hardware (bolts, nuts, washers)

## Setup and Assembly

---

Assembly is required for this grill. It typically takes approximately 1 to 3 hours, depending on experience. Follow the step-by-step instructions provided in the separate assembly guide included with your product. Ensure all bolts are securely tightened, but do not overtighten.



*Image: A top-down view of the Landmann Vista 560202 grill with both the main grilling chamber and offset smoker box lids open, revealing the cooking grates and charcoal pan.*

## Operating Instructions

---

### 1. Charcoal Loading

Access the charcoal pan through the large front panel. Distribute charcoal evenly across the pan for direct grilling, or concentrate it for indirect cooking or smoking.

### 2. Heat Control

- **Adjustable Charcoal Pan:** Use the crank handle located on the side of the grill to raise or lower the charcoal pan. Raising the pan increases heat intensity and brings the charcoal closer to the cooking grates. Lowering it reduces heat and provides a more gentle cooking temperature.
- **Chimney with Adjustable Damper:** The chimney features an adjustable damper. Open the damper to increase airflow and heat, or close it partially to reduce airflow and lower the temperature, especially useful for smoking.

### 3. Using the Offset Smoker Box

The integrated offset smoker box allows for smoking food. Place wood chips or charcoal in the smoker box. The heat and smoke will flow into the main grilling chamber, cooking food indirectly and imparting a smoky flavor. The smoker box includes its own cooking grate for additional grilling space.

### 4. Warming Rack

Utilize the chrome-plated steel warming rack for keeping cooked food warm or for gently toasting buns. It provides 201 square inches of secondary grilling space.



*Image: The Landmann Vista 560202 grill in an outdoor setting, with food cooking on the main grates and the lid open, demonstrating its operational use.*

## Maintenance

## 1. Ash Removal

After the grill has completely cooled, remove the large, removable ash tray located at the bottom of the main grilling chamber. Dispose of ashes safely. This feature simplifies cleanup.

## 2. Cleaning

- **Cooking Grates:** Clean porcelain-coated cast iron grates with a grill brush after each use while still warm. For deeper cleaning, remove and wash with warm, soapy water.
- **Exterior:** Wipe down the exterior surfaces with a damp cloth. Avoid abrasive cleaners that may damage the painted finish.
- **Interior:** Scrape off any accumulated grease or food residue from the interior surfaces.

## 3. Storage

Store the grill in a dry, protected area when not in use. Consider using a grill cover to protect it from the elements and extend its lifespan. The foldable side shelf and large wheels enhance portability and storage convenience.

## Troubleshooting

- **Difficulty with Assembly:** If you encounter issues during assembly, double-check the instruction manual and ensure all parts are correctly oriented. Some users report assembly taking longer than estimated.
- **Uneven Heat Distribution:** Ensure charcoal is evenly distributed. Adjust the charcoal pan height and chimney damper to regulate temperature.
- **Smoke Leakage:** Minor smoke leakage is common with offset smokers. For optimal smoke retention, ensure all lids are properly seated.
- **Paint Warping/Peeling:** High heat can affect paint finish over time. This is a cosmetic issue and does not typically affect grill performance.

## Specifications

<b>Brand</b>	Landmann
<b>Model Number</b>	560212
<b>Fuel Type</b>	Charcoal
<b>Cooking Surface Area</b>	363 Square Inches (main grill) + 169 Square Inches (smoker box)
<b>Dimensions (L x W x H)</b>	54 x 25.5 x 47.5 inches
<b>Item Weight</b>	78.7 pounds
<b>Material</b>	Alloy Steel
<b>Special Features</b>	Portable, Warming Rack, Adjustable Charcoal Pan, Offset Smoker Box

## Warranty and Support

For warranty information or customer support, please refer to the documentation included with your purchase or contact Landmann customer service directly. Details for customer support are typically

available on the manufacturer's official website or through the retailer where the product was purchased.