

[Manuals.plus](#) /

› [GROHE](#) /

› GROHE 36407001 Remote Control for Faucet Adjustment User Manual

GROHE 36407001

GROHE 36407001 Remote Control for Faucet Adjustment User Manual

Model: 36407001

INTRODUCTION

This manual provides comprehensive instructions for the proper use and maintenance of the GROHE 36407001 Remote Control. This device is designed to facilitate the adjustment of various settings on compatible GROHE bathroom appliances, such as faucet sensitivity and timing. Please read this manual thoroughly before initial use to ensure correct operation and to prevent damage.

PRODUCT OVERVIEW



Figure 1: Front view of the GROHE 36407001 Remote Control, showing the display screen, power button, back button, OK button, and navigation arrows.

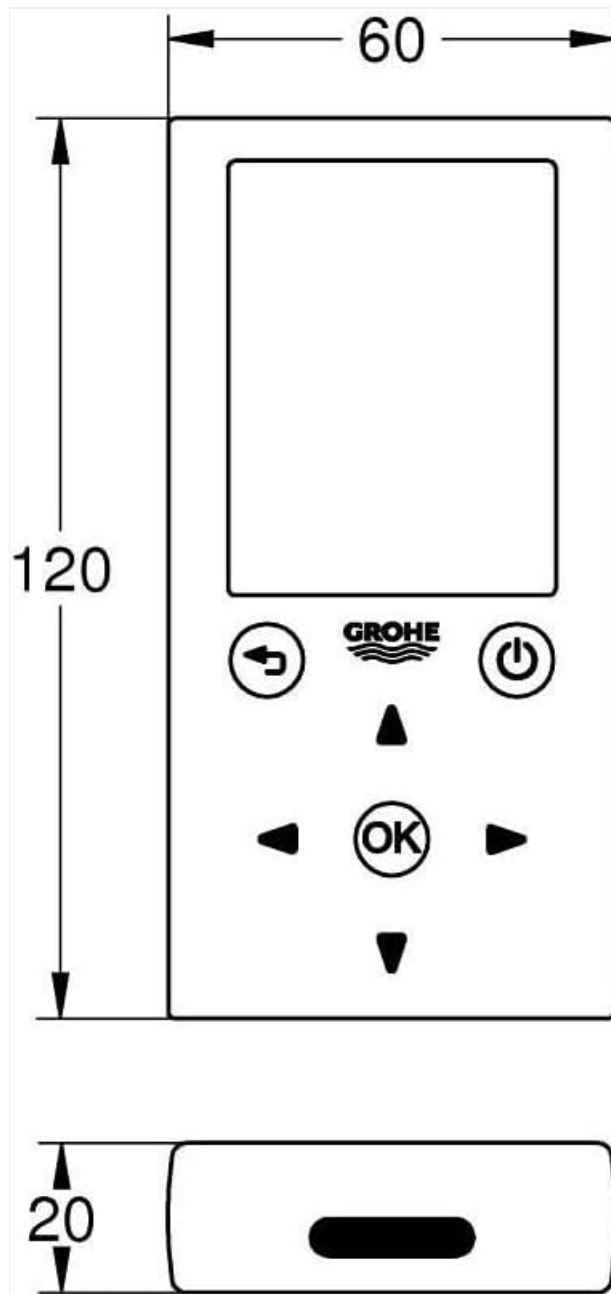


Figure 2: Technical drawing illustrating the dimensions of the GROHE 36407001 Remote Control. Dimensions are approximately 60mm width, 120mm height, and 20mm depth.

SETUP

1. Battery Installation:

Locate the battery compartment on the back of the remote control. Open the compartment cover and insert the required Alkaline batteries, ensuring correct polarity (+/-). Close the cover securely.

2. Power On:

Press and hold the power button () located on the remote control until the display illuminates.

3. Establishing Connection:

The GROHE 36407001 uses infrared (IR) technology. Point the remote control directly at the IR sensor of the GROHE bathroom appliance you wish to adjust. Maintain a close distance for optimal signal transmission, typically within 10 meters, but closer proximity may be required for initial connection or specific adjustments.

OPERATING INSTRUCTIONS

The remote control features a display screen and several buttons for navigation and selection:

- **Power Button ():** Press to turn the device on or off.
- **Back Button (↶):** Used to return to the previous menu or cancel an action.
- **Navigation Arrows (▲ ▼ ◀ ▶):** Use these buttons to scroll through menu options or adjust values.
- **OK Button:** Press to confirm a selection or enter a submenu.

Adjusting Appliance Settings:

1. Ensure the remote control is powered on and pointed at the target GROHE appliance.
2. Use the navigation arrows to browse the main menu on the remote's display.
3. Select the desired setting category (e.g., "Sensitivity," "Flow Time," "Temperature Limit") using the OK button.
4. Navigate to the specific setting you wish to modify.
5. Use the navigation arrows to increase or decrease the value or select an option.
6. Press the OK button to confirm the new setting. The change should be applied to the GROHE appliance.
7. Use the Back button to exit menus or return to the main screen.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface and electronic components.
- **Battery Replacement:** When the display becomes dim or the remote control becomes unresponsive, replace the batteries with new Alkaline batteries of the specified type. Dispose of old batteries according to local regulations.
- **Storage:** Store the remote control in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not power on.	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity.
Settings are not applied to the appliance.	• Remote not pointed directly at IR sensor. • Too far from the appliance. • Obstruction between remote and appliance. • Appliance is not compatible or in adjustment mode.	• Ensure direct line of sight to the appliance's IR sensor. • Move closer to the appliance (within 10 meters, closer if needed). • Remove any obstructions. • Refer to the appliance's manual for compatibility and adjustment mode instructions.
Display is dim or flickering.	Low battery power.	Replace batteries.

SPECIFICATIONS

Model Name: Remote Control

Model Number: 36407001

Brand: GROHE

Color: GROHE CHROME (This refers to the finish of compatible GROHE products, not the remote control itself.)

Connectivity Technology: Infrared

Controller Type: Button Control

Compatible Devices: Bathroom Appliances (GROHE)

Maximum Range: 10 Meters

Battery Type: Alkaline

Special Feature: Ergonomic

Dimensions (approximate): 120mm (Height) x 60mm (Width) x 20mm (Depth)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official GROHE website or contact GROHE customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

GROHE Official Website: www.grohe.com

© 2024 GROHE. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

