

- Manuals.plus /
- > [BOMAZ](#) /
 - > BOMAZ Universal Replacement Remote Control for Samsung Smart LED TV User Manual

BOMAZ BN59-01199F

BOMAZ Universal Replacement Remote Control User Manual

Model: BN59-01199F

INTRODUCTION

This manual provides comprehensive instructions for the BOMAZ Universal Replacement Remote Control, model BN59-01199F. This remote is designed to function as a direct replacement for various Samsung Smart LED TV models, offering stable performance without the need for programming. Please read this manual carefully to ensure proper use and longevity of your remote control.

PRODUCT OVERVIEW

The BOMAZ BN59-01199F remote control is a user-friendly device designed to operate compatible Samsung Smart LED TVs. Its ergonomic design ensures comfortable handling.





Figure 1: Front view of the BOMAZ Universal Replacement Remote Control. This image displays the remote's full button layout, including power, number pad, volume, channel, menu, smart hub, guide, navigation, return, exit, and colored function buttons. The model number BN59-01199F is visible at the bottom.

Compatible Samsung TV Models:

- UN50J5200, UN50J5200AF, UN50J5200AFXZA
- UN32J4500AF, UN32J4500AFXZA
- UN32J5205AF, UN32J5205AFXZA
- UN40J520DAFXZA, UN40J6200AF, UN40J6200AFXZA
- UN43J520DAFXZA, UN43JU640DF
- UN48J5201AF, UN48J5201AFXZA, UN48J520DAF
- UN48JU6400FXZA, UN48JU640DF, UN48JU640DFXZA
- UN50J520DAF, UN50J6200AFXZA, UN50J620DAF, UN50J620DAFXZA
- UN55J6200AF

SETUP

Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.



Figure 2: Back view of the remote control with the battery compartment open. This image illustrates where to insert the two AAA batteries.

Note: This remote control does not require any programming. Once batteries are installed, it is ready for use with compatible Samsung Smart LED TVs.

OPERATING INSTRUCTIONS

The BOMAZ replacement remote control functions identically to the original Samsung TV remote. Point the remote directly at your television for optimal performance.

Basic Functions:

- **Power ():** Turns the TV on or off.
- **Source:** Selects the input source (e.g., HDMI, AV, Component).
- **Number Pad (0-9):** Directly enters channel numbers.
- **VOL (+/-):** Adjusts the volume level.
- **CH (▲/▼):** Changes channels up or down.
- **Mute:** Mutes or unmutes the TV audio.
- **Menu:** Accesses the TV's main menu.
- **Smart Hub:** Opens the Samsung Smart Hub for apps and streaming services.
- **Guide:** Displays the electronic program guide.
- **Tools:** Provides quick access to common TV functions and settings.
- **Info:** Displays information about the current program or input.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Navigates through menus and options.
- **Enter (↵):** Confirms selections.
- **Return:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.

Advanced Functions:

- **Colored Buttons (A, B, C, D):** These buttons perform specific functions depending on the TV menu or application. Refer to your TV's on-screen prompts for their current use.
- **E-Manual:** Accesses the TV's electronic user manual.
- **Sports:** Often a shortcut to sports-related content or modes.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **Media Playback Controls (◀ ◁, ▷, ▶, ■):** Controls playback of media content (e.g., pause, play, fast forward, rewind, stop).

The operable distance for this remote control is more than 8 meters (approximately 26 feet).

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Damage:** Do not drop the remote control or expose it to extreme temperatures, moisture, or direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries. Obstruction between remote and TV. Remote out of range.	◦ Check battery orientation and replace with fresh AAA batteries. ◦ Ensure no objects are blocking the signal path to the TV's IR receiver. ◦ Move closer to the TV (within 8 meters).
Some buttons not working	Dirty contacts under buttons. Remote damage.	◦ Clean the remote surface. ◦ If the remote has been dropped or damaged, it may need replacement.
Remote works intermittently	Weak batteries. Interference.	◦ Replace batteries. ◦ Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the IR signal.

If you experience persistent issues, please refer to the Support section for contact information.

SPECIFICATIONS

Model	BN59-01199F
Brand	BOMAZ
Compatible Devices	Samsung Smart LED Televisions (various models, see Product Overview)
Max Supported Devices	1
Battery Type	2 x AAA (not included)
Operable Distance	> 8 meters (approx. 26 feet)
Material	ABS Material
Color	Black
Item Weight	2.39 ounces
Special Feature	No Programming Required

WARRANTY INFORMATION

This BOMAZ replacement remote control comes with a **90-day warranty** from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

SUPPORT

For any questions, concerns, or issues regarding your BOMAZ Universal Replacement Remote Control, please contact our customer support. We test every remote before shipment to ensure quality. If the remote you receive has a problem, please do not hesitate to reach out to us.

Contact information for support is typically provided by your retailer or on the product packaging. Please refer to those sources for the most direct assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B06Y2GNV54>

More documents and user manuals: <https://manuals.plus/>