

Stanley SXPW18E

STANLEY SXPW18E 1800W Pressure Washer User Manual

Model: SXPW18E

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your STANLEY SXPW18E 1800W Pressure Washer. Please read this manual thoroughly before using the appliance and keep it for future reference.

The STANLEY SXPW18E is a cold water pressure washer designed for cleaning various outdoor household surfaces. It is suitable for removing stubborn dirt from driveways, balconies, patios, pool surrounds, garden furniture and tools, bicycles, motorcycles, and cars.

SAFETY INFORMATION

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

General Safety Rules:

- Always wear appropriate personal protective equipment (PPE) such as safety glasses, gloves, and hearing protection.
- Never direct the water jet at people, animals, or electrical equipment.
- Ensure the power supply matches the voltage specified on the pressure washer's rating plate.
- Do not operate the pressure washer if the power cord or other essential parts are damaged.
- Keep children and pets away from the operating area.
- Always disconnect the power supply before performing any maintenance or cleaning tasks.
- Use only original spare parts and accessories recommended by Stanley.

PACKAGE CONTENTS

Carefully unpack the pressure washer and check that all items are present and undamaged. If any items are missing or damaged, contact your retailer.

- Pressure Washer Unit (Model SXPW18E)
- Gun with safety lock
- Lance
- High-pressure hose (6 meters)
- Rotary jet nozzle (for stubborn dirt, moss, and encrustations)
- Adjustable jet nozzle (cylindrical powerful jet to delicate fan jet)
- Foam kit (0.4 L, attachable to the gun)
- Instruction Manual



Image: The STANLEY SXPW18E pressure washer with its various components and accessories laid out.

SETUP

Follow these steps to set up your pressure washer for first use:

1. **Assemble the Unit:** Attach the wheels and handle if they are not pre-assembled.
2. **Connect the High-Pressure Hose:** Securely connect the 6-meter high-pressure hose to the pressure washer outlet and to the gun. Ensure all connections are tight to prevent leaks.

3. **Attach the Lance and Nozzle:** Connect the lance to the gun, then select and attach the desired nozzle (rotary or adjustable) to the lance.
4. **Water Supply Connection:**
 - Connect a standard garden hose (not included) to a water tap.
 - Connect the other end of the garden hose to the water inlet of the pressure washer. The water inlet features an inspectable filter to retain impurities.
 - Ensure the water tap is fully open.
5. **Self-Priming Function (if applicable):** The SXPW18E is equipped with a self-priming function, allowing it to draw water from a tank if a direct water supply connection is not possible. Ensure the tank is placed at a suitable height and the hose is properly submerged.
6. **Electrical Connection:** Plug the 5-meter electrical cable into a suitable power outlet.



Image: Illustration showing the connection of the water supply hose to the pressure washer unit.

OPERATING INSTRUCTIONS

Before starting, ensure all connections are secure and the water supply is open.

1. **Turn On:** Rotate the ON/OFF switch to the "ON" position. The pressure washer will immediately be ready for use.
2. **Release Air:** Before applying pressure, squeeze the trigger on the gun to allow air to escape from the system until a steady stream of water emerges.
3. **Start Cleaning:** Direct the nozzle towards the surface to be cleaned, maintaining a safe distance. Squeeze the trigger to activate the high-pressure jet.
4. **Adjusting the Jet:** If using the adjustable jet nozzle, rotate the nozzle head to switch between a powerful cylindrical jet and a wider, more delicate fan spray.
5. **Using the Foam Kit:** Attach the 0.4 L foam kit to the gun. Fill it with appropriate detergent. The foam kit will mix detergent with water to create a foam for cleaning.
6. **Stopping Operation:** Release the trigger on the gun. The motor will stop. For longer pauses, turn the ON/OFF switch to "OFF".
7. **Shutting Down:**
 - Turn the ON/OFF switch to "OFF".
 - Turn off the water supply tap.
 - Squeeze the trigger on the gun to release any remaining pressure in the system.
 - Disconnect the power plug from the outlet.
 - Disconnect the water supply hose.



Image: A person demonstrating the use of the pressure washer to clean an outdoor surface.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Cleaning the Water Inlet Filter:** Regularly inspect and clean the water inlet filter to prevent impurities from entering the pump. Remove the filter, rinse it under running water, and reinsert it.
- **Nozzle Cleaning:** If the spray pattern becomes irregular or pressure drops, the nozzle may be clogged. Use the provided nozzle cleaning tool (if included) or a thin wire to clear any obstructions.
- **Storage:**
 - Before storing, drain all water from the pump, hose, and accessories to prevent freezing damage.
 - The static hose reel with a locking system allows for easy and tidy storage of the high-pressure hose in its dedicated compartment.
 - Store the pressure washer and accessories in a dry, frost-free location.
 - The integrated accessory compartment facilitates the storage of supplied items after use.
- **Winter Storage:** In cold climates, use a pump protector or antifreeze solution to prevent damage from freezing.



Image: Close-up of the pressure washer's integrated hose reel and accessory storage.

TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Motor does not start	No power supply; ON/OFF switch off; Thermal overload activated.	Check power connection; Turn ON/OFF switch to ON; Allow motor to cool down.
No water pressure or low pressure	Water supply off; Clogged water inlet filter; Air in pump; Clogged nozzle.	Open water tap; Clean filter; Bleed air from system (squeeze trigger without power); Clean nozzle.
Pulsating pressure	Air in pump; Clogged nozzle; Insufficient water supply.	Bleed air from system; Clean nozzle; Ensure adequate water flow.
Water leaks	Loose connections; Damaged O-rings.	Tighten connections; Replace damaged O-rings.

SPECIFICATIONS

Feature	Value
Model Number	SXPW18E
Power Consumption	1800 W
Maximum Pressure	135 Bar
Maximum Flow Rate	440 l/h
Maximum Inlet Water Temperature	50 °C
Hose Length	6 meters (high-pressure)
Electrical Cable Length	5 meters
Product Dimensions (L x W x H)	33 x 29.5 x 74.5 cm
Item Weight	8.13 kg
Power Source	Corded Electric
Manufacturer	Annovi Reverberi S.p.A
Compliance	CE

WARRANTY AND SUPPORT

The STANLEY SXPW18E Pressure Washer comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical assistance, spare parts, or warranty service, please refer to the list of service centers provided in the instruction manual included in the product box, or visit the official Stanley website for support contact information.

For more information, you may visit the [Stanley Official Website](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question