

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Stanley](#) /
- › [Stanley SXPW22PE 2200W Deluxe Pressure Washer User Manual](#)

## Stanley SXPW22PE

# Stanley SXPW22PE 2200W Deluxe Pressure Washer User Manual

Model: SXPW22PE

## 1. PRODUCT OVERVIEW

---

The Stanley SXPW22PE cold water pressure washer is designed for effective cleaning of outdoor surfaces around the home and garden. It is also suitable for cleaning vehicles such as cars, motorcycles, bicycles, as well as outdoor installations and garden tools.



Image 1.1: Stanley SXPW22PE Pressure Washer main unit.

### Key Features:

- **Maximum Pressure:** 150 bar
- **Power Consumption:** 2200 W
- **Maximum Flow Rate:** 440 liters per hour
- **Maximum Water Supply Temperature:** 50 °C
- Static hose reel for organized high-pressure hose storage.
- Quick connection for water inlet with an inspectable filter to prevent impurities.
- Self-priming function allows connection to an external water container.
- Ergonomic anti-slip handle and two 16 cm diameter rubber-tread wheels for easy transport.

### Included Components:

- Pressure Washer Unit
- Gun
- High-pressure hose (8 meters)
- Lance
- Rotary nozzle
- Adjustable nozzle
- Foam cleaning kit (0.4 liter)
- Fixed brush

- Patio Cleaner Deluxe with integrated detergent tank

## 2. SAFETY INFORMATION

---

Always read and understand this manual before operating the pressure washer. Failure to follow safety instructions can result in serious injury or damage to the unit.

- **Personal Protective Equipment:** Always wear appropriate eye protection, hearing protection, and protective clothing when operating the pressure washer.
- **Electrical Safety:** Ensure the power outlet is properly grounded. Do not operate the unit with damaged cords or plugs. Keep all electrical connections dry.
- **Water Jet Safety:** Never direct the high-pressure jet at people, pets, electrical devices, or the unit itself. The powerful jet can cause severe injuries.
- **Stable Footing:** Ensure you have stable footing and a firm grip on the spray gun to counteract the recoil force.
- **Children and Bystanders:** Keep children and bystanders away from the operating area.
- **Before Maintenance:** Always disconnect the pressure washer from the power supply and water source before performing any maintenance, cleaning, or when not in use.
- **Water Temperature:** Do not use water hotter than 50 °C.

## 3. SETUP AND ASSEMBLY

---

### 3.1 Unpacking

Carefully remove all components from the packaging. Check for any damage during transit. Ensure all listed components are present.

### 3.2 Water Connection

1. Connect a standard garden hose (not supplied) to the water inlet of the pressure washer.
2. Ensure the inspectable filter at the water inlet is clean and properly seated to prevent debris from entering the pump.
3. Turn on the water supply to the garden hose.



Image 3.1: Connecting the high-pressure hose to the unit.

### 3.3 Self-Priming Function (Optional)

If a direct tap connection is not available, the pressure washer can draw water from an external container (e.g., a rain barrel) using its self-priming function. Ensure the container is placed above the level of the

pressure washer for optimal performance and that the hose is fully submerged.

### 3.4 Power Connection

Plug the power cord into a suitable, grounded electrical outlet. Ensure the voltage matches the specifications of the unit.

### 3.5 Accessory Attachment

Connect the high-pressure hose to the gun, and then attach the desired lance and nozzle to the gun. Ensure all connections are secure to prevent leaks.



Image 3.2: The pressure washer gun.



Image 3.3: The pressure washer lance.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Starting the Unit

1. Ensure the water supply is fully open.
2. Turn on the pressure washer using the ON/OFF switch.
3. Squeeze the trigger on the gun to allow water to flow through and purge any air from the system. This may take a few seconds.

### 4.2 Using Different Nozzles and Accessories

- **Rotary Nozzle:** This nozzle provides a powerful, rotating jet for removing particularly stubborn dirt and grime. It is ideal for hard surfaces like concrete and stone.



Image 4.1: The rotary nozzle for tough cleaning.

- **Adjustable Nozzle:** This nozzle allows you to vary the intensity of the water jet from a concentrated stream to a wide fan spray, suitable for different cleaning tasks and delicate surfaces.



Image 4.2: The adjustable nozzle for varied spray patterns.

- **Foam Cleaning Kit:** Attach the foam kit to the gun. Fill its 0.4-liter tank with appropriate detergent. This kit is used to apply a layer of foam for pre-soaking or deep cleaning.
- **Fixed Brush:** Use the fixed brush for effective scrubbing on surfaces that require mechanical action in addition to water pressure.



Image 4.3: The fixed brush for scrubbing surfaces.

- **Patio Cleaner Deluxe:** This accessory is designed for efficient cleaning of large horizontal surfaces such as patios, terraces, and verandas. It features an integrated detergent tank for added convenience. Its ergonomic handle also makes it suitable for vertical surfaces like garage doors or exterior walls.



Image 4.4: The Patio Cleaner Deluxe for large surface cleaning.

### 4.3 Cleaning Technique

Always start cleaning from a safe distance to avoid damaging the surface. Gradually move closer until the desired cleaning effect is achieved. Work systematically to ensure even cleaning.

### 4.4 Stopping the Unit

1. Release the trigger on the gun.
2. Turn off the pressure washer using the ON/OFF switch.
3. Turn off the water supply.
4. Squeeze the trigger on the gun one last time to release any residual pressure in the system.

## 5. MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Hose Storage:** After use, the high-pressure hose can be easily wound onto the static hose reel, keeping it tidy and organized.
- **Accessory Storage:** All accessories can be stored in the practical accessory compartment located at the rear of the unit.



Image 5.1: Pressure washer with integrated accessory storage.

- **Water Inlet Filter:** Regularly inspect and clean the water inlet filter to prevent blockages and ensure proper water flow to the pump.
- **Nozzle Cleaning:** If the nozzle becomes clogged, use the provided nozzle cleaning tool (if applicable) to clear any debris.

- **Winter Storage:** Before storing the unit in freezing temperatures, ensure all water is drained from the pump, hose, and accessories to prevent damage from ice expansion. Run an anti-freeze solution through the pump if recommended by the manufacturer.

## 6. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your pressure washer.

Problem	Possible Cause	Solution
No pressure or low pressure	<ul style="list-style-type: none"> <li>• Insufficient water supply</li> <li>• Clogged water inlet filter</li> <li>• Air in the pump</li> <li>• Clogged nozzle</li> <li>• Loose connections</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure water tap is fully open.</li> <li>• Clean the water inlet filter.</li> <li>• Purge air by running water through the system with the trigger open.</li> <li>• Clean the nozzle.</li> <li>• Tighten all hose and accessory connections.</li> </ul>
Motor does not start	<ul style="list-style-type: none"> <li>• No power supply</li> <li>• Faulty power outlet/fuse</li> <li>• ON/OFF switch in OFF position</li> </ul>	<ul style="list-style-type: none"> <li>• Check power cord connection.</li> <li>• Test the outlet with another device; check circuit breaker/fuse.</li> <li>• Ensure the switch is in the ON position.</li> </ul>
Water leaks from connections	<ul style="list-style-type: none"> <li>• Loose connections</li> <li>• Damaged O-rings or seals</li> </ul>	<ul style="list-style-type: none"> <li>• Tighten all connections.</li> <li>• Inspect O-rings and seals; replace if damaged.</li> </ul>

If you encounter problems not listed here or if solutions do not resolve the issue, please contact customer service.

## 7. SPECIFICATIONS

---

Feature	Value
Model Number	SXPW22PE
Brand	Stanley
Power Source	Electric Cable
Maximum Pressure	150 Bars
Maximum Flow Rate	440 Liters per hour

Feature	Value
Hose Length	8 Meters
Product Dimensions (L x W x H)	33 x 30.7 x 79 cm
Item Weight	8.13 Kilograms
Color	Yellow/Black
Manufacturer	Annovi Reverberi S.p.A.

## 8. WARRANTY AND SUPPORT

---

### 8.1 Warranty Information

This Stanley pressure washer comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

### 8.2 Customer Support

For technical assistance, spare parts, or warranty service, please refer to the directory of customer service centers provided in the original printed user manual. You can also visit the official Stanley website for support contact information.