

## Bomann VS 2185

# Bomann VS 2185-1 Refrigerator Instruction Manual

Model: VS 2185 | Brand: Bomann

## 1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before using your Bomann VS 2185-1 refrigerator. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded outlet. Do not use extension cords. Disconnect from power before cleaning or maintenance.
- **Ventilation:** Allow adequate space around the refrigerator for proper ventilation to prevent overheating.
- **Flammable Materials:** Do not store explosive substances or highly flammable materials inside the refrigerator.
- **Children Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Disposal:** When disposing of the appliance, do so only at an authorized waste disposal center. Do not dispose of with regular household waste.

## 2. PRODUCT OVERVIEW

The Bomann VS 2185-1 is a 133-liter capacity refrigerator designed for efficient food storage. It features LED interior lighting, continuous temperature control, and adjustable glass shelves.



**3 Glasablagen** –  
**2** davon höhenverstellbar  
**1** transparentes **Gemüsefach**

Figure 2.1: Exterior view of the Bomann VS 2185-1 Refrigerator.

## Internal Components



Figure 2.2: Interior view with 3 glass shelves (2 adjustable) and a transparent vegetable compartment.



Figure 2.3: Interior view with 3 door shelves (suitable for 1.5L bottles) and 2 egg trays.

## 3. SETUP

### 3.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage. Report any damage to your retailer immediately.

### 3.2 Placement

Place the refrigerator on a firm, level surface. Ensure there is sufficient space around the appliance for air circulation (at least 10 cm at the back and sides, and 30 cm above). Avoid direct sunlight, heat sources, and damp environments.

### 3.3 Leveling

The refrigerator is equipped with adjustable feet. Use a spirit level to ensure the appliance is perfectly level. This prevents vibrations and ensures proper door closure.



Figure 3.1: Refrigerator features including adjustable feet and reversible door hinge.

### 3.4 Door Reversal

The door hinge is reversible, allowing the door to open from either the left or right side. Refer to the detailed diagram in the separate installation guide for instructions on how to reverse the door.

### 3.5 Initial Cleaning

Before first use, clean the interior and all accessories with lukewarm water and a mild detergent. Dry thoroughly.

## 4. OPERATING INSTRUCTIONS


### 4.1 Temperature Control

The refrigerator features a continuous temperature control dial located inside the compartment. Turn the dial to adjust the cooling intensity. The temperature range is approximately 0°C to +8°C.

## LED-Beleuchtung



## Energieeffizient

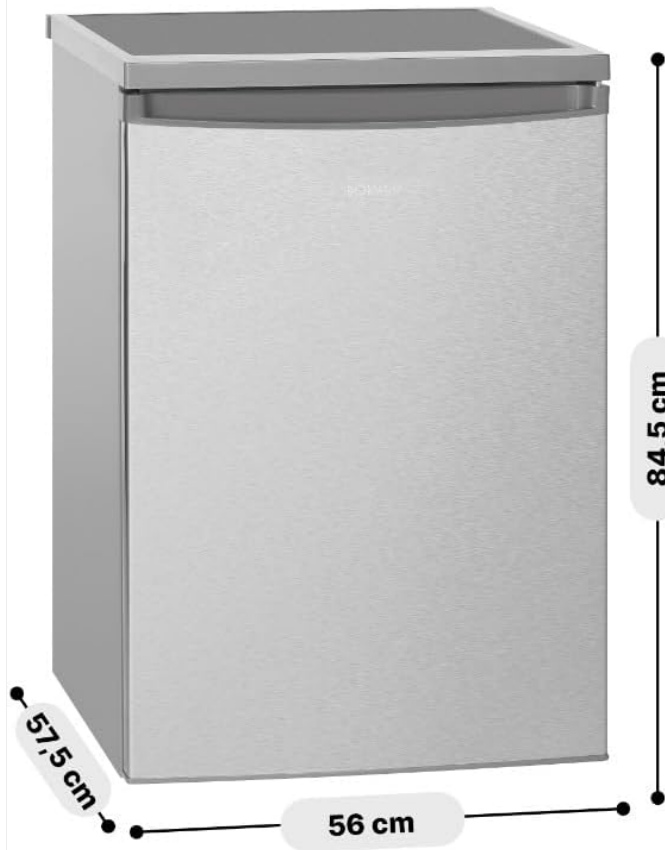

## Justierbare Standfüße



## Türanschlag wechselbar

Figure 4.1: Stepless temperature control dial.

## 4.2 LED Interior Lighting

The refrigerator is equipped with energy-efficient LED lighting, which illuminates the interior when the door is opened.

## 4.3 Food Storage Guidelines

- Store cooked foods and dairy products on the upper shelves.
- Raw meat and fish should be stored on the lowest shelf, in sealed containers, to prevent dripping onto other foods.
- Fruits and vegetables should be stored in the transparent vegetable compartment.
- Door shelves are suitable for bottles, jars, and eggs.

## 5. MAINTENANCE

### 5.1 Defrosting

This refrigerator features a semi-automatic defrosting system. Frost will automatically melt from the evaporator surface and drain into a tray at the back of the appliance, where it evaporates. If a thick layer of ice builds up, manually defrost the appliance:

1. Unplug the refrigerator.
2. Remove all food and store it in a cool place.
3. Leave the door open to allow the ice to melt. Place a towel at the bottom to absorb water.
4. Once defrosted, clean and dry the interior thoroughly before plugging it back in and returning food.

## 5.2 Cleaning

Regular cleaning ensures optimal performance and hygiene.

- **Interior:** Clean the interior regularly with a solution of lukewarm water and a mild, non-abrasive detergent. Rinse with clean water and dry thoroughly.
- **Exterior:** Wipe the exterior with a soft, damp cloth. For stainless steel surfaces, use a specialized stainless steel cleaner.
- **Door Seal:** Clean the door seal regularly to ensure a tight closure.
- **Condenser Coils:** Periodically clean the condenser coils at the back of the appliance with a soft brush or vacuum cleaner to improve efficiency.

## 6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power supply.	Check if the power plug is properly inserted and the fuse is intact.
Appliance is not cooling sufficiently.	Temperature setting too high; Door not closed properly; Excessive food load; Poor ventilation.	Adjust temperature control to a colder setting; Ensure door is fully closed; Reduce food load; Ensure adequate space around the appliance.
Excessive noise.	Appliance not level; Contact with wall/furniture; Normal operating sounds.	Adjust leveling feet; Move appliance away from obstructions; Gurgling/humming sounds are normal.
Water on the floor.	Drain hole blocked; Defrost water overflowing.	Clear the drain hole; Ensure defrost water tray is correctly positioned.

## 7. SPECIFICATIONS

Technical data for the Bomann VS 2185-1 Refrigerator:

Feature	Specification
Model Name	VS 2185
Brand	Bomann

<b>Feature</b>	<b>Specification</b>
Capacity (Net)	133 Liters
Dimensions (D x W x H)	57.5 cm x 56 cm x 84.5 cm
Weight	28 Kilograms
Color	Stainless Steel
Configuration	Without freezer compartment
Defrost System	Automatic (semi-automatic)
Voltage	230V
Annual Energy Consumption	90 kWh
Refrigerant	R-600A
Operating Noise Level	40 dB
Special Features	Adjustable feet, Reversible door hinge, LED interior lighting

# Stufenlose Temperaturregelung



Figure 7.1: Power consumption and operating noise level.

## 8. WARRANTY AND SUPPORT

### 8.1 Product Warranty

This Bomann refrigerator comes with a **24-month warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by improper installation, misuse, neglect, or unauthorized repairs.

### 8.2 Customer Support

For technical assistance, spare parts, or warranty claims, please contact Bomann customer service. You can find contact details on the official Bomann website or through your retailer.

**Online Resources:** Visit the official Bomann website for FAQs, additional product information, and support.

**Service Hotline:** Please refer to your regional Bomann contact information for the appropriate service hotline number.

