

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Tombow](#) /

> [Tombow MONO 100 HB Wood-cased Pencils Instruction Manual](#)

Tombow MONO 100 HB

Tombow MONO 100 HB Wood-cased Pencils Instruction Manual

Model: MONO 100 HB | Pack Size: 12 Count

INTRODUCTION

Welcome to the instruction manual for your Tombow MONO 100 HB wood-cased pencils. These pencils are designed for high-quality writing, drawing, and sketching, offering a smooth and consistent experience for artists, students, and professionals alike.

PRODUCT OVERVIEW

The Tombow MONO 100 series is renowned for its superior graphite quality and elegant design. This 12-pack of HB pencils provides a versatile hardness suitable for various applications, from detailed line work to general writing. Each pencil is crafted for durability and consistent performance.



This image displays the Tombow MONO 100 HB pencils neatly arranged within their protective black plastic case. The case features clear labeling of the brand and model, highlighting the product's presentation.

SETUP

Your Tombow MONO 100 HB pencils come pre-packaged in a protective storage case, ensuring they arrive in optimal condition.

1. Carefully open the outer packaging to access the pencil case.

- Slide open the black plastic case to reveal the pencils.
- Remove a pencil from the case. It is ready for immediate use.

OPERATING INSTRUCTIONS

Writing and Drawing

Hold the pencil comfortably, applying appropriate pressure for your desired line weight and darkness. The HB lead offers a balanced hardness, suitable for both crisp writing and general sketching with good erasability.

Sharpening

To maintain a fine point and ensure optimal performance, sharpen your Tombow MONO 100 HB pencil using a high-quality pencil sharpener.

- Insert the pencil into the sharpener opening.
- Rotate the pencil gently and steadily until a sharp point is achieved. Avoid excessive force to prevent lead breakage.
- Dispose of pencil shavings responsibly.

MAINTENANCE AND CARE

- Store pencils in their original case or a dedicated pencil box to protect them from physical damage and keep the lead intact.
- Avoid dropping pencils, as impacts can cause internal lead breakage, leading to frequent tip snapping during use or sharpening.
- Keep pencils away from extreme temperatures and direct sunlight to prevent wood warping or lead degradation.
- Clean the pencil body with a soft, dry cloth if necessary to remove smudges or dust.

TROUBLESHOOTING

Frequent Lead Breakage

If the lead frequently breaks during sharpening or use, consider the following:

- Sharpener Quality:** Ensure you are using a sharpener with a clean, sharp blade. Dull or damaged sharpeners are a common cause of lead breakage.
- Pressure:** Apply less pressure when sharpening and when writing or drawing. Excessive force can stress the lead.
- Impact Damage:** Check if the pencil has been dropped. Even if the exterior appears fine, internal lead fractures can occur, leading to repeated breakage.

SPECIFICATIONS

Feature	Detail
Brand	Tombow
Model	MONO 100 HB

Feature	Detail
Lead Hardness	HB
Material	Wood
Quantity	12 Pencils per pack
Item Weight	Approximately 4.6 ounces (for the pack)
Package Dimensions	8.82 x 3.03 x 0.91 inches
Line Size	0.3mm (Fine Point)
Ink Color	Black (Graphite)
Grip Type	Smooth

WARRANTY AND SUPPORT

For information regarding product warranty, technical support, or to provide feedback on your Tombow MONO 100 HB pencils, please visit the official Tombow website or contact their customer service department directly. It is recommended to retain your purchase receipt as proof of purchase for any warranty claims.

[Visit the Tombow Store on Amazon](#) for additional product information and resources.