

Manuals.plus /

- › HON /
- › HON Ignition 2.0 Mid Back Task Chair Instruction Manual

## HON Ignition 2.0 (HONI2M2AMLC10TK)

# HON Ignition 2.0 Mid Back Task Chair Instruction Manual

Model: HONI2M2AMLC10TK

## PRODUCT OVERVIEW

The HON Ignition 2.0 Mid Back Task Chair is designed for ergonomic comfort and adaptability in various work environments. It features an advanced synchro-tilt mechanism, tension control, pneumatic lift, and a 4-way stretch mesh back for enhanced airflow. Integrated lumbar support and adjustable armrests contribute to a customizable seating experience. This chair is built with a sturdy five-star base and smooth-gliding casters, supporting up to 300 lbs.





Figure 1: Front view of the HON Ignition 2.0 Mid Back Task Chair.

## SAFETY INFORMATION

---

### Important Safety Precautions:

- Do not use the chair if any parts are damaged or missing.
- Keep the chair away from direct heat sources to prevent material degradation.
- Ensure all components are securely fastened before use.
- Do not exceed the maximum weight recommendation of 300 pounds.

## ASSEMBLY INSTRUCTIONS

---

The HON Ignition 2.0 chair requires some assembly. It is recommended to follow the detailed instructions provided in the official Installation Manual. A hardware kit and chair parts are included.

- Unpack all components and verify against the parts list in the manual.

- Attach the chair base to the pneumatic cylinder.
- Secure the seat and backrest components.
- Install the armrests, ensuring they are firmly attached.
- Insert the casters into the base.

For detailed, step-by-step assembly instructions, please refer to the official Installation Manual (PDF) [Download Installation Manual](#)



Figure 2: Chair dimensions and weight capacity. The chair has a 300 lbs weight capacity and adjustable seat depth from 16.25" to 19.25".

## OPERATING AND ADJUSTMENTS

The HON Ignition 2.0 chair offers multiple adjustments to customize your seating experience for optimal comfort and support.

## Key Adjustment Features:

- **Pneumatic Seat Height Adjustment:** Use the lever located under the right side of the seat to raise or lower the seat height. Adjust so your feet are flat on the floor and knees are at a 90-degree angle.
- **Advanced Synchro-Tilt Recline:** This mechanism allows the backrest and seat to recline in a synchronized motion. A lever on the left side controls the recline.



Figure 3: Illustration of the Synchro-Tilt Tension control, allowing for a natural recline.

- **Tilt Tension Control:** A knob under the seat allows you to adjust the resistance of the recline. Turn clockwise to increase tension, counter-clockwise to decrease.
- **Tilt Lock:** Lock the chair in multiple recline positions using the tilt lock lever.
- **Adjustable Lumbar Support:** The integrated lumbar panel can be moved up or down to provide targeted support for your lower back.



Figure 4: The lumbar support can be easily adjusted vertically to enhance comfort and support for the lower back.

- **Seat Slide:** Adjust the seat depth to ensure proper leg support and reduce pressure points. This feature allows the seat to slide forward or backward.
- **Height and Width Adjustable Arms:** The armrests can be adjusted in height and width to support your forearms and keep your shoulders aligned in a neutral position.

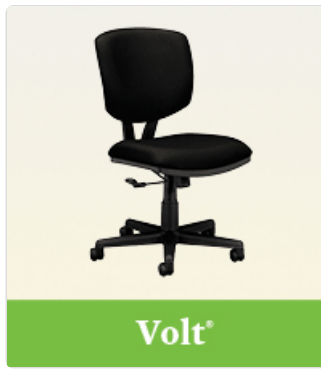


Figure 5: Close-up of the height and width adjustable armrests, providing customizable support.

# All-Day *Comfort*



Figure 6: Overview of the chair's customizable comfort features, including arm height, arm width, seat height, seat slide, tilt tension, tilt lock, and lumbar support.

Regular maintenance will help prolong the life and performance of your HON Ignition 2.0 chair.

- **Cleaning:** Wipe clean with a damp cloth. For the mesh back, a soft brush or vacuum cleaner can be used to remove dust and debris. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all bolts and fasteners to ensure they are tight. Re-tighten if necessary.
- **Casters:** Keep casters free of hair and debris to ensure smooth rolling.

## TROUBLESHOOTING

---

If you encounter issues with your HON Ignition 2.0 chair, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Chair does not raise or lower	Pneumatic cylinder issue or lever not engaged.	Ensure the height adjustment lever is fully engaged. If the issue persists, the pneumatic cylinder may need replacement.
Chair wobbles or feels unstable	Loose fasteners or uneven floor.	Check and tighten all assembly bolts. Ensure the chair is on a flat, even surface.
Casters do not roll smoothly	Debris caught in casters.	Turn the chair over and remove any hair, lint, or debris from the caster wheels.
Backrest does not recline or lock	Tilt mechanism or lock lever not engaged correctly.	Verify the tilt lock lever is disengaged for recline. Adjust tilt tension if resistance is too high.

For further assistance, please consult the full User Manual (PDF):[Download User Manual](#)

## SPECIFICATIONS

---

**Brand:** HON

**Model Name:** Ignition 2.0

**Item Model Number:** HONI2M2AMLC10TK

**Color:** Black - Mesh Back - Advanced Tilt

**Product Dimensions:** 28.5"D x 27"W x 44.5"H

**Item Weight:** 42 pounds

**Maximum Weight Recommendation:** 300 Pounds

**Back Style:** Mesh Back

**Arm Style:** Height & Width Adjustable

**Seat Height:** 18 Inches (adjustable)

**Seat Depth:** 17.5 inches (adjustable)

**Fill Material:** Foam (seat cushion)

**Reclining Position Count:** 2

**Assembly Required:** Yes

**Recommended Uses:** Gaming, Office

**UPC:** 195540834045, 888206730743

## WARRANTY AND SUPPORT

---

The HON Ignition 2.0 Mid Back Task Chair is backed by the **HON Limited Lifetime Warranty**. This warranty covers

defects in materials and workmanship under normal use. For specific details regarding coverage, claims, or to contact customer support, please refer to the official HON website or the warranty information included with your purchase. For additional support and resources, you may also refer to the Instructions for Use (IFU) (PDF)[Download Instructions for Use](#)