

QUMOX L220U

QUMOX Wired USB Gamepad (Model L220U) User Manual

For PC and Laptop

INTRODUCTION

This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your QUMOX Wired USB Gamepad (Model L220U). Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The QUMOX Wired USB Gamepad is designed for use with PC and laptop systems, offering a familiar control layout for a wide range of gaming experiences. It features a wired USB connection for reliable performance.



Image: Front view of the QUMOX Wired USB Gamepad, showing the dual analog sticks, D-pad, action buttons (numbered 1-4), and central Select, Analog, and Start buttons.

Controller Components

- **Dual Analog Sticks:** For precise 360-degree movement control.
- **Directional Pad (D-Pad):** For directional input.
- **Action Buttons (1, 2, 3, 4):** For in-game actions.
- **Shoulder Buttons (L1, L2, R1, R2):** Located on the top edge of the controller.
- **Select Button:** Typically used for menu navigation or specific game functions.
- **Start Button:** Typically used to pause games or confirm selections.
- **Analog Button:** Activates/deactivates analog stick functionality.
- **USB Cable:** For connecting the gamepad to your computer.



Image: Close-up view of the right side of the QUMOX Gamepad, highlighting the numbered action buttons and the right analog stick.

SETUP

1. **Connect the Gamepad:** Insert the USB connector of the QUMOX Gamepad into an available USB port on your PC or laptop.
2. **Driver Installation:** Your operating system (e.g., Windows) should automatically detect and install the necessary drivers. This process may take a few moments. In some cases, for optimal compatibility with certain games, you may need to install third-party drivers such as x360ce or similar gamepad emulation software. Refer to the specific game's requirements or online resources for guidance if automatic detection fails or performance is not as expected.
3. **Verification:** After installation, you can verify the gamepad's functionality through your operating system's game controller settings. For Windows, navigate to Control Panel > Devices and Printers, right-click on the gamepad icon, and select "Game controller settings" to test button and axis inputs.



Image: Side view of the QUMOX Wired USB Gamepad, showing the attached USB cable extending from the top of the controller.

OPERATING INSTRUCTIONS

- **Basic Control:** Use the D-pad or left analog stick for movement, and the action buttons (1, 2, 3, 4) for primary in-game actions.
- **Analog Mode:** Press the **Analog** button located in the center of the controller to activate or deactivate the analog sticks. When active, the analog sticks provide variable input, suitable for games requiring precise movement or camera control. Some games may require the Analog mode to be enabled for the joysticks to function correctly.
- **Shoulder Buttons:** L1, L2, R1, and R2 buttons are typically used for secondary actions, triggers, or camera adjustments depending on the game.
- **Game Compatibility:** The gamepad is designed to be compatible with a wide range of PC games that support standard USB game controllers. For specific game settings, refer to the game's control options menu.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the gamepad. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the controller. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the gamepad in a cool, dry place away from direct sunlight and extreme temperatures. Avoid wrapping the cable too tightly to prevent damage.
- **Handling:** Handle the gamepad with care. Avoid dropping it or subjecting it to strong impacts, as this can damage internal components.

TROUBLESHOOTING

Issue: Gamepad not recognized by PC.

- Ensure the USB cable is securely plugged into both the gamepad and the computer.
- Try a different USB port on your computer.
- Restart your computer.
- Check Device Manager (Windows) to see if the device is listed, and if there are any driver issues. You may need to manually update or reinstall drivers.
- Consider installing generic gamepad drivers or emulation software (e.g., x360ce) if the issue persists, as some systems or games may require them.

Issue: Analog sticks or certain buttons are not responding correctly.

- Ensure the **Analog** button is pressed to activate analog stick functionality if required by your game.
- Calibrate the gamepad through your operating system's game controller settings.
- Test the gamepad with different games or a gamepad testing utility to determine if the issue is game-specific or hardware-related.
- Check for any physical obstructions or debris around the buttons or sticks.

Issue: Input lag or slow response time.

- Ensure your computer meets the minimum system requirements for the game you are playing.
- Close any unnecessary background applications to free up system resources.
- Try connecting the gamepad to a different USB port, preferably a USB 2.0 or 3.0 port directly on

the motherboard (for desktops).

SPECIFICATIONS

Model Number	L220U
Connectivity	Wired USB
Product Dimensions	15 x 9 x 5.5 cm
Weight	99.79 Grams
Compatibility	PC, Laptop (Windows OS recommended)

WARRANTY AND SUPPORT

QUMOX products are manufactured to high-quality standards. For information regarding warranty coverage, technical support, or service, please refer to the documentation included with your purchase or visit the official QUMOX website. Keep your proof of purchase for warranty claims.