

[Manuals.plus](#) /

› [Samsonite](#) /

› Samsonite Base Boost Spinner 55/20 Hand Luggage Instruction Manual

Samsonite Base Boost Spinner 55/20

Samsonite Base Boost Spinner 55/20 Hand Luggage Instruction Manual

Model: Base Boost Spinner 55/20 | Brand: Samsonite

1. INTRODUCTION

This manual provides essential information for the proper use and care of your Samsonite Base Boost Spinner 55/20 Hand Luggage. Designed for convenience and durability, this suitcase is ideal for short trips, offering a lightweight and maneuverable solution for your travel needs. Please read these instructions carefully to ensure optimal performance and longevity of your product.





Figure 1: Front view of the Samsonite Base Boost Spinner 55/20 Hand Luggage.

2. KEY FEATURES

- **Compact Size:** Specifically designed as hand luggage (55 cm height, 39 liters capacity), suitable for a two-day trip.
- **Lightweight Construction:** Weighing approximately 2 kg, it minimizes travel weight.
- **Integrated TSA Lock:** Ensures secure and stress-free travel with a built-in combination lock.
- **360° Spinner Wheels:** Four multi-directional wheels provide smooth and effortless maneuverability.
- **Telescopic Handle:** An extendable handle for comfortable pulling and pushing, also allowing other bags to be rested on top.

- **Expandable Volume:** An expansion zipper provides additional packing space when needed.
- **Organized Interior:** Features two main sections and multiple pockets for efficient packing.
- **Front Pocket:** Maximized volume on the front pocket for quick access items.

3. SETUP AND INITIAL USE

3.1 Setting the TSA Combination Lock

Your Samsonite Base Boost luggage comes with an integrated TSA combination lock. The initial combination is set to 0-0-0.

1. Open the lock by sliding the button (A) in the direction of the arrow.
2. Push the reset button (B) with a pen or pointed object until you hear a 'click' sound.
3. Set your desired 3-digit combination by turning the dials (C).
4. Slide the button (A) again in the direction of the arrow. The reset button (B) will return to its original position with a 'click' sound. Your new combination is now set.

Remember your combination. If you forget it, you will need to contact Samsonite customer service for assistance, as there is no master key provided to the user.



Figure 2: Detail of the integrated TSA combination lock.

4. OPERATING YOUR LUGGAGE

4.1 Packing Your Suitcase

The Base Boost Spinner offers a well-organized interior to maximize packing efficiency. Utilize the main compartment for larger items and the internal mesh pockets for smaller accessories, toiletries, or documents.

Compression straps help secure your belongings and minimize shifting during transit.



Figure 3: Interior view with mesh pockets and elastic cross-ribbons.

4.2 Using the Expandable Feature

For additional packing capacity, locate the expansion zipper running along the perimeter of the suitcase. Unzip this section to increase the depth of the main compartment, providing extra space for souvenirs or additional items.

4.3 Maneuvering Your Luggage

The four 360° spinner wheels allow for smooth, multi-directional rolling, reducing strain on your arm and shoulder. Extend the telescopic handle to a comfortable height for pushing or pulling the suitcase. The top and side grab handles are available for lifting the luggage when needed.



Figure 4: Detail of the smooth-rolling spinner wheels.



Figure 5: Detail of the telescopic handle.

4.4 Size Guide

Refer to the general size guide below to understand the typical capacity and recommended trip duration for various luggage sizes. Your Base Boost Spinner 55/20 is classified as 'S' (Small) and is suitable for approximately a 2-day trip.

Figure 6: General luggage size guide.

5. MAINTENANCE AND CARE

- **Cleaning:** For general cleaning, wipe the fabric exterior with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners.
- **Zippers:** Keep zippers free of debris. If a zipper becomes stiff, apply a small amount of zipper lubricant or wax.
- **Wheels:** Periodically check the wheels for any tangled hair or debris and remove them to ensure smooth rolling.
- **Storage:** Store your luggage in a clean, dry place away from direct sunlight when not in use.

6. TROUBLESHOOTING

- **Sticking Zippers:** If zippers are difficult to move, ensure they are aligned correctly. Apply a small amount of silicone spray or a graphite pencil to the teeth.
- **Wheels Not Rolling Smoothly:** Check for any obstructions (e.g., lint, hair) caught in the wheel axles. Clean the wheels thoroughly.
- **Forgotten Lock Combination:** If you forget your TSA lock combination, you will need to contact Samsonite customer service or a certified luggage repair center for assistance. Do not attempt to force the lock, as this may damage it.

7. SPECIFICATIONS

Feature	Detail
Model Name	Base Boost Spinner 55/20
Dimensions (L x W x H)	40 cm x 20 cm x 55 cm (15.75"L x 7.87"W x 21.65"H)
Capacity	39 Liters
Item Weight	2 Kilograms
Wheel Type	Spinner (4 wheels)
Lock Type	TSA Combination Lock
Handle Type	Telescopic Extendable Handle
Shell Type	Soft
Material	Fabric (Material Type: 79200)
Color	Blue (Navy Blue)
Water Resistance Level	Not Water Resistant

8. WARRANTY AND SUPPORT

Samsonite products are rigorously tested to ensure they meet stringent standards. If a problem occurs with this Samsonite product (the "Product") and the problem is caused by manufacturing defects in material and workmanship, Samsonite will, in its discretion, either repair or replace the Product in accordance with the warranty terms. Please refer to the official Samsonite website or your purchase documentation for specific warranty details and to locate authorized service centers.

For further assistance or inquiries, please visit the official [Samsonite Store on Amazon](#) or the main Samsonite customer support portal.