

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [THOMSON](#) /

› [THOMSON DS120CD Multimedia Tower Instruction Manual](#)

THOMSON DS120CD

THOMSON DS120CD Multimedia Tower Instruction Manual

Model: DS120CD



1. INTRODUCTION

Thank you for purchasing the THOMSON DS120CD Multimedia Tower. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the power adapter supplied with the unit.
- Do not open the casing; refer all servicing to qualified personnel.
- Keep the unit away from strong magnetic fields.
- Clean the unit with a soft, dry cloth. Do not use liquid cleaners.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- THOMSON DS120CD Multimedia Tower
- Remote Control
- Power Cable
- 3.5mm Audio Cable (Aux-in)
- Instruction Manual (this document)

4. PRODUCT OVERVIEW

The THOMSON DS120CD is a versatile multimedia tower featuring multiple audio playback options and a sleek design.



Figure 1: Front view of the THOMSON DS120CD Multimedia Tower. This image displays the tall, black tower speaker with multiple speaker drivers and the THOMSON logo at the bottom.

Key features include:

- 60W Maximum Output Power
- Integrated CD Player
- Bluetooth Connectivity
- USB Input for media playback and charging
- SD Card Slot for media playback
- FM Radio Tuner with station memory
- LED Display
- Auxiliary Input (3.5mm)
- Full-function Remote Control



Figure 2: Top panel of the multimedia tower. This image highlights the top-loading CD player, the USB port, and the SD card slot, along with some control buttons and the LED display.

5. SETUP

5.1 Unpacking and Placement

1. Carefully remove the multimedia tower and all accessories from the packaging.
2. Place the tower on a stable, flat surface. Ensure there is adequate space around the unit for ventilation.
3. Avoid placing the unit near heat sources, direct sunlight, or areas with high humidity.

5.2 Power Connection

1. Connect the power cable to the AC input on the rear of the tower.
2. Plug the other end of the power cable into a standard wall outlet (AC 230V ~ 50Hz).

5.3 Initial Power On

Press the Power button on the unit or the remote control to turn on the device. The LED display will illuminate.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **POWER** button on the unit or remote control to switch the unit on or off.

6.2 Mode Selection

Press the **SOURCE** button on the unit or remote control repeatedly to cycle through available modes: CD, Bluetooth (BT), USB, SD, FM Radio, and AUX.

6.3 CD Playback



Figure 3: The multimedia tower with its top-loading CD player open, ready for disc insertion. The unit is shown in a home environment.

1. Select **CD** mode using the **SOURCE** button.
2. Gently open the CD compartment cover on the top of the unit.
3. Place a CD (label side up) onto the spindle.

4. Close the CD compartment cover. The unit will begin reading the disc and playback will start automatically.
5. Use the **PLAY/PAUSE**, **NEXT**, and **PREVIOUS** buttons on the unit or remote control to manage playback.

6.4 Bluetooth Pairing

1. Select **BT** (Bluetooth) mode using the **SOURCE** button. The LED display will show "BT" and flash, indicating it is in pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "THOMSON DS120CD" from the list of devices.
4. Once paired, the unit will emit a confirmation sound, and "BT" on the display will stop flashing.
5. You can now play audio from your connected device through the multimedia tower.

6.5 USB/SD Playback

1. Insert a USB flash drive into the **USB** port or an SD card into the **SD CARD** slot on the top panel.
2. Select **USB** or **SD** mode using the **SOURCE** button.
3. The unit will automatically detect and begin playing compatible audio files (e.g., MP3).
4. Use the **PLAY/PAUSE**, **NEXT**, and **PREVIOUS** buttons to control playback.
5. The USB port also functions as a charging port for compatible devices.

6.6 FM Radio Tuning

1. Select **FM** mode using the **SOURCE** button.
2. Press and hold the **PLAY/PAUSE** button (or **SCAN** on remote) to automatically scan and save available FM stations.
3. Use the **NEXT** and **PREVIOUS** buttons to navigate through saved stations.

6.7 Auxiliary Input (AUX)

1. Connect an external audio device (e.g., MP3 player, TV) to the **AUX IN** port on the rear of the tower using the supplied 3.5mm audio cable.
2. Select **AUX** mode using the **SOURCE** button.
3. Playback is controlled directly from the connected external device.

6.8 Remote Control

The included remote control provides full functionality for the multimedia tower. Ensure batteries are correctly inserted. Point the remote control directly at the unit's sensor for optimal operation.

7. MAINTENANCE

7.1 Cleaning

Wipe the exterior of the unit with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

7.2 Storage

If the unit is not used for an extended period, unplug it from the power outlet and store it in a cool, dry place, away

from direct sunlight and dust.

8. TROUBLESHOOTING

If you encounter issues with your THOMSON DS120CD, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet faulty	Ensure power cable is securely connected; Try a different outlet.
No sound	Volume too low; Incorrect source selected; Mute activated	Increase volume; Select correct input source; Deactivate mute function.
Bluetooth pairing failed	Device too far; Bluetooth not enabled on source device; Unit not in pairing mode	Move devices closer; Enable Bluetooth on source device; Ensure unit is in BT pairing mode.
CD not playing	CD inserted incorrectly; Disc scratched/dirty; Incorrect mode	Reinsert CD correctly; Clean or replace disc; Select CD mode.
Remote control not working	Batteries depleted; Obstruction between remote and unit; Remote not pointed correctly	Replace batteries; Remove obstructions; Point remote directly at the unit's sensor.

If the problem persists after trying these solutions, please contact customer support.

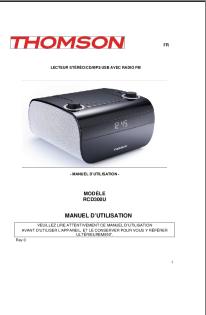
9. SPECIFICATIONS

- Model Name:** DS120CD
- Brand:** THOMSON
- Dimensions (W x D x H):** 19 x 22.5 x 85.8 cm
- Weight:** 5.43 kg
- Maximum Speaker Output Power:** 60 Watts
- Frequency Response:** 20 KHz
- Connectivity Technology:** Auxiliary, Bluetooth, USB
- Audio Output Mode:** Stereo
- Speaker Type:** Tower
- Special Functions:** LED Display, USB Port (for playback and charging)
- Power Supply:** AC 230V ~ 50Hz (typical for EU region)

10. WARRANTY AND SUPPORT

THOMSON products are designed and manufactured to the highest quality standards. For warranty information and customer support, please refer to the warranty card included with your product or visit the official THOMSON website. Keep your proof of purchase for any warranty claims.

Related Documents - DS120CD

	<p><u>Thomson DS120CD/DS121CD/DS122CD User Manual: CD, Bluetooth, FM, USB Audio</u> Comprehensive user manual for Thomson DS120CD, DS121CD, and DS122CD sound towers. Learn about setup, operation, features like CD playback, Bluetooth connectivity, FM radio, USB input, and remote control functions. Includes safety warnings and technical specifications.</p>
	<p><u>Thomson PG55B Google TV Projector User Manual</u> Comprehensive user manual for the Thomson PG55B projector with Google TV. Learn about setup, features, remote control, troubleshooting, and more.</p>
	<p><u>Thomson PG55B Smart Projector User Manual</u> Comprehensive user manual for the Thomson PG55B Smart Projector, detailing setup, features, and troubleshooting. Learn how to connect, configure, and operate your projector for an optimal viewing experience with Google TV.</p>
	<p><u>Thomson PG55B Pometni projektor: Navodila za uporabo in nastavitev Google TV</u> Podroben uporabniški priročnik za pametni projektor Thomson PG55B z Google TV. Vključuje navodila za namestitev, nastavitev, uporabo funkcij, odpravljanje težav in informacije o garanciji.</p>
	<p><u>Thomson RCD300U Stereo CD/MP3/USB Player with FM Radio - User Manual</u> Operating instructions and user manual for the Thomson RCD300U stereo CD/MP3/USB player with FM radio. This guide details how to use its radio functions, CD/USB playback, clock setting, auxiliary input, and specifications.</p>



MANUFACTURER: THOMSON
REFERENCE: THL11BK
CODE: 4236475



[THOMSON TLINK 11 BK GSM Mobile Phone Quick Start Guide](#)

Quick start guide for the THOMSON TLINK 11 BK GSM mobile phone, covering safety, setup, features, and compliance. Learn how to insert SIM cards, charge the battery, and use basic functions.

APPS
↓