

[Manuals.plus](#) /

› [Bright Starts](#) /

› Bright Starts Disney Baby Winnie The Pooh Happy as Can Bee Activity Gym User Manual

Bright Starts 10996-2

Bright Starts Disney Baby Winnie The Pooh Happy as Can Bee Activity Gym User Manual

Model: 10996-2

INTRODUCTION

This manual provides essential information for the safe and proper use, assembly, and maintenance of your Bright Starts Disney Baby Winnie The Pooh Happy as Can Bee Activity Gym. Please read all instructions carefully before use and retain this manual for future reference.

This activity gym is designed for infants from newborn age, offering a stimulating environment for play and development.

SAFETY INFORMATION

WARNING: To prevent serious injury, always supervise your child while using this activity gym.

- Never leave child unattended.
- Always place the activity gym on a flat, stable surface.
- Do not use this product if any components are damaged or missing.
- Keep small parts and packaging materials away from children to avoid choking hazards.
- Ensure all arches and toys are securely attached before placing the child in the gym.
- This product is not intended for sleeping.

SETUP

The Bright Starts Disney Baby Winnie The Pooh Happy as Can Bee Activity Gym is designed for easy setup. Follow these steps to prepare the activity gym for use:

1. **Unpack Components:** Carefully remove all items from the packaging. Verify that all parts are present: the soft playmat, two flexible arches, the Winnie The Pooh tummy time pillow, Tigger musical toy, Eeyore chiming finger puppet, sun-shaped mirror, and five colorful activity balls.



Image: The Bright Starts Disney Baby Winnie The Pooh Happy as Can Bee Activity Gym fully assembled, showing the playmat, arches, and hanging toys.

2. **Position the Playmat:** Lay the soft playmat flat on a clean, stable surface. Ensure there is enough space around the mat for safe play.



Image: The hexagonal playmat featuring Winnie The Pooh, Piglet, and Tigger characters, ready for arch attachment.

3. **Attach the Arches:** Insert the ends of the two flexible arches into the designated pockets or loops on the playmat. Cross the arches at the top to form a stable structure. Secure them firmly according to the instructions on the product's packaging (if specific attachment points are present).
4. **Attach Hanging Toys:** Use the provided loops or rings to attach the Tigger musical toy, Eeyore chiming finger puppet, and sun-shaped mirror to the arches. Position them within easy reach of your baby.



Image: Individual toys including the Tigger musical toy, Eeyore finger puppet, and the Winnie The Pooh tummy time pillow.

5. **Insert Batteries (Tigger Toy):** The Tigger musical toy requires 2 AA batteries (not included). Locate the battery compartment, insert the batteries with correct polarity, and secure the cover.

OPERATING INSTRUCTIONS

The activity gym offers various modes of play to engage your baby at different developmental stages.

Lay and Play Mode

For newborns and young infants, place your baby on their back on the soft playmat. The hanging toys encourage reaching, batting, and visual tracking.

- **Tigger Musical Toy:** Activate Tigger for over 20 minutes of music. This toy can be set to play continuously or to respond to baby's movements. Refer to the toy's specific instructions for mode selection.
- **Eeyore Chiming Finger Puppet:** This soft Eeyore toy produces gentle chimes when moved, stimulating auditory senses.
- **Sun-shaped Mirror:** The baby-safe mirror allows your child to explore self-recognition and visual engagement.



Image: An infant lying on their back on the playmat, reaching for the hanging Tigger musical toy.

Tummy Time Mode

Encourage healthy development by placing your baby on their tummy. The Winnie The Pooh pillow provides comfortable support.

- Position the Winnie The Pooh pillow under your baby's chest and arms for support during tummy time.
- Place the activity balls or other toys within reach to encourage lifting the head and engaging with objects.



Image: An infant on their tummy, supported by the Winnie The Pooh pillow, engaging with toys on the mat.

Ball Play Mode

As your baby grows, the activity gym transforms into a ball pit-like environment for interactive play.

- The activity gym includes five colorful balls.
- Drop the balls through the tree trunk's knot hole for a fun plunking and rolling experience.
- The tree canopy also features storage for the activity balls when not in use.



Image: An adult and baby interacting with the colorful activity balls within the play area of the gym.



Image: A baby looking through the mesh side of the activity gym, demonstrating the enclosed play space for ball activities.

MAINTENANCE AND CARE

Proper care ensures the longevity and hygiene of your activity gym.

- **Playmat:** The playmat is machine washable. Use cold water on a gentle cycle. Do not bleach. Tumble dry low.
- **Toys and Arches:** Wipe plastic toys and arches with a damp cloth and mild soap. Air dry thoroughly. Do not immerse musical toys in water.
- **Storage:** When not in use, store the activity gym in a clean, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Tigger musical toy not playing music.	Batteries are dead or incorrectly installed.	Replace with new 2 AA batteries, ensuring correct polarity.
Activity gym feels unstable.	Arches not fully inserted or secured.	Re-check that both ends of the arches are firmly seated in their pockets/loops.
Toys are not staying attached to arches.	Attachment rings/loops are not properly fastened.	Ensure all toy attachment rings are securely closed around the arches.

SPECIFICATIONS

Feature	Detail
Brand	Bright Starts
Model Number	10996-2
Recommended Age	Newborn + (Manufacturer Maximum Age: 11 months)
Item Dimensions (L x W x H)	34 x 29 x 18 inches
Item Weight	1.3 Kilograms
Material Type	Fabric (Playmat), Plastic (Arches, Toys)
Power Source (Tigger Toy)	Battery operated
Battery Type (Tigger Toy)	2 AA batteries (not included)
Educational Objective	Develop motor skills through interactive play
Indoor/Outdoor Usage	Indoor
Assembly Required	Minimal assembly (attaching arches and toys)

WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please contact Bright Starts directly through their official website or the contact details provided on the product packaging. Keep your proof of purchase for any warranty claims.