

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Nespresso](#) /

› [Nespresso Essenza Mini Espresso Machine User Manual](#)

Nespresso EN85L

Nespresso Essenza Mini Espresso Machine User Manual

Model: EN85L

INTRODUCTION

Welcome to the Nespresso Essenza Mini Espresso Machine user manual. This guide provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new espresso machine. Please read this manual thoroughly before first use and keep it for future reference.

The Nespresso Essenza Mini is designed for ease of use, offering two programmable cup sizes and a fast heat-up system to deliver perfect coffee quickly. Its compact design makes it suitable for any kitchen space.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then

remove plug from wall outlet.

- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Nespresso Essenza Mini machine.



Figure 1: Front view of the Nespresso Essenza Mini machine in lime, showing the main unit, drip tray, and a glass cup filled with espresso.



Figure 2: Frontal view of the Nespresso Essenza Mini machine, highlighting the transparent water tank on the left side and the coffee outlet on the right.



Figure 3: Visual representation of the two programmable cup sizes: Espresso (40 ml / 1.35 oz) and Lungo (110 ml / 3.7 oz).

- **Water Tank:** Removable tank for fresh water.
- **Coffee Outlet:** Where the brewed coffee dispenses.
- **Capsule Container:** Collects used Nespresso capsules.
- **Drip Tray:** Collects excess liquid and supports coffee cups.
- **Brewing Lever:** Used to insert and eject capsules.
- **Espresso Button:** For brewing a standard espresso shot (40 ml / 1.35 oz).
- **Lungo Button:** For brewing a longer coffee (110 ml / 3.7 oz).

SETUP AND FIRST USE

Follow these steps to set up your Nespresso Essenza Mini machine for the first time.

1. **Unpacking:** Carefully remove the machine from its packaging. Retain packaging materials for future transport or storage.
2. **Placement:** Place the machine on a flat, stable, heat-resistant surface, away from water splashes and heat sources.
3. **Rinse the Water Tank:** Remove the water tank and rinse it thoroughly with fresh drinking water.
4. **Fill the Water Tank:** Fill the water tank with fresh drinking water up to the maximum level.
5. **Plug In:** Plug the power cord into a grounded electrical outlet.
6. **Power On:** Press either the Espresso or Lungo button to turn on the machine. The buttons will blink as the machine heats up (approximately 30 seconds). They will glow steadily when ready.
7. **First Rinse Cycle:** Before brewing coffee, perform a rinse cycle to clean the internal system. Place a container (at least 0.5 liters) under the coffee outlet. Press the Lungo button three times consecutively. The machine will dispense hot water. Repeat this process until the water tank is empty.
8. **Machine Ready:** Once the rinse cycle is complete and the water tank is refilled, the machine is ready for use.

OPERATING INSTRUCTIONS

Brewing coffee with your Nespresso Essenza Mini is simple.

1. **Fill Water Tank:** Ensure the water tank is filled with fresh drinking water.
2. **Power On:** If the machine is off, press either the Espresso or Lungo button to turn it on. Wait for the buttons to stop blinking and glow steadily, indicating the machine is heated and ready.
3. **Insert Capsule:** Lift the brewing lever completely. Insert a Nespresso OriginalLine capsule into the capsule slot. Close the lever firmly.
4. **Place Cup:** Place a cup under the coffee outlet. For larger cups, the drip tray can be removed.
5. **Select Coffee Size:**
 - Press the **Espresso button** for a 40 ml (1.35 oz) shot.
 - Press the **Lungo button** for a 110 ml (3.7 oz) shot.

The machine will begin brewing. The button will blink during brewing and glow steadily when complete.

6. **Eject Used Capsule:** After brewing, lift the brewing lever to eject the used capsule into the internal capsule container. Close the lever.
7. **Automatic Power-Off:** The machine will automatically power off after 9 minutes of inactivity to save energy. You can press any button to turn it back on.

Programming Cup Sizes

You can customize the volume for the Espresso and Lungo buttons.

1. **Ensure Machine is On:** Make sure the machine is heated and ready.
2. **Insert Capsule:** Insert the desired Nespresso capsule.
3. **Start Programming:** Press and hold the button you wish to program (Espresso or Lungo).
4. **Release Button:** Release the button once the desired volume of coffee has been dispensed into your cup. The machine will remember this new volume for future brews with that button.

CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your machine.

Daily Cleaning

- **Drip Tray and Capsule Container:** Empty and rinse the drip tray and used capsule container daily with warm water. Dry with a clean cloth.
- **Water Tank:** Rinse the water tank daily with fresh drinking water.
- **Machine Exterior:** Wipe the machine's exterior with a damp cloth. Do not use abrasive cleaning agents or immerse the machine in water.

Descaling

Descaling is crucial to remove mineral deposits and maintain machine performance. The frequency depends on water hardness and usage. Nespresso recommends descaling at least once a year, or more frequently in hard water areas.

1. **Prepare:** Ensure the machine is empty of capsules and the drip tray is clean.
2. **Descaling Solution:** Fill the water tank with 0.5 liters of fresh water and add one sachet of Nespresso descaling solution.
3. **Enter Descaling Mode:** Turn the machine off. Press and hold both the Espresso and Lungo buttons simultaneously for 3 seconds. The buttons will blink rapidly.
4. **Start Descaling:** Place a container (at least 1 liter) under the coffee outlet. Press the Lungo button to start the descaling cycle. The machine will run the solution through intermittently.
5. **Rinse Cycle:** Once the water tank is empty, rinse it thoroughly and refill with fresh water. Press the Lungo button again to perform a rinse cycle with clean water.
6. **Exit Descaling Mode:** Once the rinse cycle is complete, press and hold both buttons for 3 seconds to exit descaling mode. The machine will return to normal operation.

TROUBLESHOOTING

If you encounter issues with your Nespresso Essenza Mini, refer to the table below for common problems and solutions.

| Problem | Possible Cause | Solution |
|----------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| No coffee, no water flow. | Water tank empty. Machine not primed. Blocked water circuit. | Fill water tank. Perform a rinse cycle. Descale the machine. |
| Coffee flows too slowly or not at all. | Machine needs descaling. | Perform descaling procedure. |
| Coffee is not hot enough. | Machine not preheated sufficiently. Cold cup. | Allow machine to heat up fully. Preheat cup with hot water. |
| Water leaks under the machine. | Drip tray full or not correctly positioned. Water tank not correctly positioned. | Empty and correctly position drip tray. Ensure water tank is seated properly. |
| Buttons are blinking rapidly. | Machine is in descaling mode. | Exit descaling mode by pressing and holding both buttons for 3 seconds. |

TECHNICAL SPECIFICATIONS

| Feature | Detail |
|------------------------|-------------------------------------------------|
| Brand | Nespresso |
| Model Number | EN85L |
| Dimensions (D x W x H) | 4.33"D x 12.79"W x 8.07"H |
| Weight | 4.35 pounds |
| Pressure | High-pressure pump |
| Heat-up Time | Under 30 seconds |
| Automatic Power-Off | After 9 minutes |
| Cup Sizes | Espresso (40 ml), Lungo (110 ml) - programmable |
| Materials | SS/Plastic/Aluminum |
| UPC | 044387002851 |

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Nespresso website or contact Nespresso customer service directly. Keep your proof of purchase for warranty claims.

You can also find additional resources and frequently asked questions on the Nespresso support pages.

Online Resources: www.nespresso.com