

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Audiovox](#) /

› [Audiovox RCA WHP141B Wireless 900MHz Full-Size Headphones Instruction Manual](#)

Audiovox WHP141B

Audiovox RCA WHP141B Wireless 900MHz Full-Size Headphones Instruction Manual

1. INTRODUCTION

Thank you for choosing the Audiovox RCA WHP141B Wireless 900MHz Full-Size Headphones. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new wireless headphones. Designed for comfort and clear audio, these headphones utilize RF (Radio Frequency) technology to deliver sound wirelessly up to 150 feet from the transmitter.

Please read this manual thoroughly before using the product to ensure optimal performance and safety.

2. SAFETY INFORMATION

- **Hearing Protection:** Avoid using headphones at high volume levels for extended periods to prevent hearing damage.
- **Battery Safety:** Use only the specified battery type (2 AA batteries). Do not mix old and new batteries, or different types of batteries. Dispose of used batteries responsibly.
- **Cleaning:** Disconnect the transmitter from the power source before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol sprays.
- **Water and Moisture:** Do not expose the headphones or transmitter to water or excessive moisture.
- **Ventilation:** Ensure adequate ventilation around the transmitter. Do not block ventilation openings.
- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Audiovox RCA WHP141B Wireless Headphones
- Wireless Transmitter / Charging Base
- AC Power Adapter

- Audio Connection Cables (e.g., RCA to 3.5mm adapter cable)
- 2 x AA Batteries



Image: Complete package contents of the Audiovox RCA WHP141B Wireless Headphones.

4. SETUP

4.1 Transmitter Setup

1. **Connect Power:** Plug the AC power adapter into the DC IN port on the back of the wireless transmitter. Plug the other end into a standard electrical outlet.
2. **Connect Audio Source:** Connect the audio connection cable from your audio source (e.g., TV, stereo system, computer) to the audio input jacks on the transmitter. Use the appropriate cable for your device (e.g., RCA cables or a 3.5mm adapter).
3. **Select Channel:** On the back of the transmitter, select one of the three available channels (1, 2, or 3) using the channel switch. This channel must match the channel selected on your headphones.

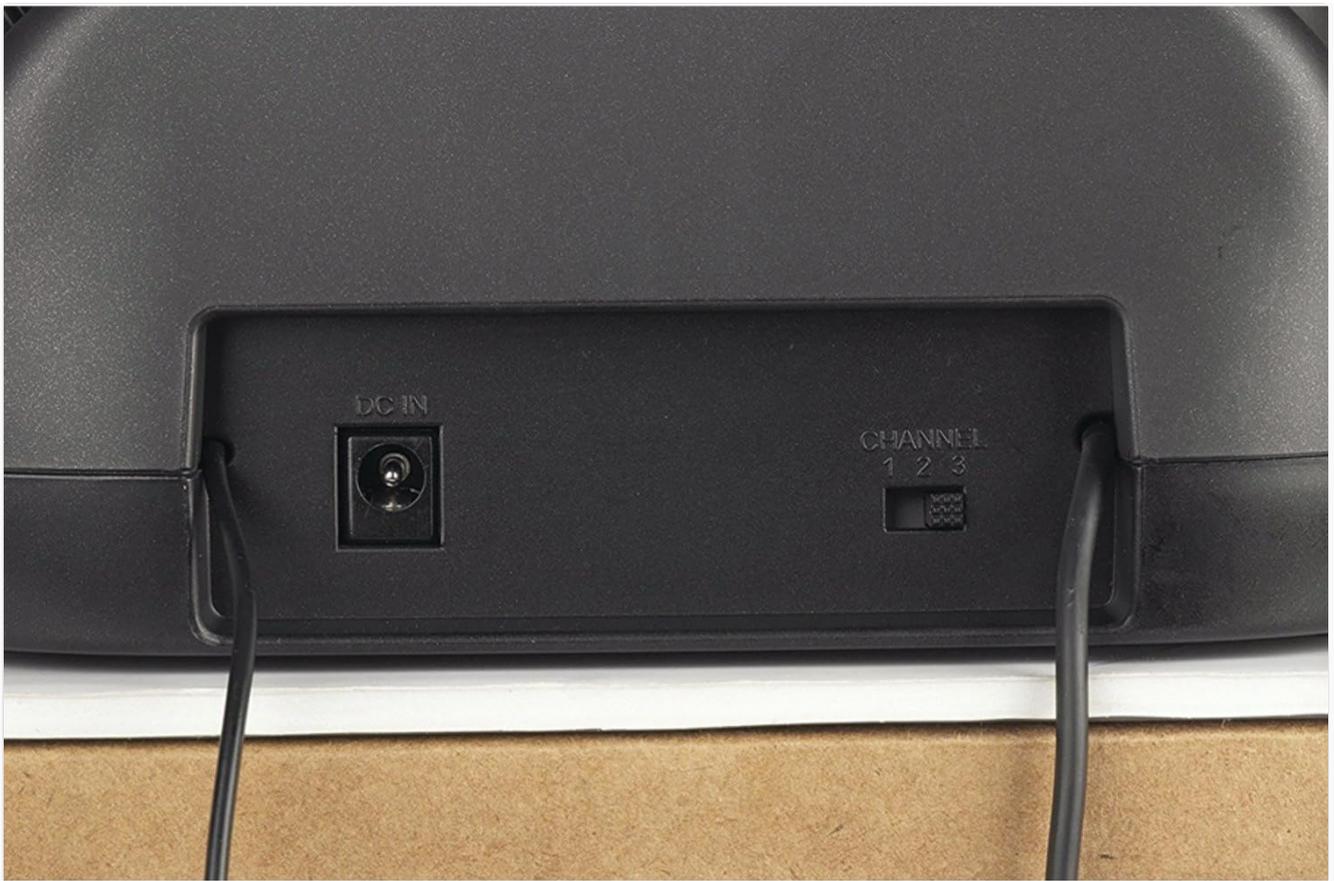


Image: Transmitter DC IN port and channel switch.

4.2 Headphone Setup

1. **Insert Batteries:** Open the battery compartment on one of the headphone earcups. Insert two AA batteries, ensuring correct polarity (+/-). Close the compartment securely.
2. **Power On:** Locate the ON/OFF switch on the right earcup of the headphones. Slide the switch to the "ON" position. A power indicator light should illuminate.



Image: Headphone ON/OFF switch.

- Select Channel:** On the right earcup, locate the channel selection switch (CH. 1, 2, 3). Slide the switch to match the channel selected on your transmitter. This ensures proper signal reception.



Image: Headphone channel selection switch.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- To turn on the headphones, slide the ON/OFF switch on the right earcup to the "ON" position. The power indicator light will illuminate.
- To turn off the headphones, slide the ON/OFF switch to the "OFF" position. The power indicator light will turn off.

5.2 Volume Control

- Adjust the volume using the volume control dial or buttons located on the right earcup of the headphones.
- Start with a low volume level and gradually increase it to a comfortable listening level.

5.3 Channel Selection

- If you experience interference or static, try changing the channel on both the transmitter and the headphones to a different matching channel (1, 2, or 3).

5.4 Charging the Headphones

When the headphone batteries are low, the sound quality may degrade or the headphones may stop working. To charge:

- Ensure the transmitter is powered on and connected to its AC adapter.
- Place the headphones onto the charging base, ensuring the charging contacts align. The charging indicator light on the transmitter (if present) or headphones should illuminate to indicate charging.

- Allow sufficient time for the batteries to fully charge before use.



Image: Audiovox RCA WHP141B Wireless Headphones.

6. MAINTENANCE

- **Cleaning:** Wipe the headphones and transmitter with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Battery Replacement:** Replace AA batteries in the headphones when they no longer hold a charge or if the power indicator does not light up. Ensure correct polarity.
- **Storage:** When not in use for extended periods, store the headphones and transmitter in a cool, dry place. Remove batteries from the headphones if storing for several months.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from headphones	Headphones are off Low or dead batteries Transmitter not powered Audio source not playing Incorrect channel selection Volume too low	Slide ON/OFF switch to ON Replace or recharge batteries Ensure transmitter AC adapter is plugged in Verify audio source is playing and connected Match headphone channel to transmitter channel Increase headphone volume
Static or poor sound quality	Interference from other devices Headphones too far from transmitter Incorrect channel selection Low battery on headphones	Change channel on both headphones and transmitter Move closer to the transmitter Ensure channels match Replace or recharge batteries
Short wireless range	Obstructions between headphones and transmitter Interference Low battery	Ensure clear line of sight to transmitter Change channel Replace or recharge batteries
Headphones not charging	Headphones not properly seated on base Transmitter not powered Faulty batteries	Adjust headphones on charging base to ensure contact Check transmitter power connection Replace batteries

8. SPECIFICATIONS

Feature	Specification
Model Number	WHP141B
Connectivity Technology	RF (Radio Frequency)
Wireless Communication Technology	RF
Wireless Range	Up to 150 feet (approx. 45 meters)

Feature	Specification
Headphone Type	Over-Ear, Full-Size
Noise Control	Sound Isolation
Power Source (Headphones)	2 x AA Batteries (included)
Power Source (Transmitter)	AC Power Adapter
Control Type	Media Control (Volume, Channel)
Material	Plastic
Color	Black
Product Dimensions	10 x 6 x 7.5 inches (approx.)
Item Weight	1.89 pounds (approx.)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Audiovox website. Keep your proof of purchase for warranty claims.

