

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MISTRAL](#) /

› [MISTRAL MO17D 17L Electric Oven User Manual](#)

MISTRAL MO17D

MISTRAL MO17D 17L Electric Oven User Manual

Model: MO17D



1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the MISTRAL MO17D Electric Oven. Retain this manual for future reference. Incorrect operation may cause damage to the appliance or injury to the user.

- Always ensure the oven is placed on a stable, heat-resistant surface with adequate ventilation around it.
- Do not touch hot surfaces. Use oven mitts or gloves when handling hot items or parts.
- To protect against electrical shock, do not immerse the cord, plug, or oven in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer, as this may cause hazards.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended household use.
- Do not cover the crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Always ensure the power cord is not in contact with hot surfaces.

2. PRODUCT OVERVIEW

The MISTRAL MO17D is a compact 17-liter electric oven designed for versatile cooking. It features three control knobs for precise temperature, function, and timer settings, along with a transparent glass door for easy monitoring of your food.



Figure 2.1: Front view of the MISTRAL MO17D Electric Oven, showing the main body, glass door, and control panel on the right side.

Components:

- **Temperature Control Knob:** Adjusts oven temperature.
- **Function Control Knob:** Selects heating elements (Upper, Lower, or Both).
- **Timer Control Knob:** Sets cooking duration or 'Stay ON' mode.
- **Glass Door:** Transparent door for viewing food.
- **Baking Rack:** For placing food items.
- **Baking Tray:** For cooking or collecting drips.
- **Power Indicator Light:** Illuminates when the oven is operating.





Figure 2.2: Close-up view of the three control knobs on the MISTRAL MO17D Electric Oven: Temperature (top), Function (middle), and Timer (bottom).



Figure 2.3: The MISTRAL MO17D Electric Oven with its glass door open, revealing the interior cavity and the removable baking rack.

3. SETUP AND INSTALLATION

3.1 Unpacking

1. Carefully remove the oven and all accessories from the packaging.
2. Remove any packing materials, stickers, or protective films from the oven and its accessories.
3. Inspect the oven for any signs of damage. Do not operate if damaged.

3.2 Placement

1. Place the oven on a flat, stable, and heat-resistant surface.
2. Ensure there is at least 10-15 cm of clear space on all sides (top, back, and sides) for proper ventilation. Do not place the oven directly against a wall or under cabinets.
3. Keep the oven away from flammable materials, curtains, and heat sources.
4. Ensure the power cord can reach a grounded electrical outlet without being stretched or passing over hot surfaces.

3.3 Before First Use

1. Wipe the interior and exterior of the oven with a damp cloth. Dry thoroughly.
2. Wash the baking rack and tray in warm, soapy water, rinse, and dry completely.
3. To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at the maximum temperature (240°C) with both upper and lower heating elements selected. Ensure the area is well-ventilated during this process. A slight odor or smoke is normal during this initial use.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control knobs before operation.

4.1 Control Panel Functions

- **Temperature Control Knob (Top):** Allows selection of temperatures from 90°C to 240°C.
- **Function Control Knob (Middle):** Selects the heating mode:
 - **Upper Heat:** Activates the top heating element. Ideal for browning or grilling.
 - **Lower Heat:** Activates the bottom heating element. Suitable for baking bases.
 - **Upper & Lower Heat:** Activates both heating elements. Best for general baking and roasting.
- **Timer Control Knob (Bottom):** Sets the cooking time from 0 to 60 minutes. It has a bell that rings when the set time expires. The 'Stay ON' setting allows for continuous operation.



Figure 4.1: The MISTRAL MO17D Electric Oven with its door open, showing both the baking rack and the baking tray inserted into the cavity.

4.2 General Operation

1. **Prepare Food:** Place your food on the baking rack or tray.
2. **Insert Food:** Carefully slide the rack or tray into the desired position within the oven. Close the glass door securely.
3. **Set Temperature:** Turn the **Temperature Control Knob** to the desired cooking temperature (e.g., 180°C for baking).
4. **Select Function:** Turn the **Function Control Knob** to select the appropriate heating mode (e.g., Upper &

Lower Heat for general baking).

5. **Set Timer:** Turn the **Timer Control Knob** to the desired cooking time (up to 60 minutes). The power indicator light will illuminate, indicating the oven is heating. If continuous operation is needed, turn the timer to 'Stay ON'.
6. **Monitor Cooking:** Observe the cooking process through the glass door.
7. **Completion:** When the timer reaches '0', a bell will ring, and the oven will turn off. If using 'Stay ON', manually turn the timer knob to 'OFF' when cooking is complete.
8. **Remove Food:** Using oven mitts, carefully open the door and remove the cooked food.

4.3 Preheating

For best results, it is often recommended to preheat the oven before placing food inside. Set the desired temperature and function, then set the timer for 5-10 minutes. Once the preheating time is complete, insert your food and reset the timer for the required cooking duration.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your oven.

1. **Always unplug the oven** from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the finish.
3. **Interior Cleaning:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive oven cleaner designed for conventional ovens can be used, following the product's instructions. Ensure all cleaner residue is removed.
4. **Accessories:** The baking rack and tray can be washed in warm, soapy water. Rinse thoroughly and dry completely before returning them to the oven.
5. **Crumb Tray:** Regularly remove and clean the crumb tray to prevent grease buildup and potential fire hazards.
6. **Glass Door:** Clean the glass door with a glass cleaner or a damp cloth. Avoid harsh chemicals that could damage the seal.
7. **Storage:** When not in use, ensure the oven is clean and dry. Store it in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your MISTRAL MO17D Electric Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure the oven is securely plugged into a working outlet. Check your household's circuit breaker. Turn the timer knob past '0' to activate.
Oven not heating properly.	Incorrect temperature or function setting; door not closed properly.	Verify temperature and function knobs are set correctly. Ensure the oven door is fully closed.
Uneven cooking.	Food placed too close to heating elements; overcrowding.	Adjust rack position. Avoid overcrowding the oven. Rotate food halfway through cooking if necessary.

Problem	Possible Cause	Solution
Smoke or odor during initial use.	Residual manufacturing oils burning off.	This is normal for first use. Ensure good ventilation. It should dissipate after a few uses.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the MISTRAL MO17D Electric Oven.

- **Model:** MO17D
- **Capacity:** 17 Liters
- **Power Source:** Electric
- **Temperature Range:** 90°C - 240°C
- **Timer:** 60 minutes with bell, 'Stay ON' function
- **Functions:** Upper Heat, Lower Heat, Upper & Lower Heat
- **Control Type:** Knob
- **Material (Door):** Glass
- **Product Dimensions (L x W x H):** Approximately 44.5 x 36 x 28.5 cm
- **Item Weight:** Approximately 4.75 kg



Figure 7.1: Diagram illustrating the approximate dimensions of the MISTRAL MO17D Electric Oven.

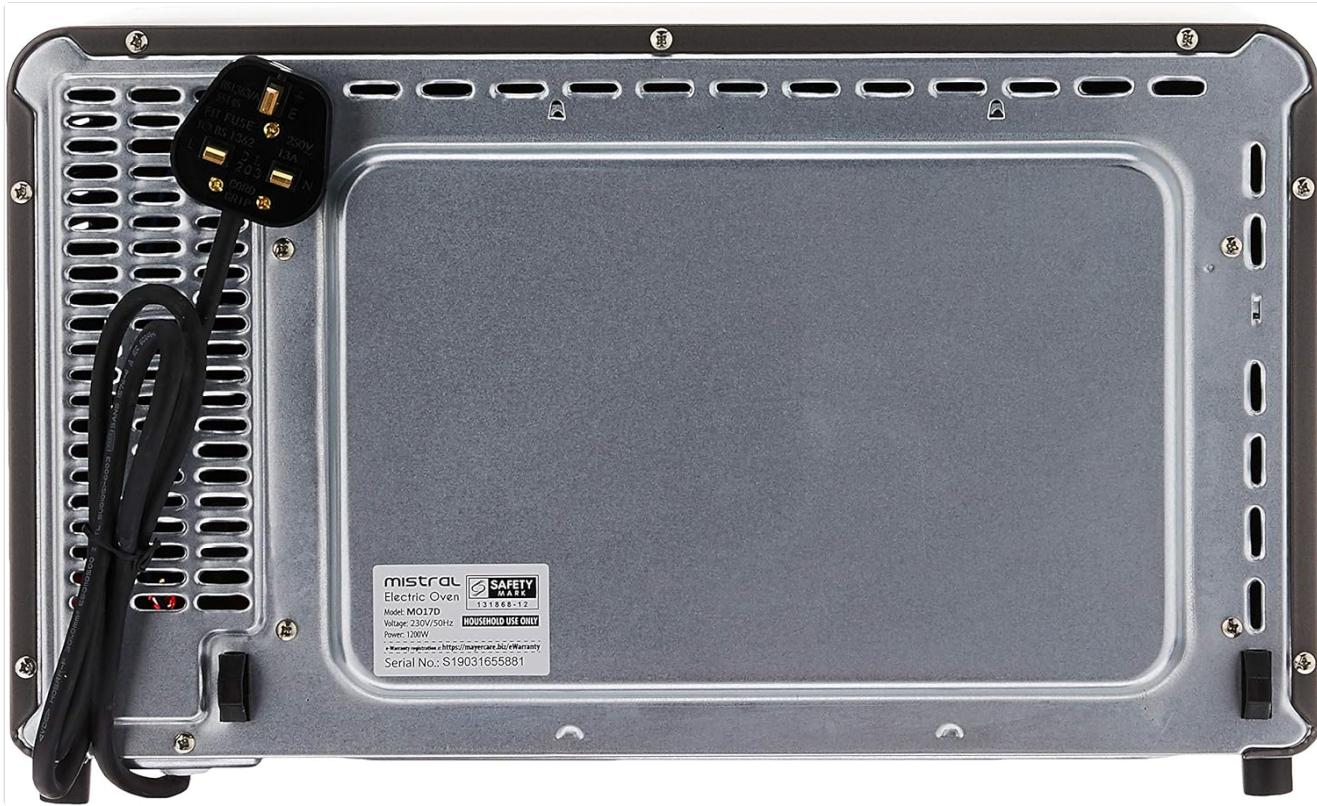


Figure 7.2: Rear view of the MISTRAL MO17D Electric Oven, showing the ventilation grilles and power cord connection.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The MISTRAL MO17D Electric Oven comes with a **1 Year Local (Singapore) Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. Please retain your proof of purchase for warranty claims.

The warranty does not cover:

- Damage caused by misuse, abuse, accident, or neglect.
- Damage from unauthorized repairs or modifications.
- Normal wear and tear.
- Commercial use.

8.2 Customer Support

For technical assistance, warranty claims, or service inquiries, please contact MISTRAL customer support through their official website or the retailer where the product was purchased. Please have your model number (MO17D) and proof of purchase ready when contacting support.