

Tekswamp TeK-310164

Tekswamp Replacement Remote Control Instruction Manual

For Cambridge Audio Azur 640A (Model: TeK-310164)

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Tekswamp replacement remote control. This remote is designed to be compatible with the Cambridge Audio Azur 640A and offers most of the original device's functions without requiring additional programming.

SETUP

Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Rear view of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

Note: The remote control features a security screw on the battery compartment cover. This is a childproofing feature designed to prevent unauthorized access to the batteries. A small screwdriver may be required to open or secure the compartment.

OPERATING INSTRUCTIONS

This Tekswamp remote control is pre-programmed for compatibility with the Cambridge Audio Azur 640A. No additional programming is required. Simply point the remote at your device and press the desired function button.

Basic Functions

- **Power On/Off:** Press the **POWER** button to turn your device on or off.
- **Menu Navigation:** Use the directional arrow buttons (**UP, DOWN, LEFT, RIGHT**) and the **OK** button to navigate through menus.
- **Input Signal Selection:** Use the **SRC** (Source) button to cycle through available input signals.
- **Volume Control:** Use the **V+** and **V-** buttons to adjust the volume.



Image: Front view of the Tekswamp remote control, highlighting the layout of the buttons for various functions.

ON Indicator

An **ON Indicator** light illuminates after any active button on the remote is pressed. This indicates that the remote is functioning correctly and transmitting an infrared (IR) signal to your device.

Specific Functions

While this remote provides most original commands, some specific functions such as page flip, keystone correction, video adjustment, and certain number pad functions may not work with all devices. The remote does not include a laser pointer function.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes inconsistent or the ON Indicator light dims. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries or different types of batteries.

Durability

The remote is constructed from durable plastic designed to withstand regular use. The buttons are designed to be comfortable and responsive without being overly sensitive, which helps prevent accidental signals and extends their lifespan.

TROUBLESHOOTING

- **Remote not responding:** Ensure there is a clear line of sight between the remote and your device. Check that the batteries are correctly installed and have sufficient charge. Replace batteries if necessary.
- **Intermittent response:** This may indicate low battery power. Replace the batteries.
- **Certain functions not working:** As noted in the Operating Instructions, some highly specific functions may not be supported by this replacement remote. Verify if the function is critical for your usage.

SPECIFICATIONS

Feature	Specification
Brand	Tekswamp
Model Number	TeK-310164
Compatible Devices	Cambridge Audio Azur 640A (Home Theater)
Connectivity Technology	Infrared (IR)
Max Number of Supported Devices	1
Button Quantity	31
Maximum Range	10 Meters
Battery Type	2 x AAA batteries (not included)
Color	Black
Item Weight	2 Ounces

WARRANTY AND SUPPORT

For any questions regarding the operation or compatibility of your Tekswamp remote control, please refer to the manufacturer's support channels. Specific warranty information may be available through the point of purchase or the Tekswamp official website.