



---

[Manuals.plus](#) /

› [Little Tikes](#) /

› Little Tikes Cozy Pumper-Grey Instruction Manual

## Little Tikes 645327M

# Little Tikes Cozy Pumper-Grey Instruction Manual

## INTRODUCTION

---

This manual provides instructions for the safe and proper use of the Little Tikes Cozy Pumper-Grey. This toy is designed to enhance imaginative play for children aged 18 months to 5 years, allowing them to simulate fueling up their ride-on toys.



Image: Front view of the Little Tikes Cozy Pumper-Grey, highlighting its interactive features.

## SAFETY INFORMATION

---

No specific safety warnings are applicable beyond general toy safety guidelines. Ensure the toy is used on a stable surface and under adult supervision, especially for younger children, to prevent tipping or misuse.

## SETUP

---

### Battery Installation

1. Locate the battery compartment on the back or bottom of the Cozy Pumper.

2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert two (2) AA alkaline batteries, ensuring correct polarity (+/-). Batteries are not included with the product.
4. Replace the battery compartment cover and secure it with the screw.

**Note:** Always use fresh batteries and dispose of old batteries responsibly. Do not mix old and new batteries or different types of batteries.

## OPERATING INSTRUCTIONS

---

The Little Tikes Cozy Pumper is designed for interactive play. Follow these steps to operate the toy:

- **Sound Buttons:** The pumper features three weatherproof buttons. Press these buttons to activate six different fun sounds, simulating various fueling actions and vehicle sounds.
- **Fuel Nozzle:** The toy includes a fuel nozzle attached by a hose. Children can pretend to remove the nozzle from its storage slot on the side of the pumper and insert it into their ride-on toy's "fuel tank."
- **Credit Card Slot:** A slot is provided for pretend credit card transactions (credit card not included), adding to the realistic play experience.



Image: Children engaging in imaginative play with the Cozy Pumper and a ride-on vehicle.

## MAINTENANCE

- **Cleaning:** Wipe the toy with a damp cloth and mild soap as needed. Do not immerse the toy in water.
- **Storage:** Store the toy indoors when not in use to protect it from extreme weather conditions and prolong its lifespan.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
No sound or intermittent sound.	<ul style="list-style-type: none"><li>• Check if batteries are installed correctly.</li><li>• Replace with fresh AA alkaline batteries.</li><li>• Ensure battery compartment cover is securely closed.</li></ul>
Buttons are difficult to press.	Ensure the toy is on a stable surface. If the issue persists, contact customer support.

## SPECIFICATIONS

- **Model Number:** 645327M
- **Product Dimensions:** 17.5 x 12.38 x 8.5 inches (44.45 x 31.45 x 21.59 cm)
- **Item Weight:** 3.3 pounds (1.5 kg)
- **Recommended Age:** 18 months - 5 years
- **Batteries Required:** 2 AA alkaline batteries (not included)
- **Manufacturer:** MGA Entertainment
- **Release Date:** May 18, 2017

## WARRANTY AND SUPPORT

Specific warranty details are not provided in this manual. For information regarding warranty coverage, product support, or replacement parts, please visit the official Little Tikes website or contact their customer service department directly. You can typically find support information on the manufacturer's official website: [www.littletikes.com](http://www.littletikes.com)

