

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Manfrotto](#) /

› [Manfrotto Manhattan Mover-50 Camera Backpack Instruction Manual](#)

Manfrotto MB MN-BP-MV-50

Manfrotto Manhattan Mover-50 Camera Backpack Instruction Manual

Model: MB MN-BP-MV-50

INTRODUCTION

The Manfrotto Manhattan Mover-50 Camera Backpack is designed for photographers who require a versatile and protective carrying solution for their DSLR or mirrorless camera gear. This backpack offers secure storage, customizable compartments, and features suitable for urban commuting and travel.

Its internal design allows for efficient organization of camera bodies, lenses, flashes, and other accessories, while external features provide additional utility. The backpack also includes dedicated compartments for laptops and tablets, making it a comprehensive solution for carrying both photographic equipment and personal items.

PRODUCT FEATURES

- **Protective Camera and Laptop Backpack:** Designed to safeguard your valuable equipment.
- **Capacity:** Accommodates a DSLR with a 70-200/2.8 lens attached, plus up to 4 additional lenses and a flash. Also suitable for premium mirrorless cameras (compact system camera) like a Sony a7 or Fujifilm X Series with a standard zoom lens attached plus one additional lens.
- **Flexi Camera Shell Protection:** Innovative system for fully customized internal space and enhanced gear protection.
- **Removable Internal Insert:** Provides extra safe gear storage and allows the backpack to be converted for everyday use.
- **Multiple Access Points:** Secure back access and convenient top access for quick retrieval of gear.
- **Dedicated Device Compartments:** Two padded compartments for a 15.6" laptop and an iPad Pro 9.7.
- **Never Lose Tripod Holder System:** Front-mounted system for carrying a tripod, skateboard, or other personal items.
- **Rain Protector:** Included for protection against adverse weather conditions.

SETUP AND CONFIGURATION

1. Accessing the Main Compartment

The main camera compartment is accessible from the back of the backpack. Unzip the main rear panel to reveal the

internal padded insert.



Image: Rear access to the main compartment, displaying organized camera equipment including a DSLR, multiple lenses, and a flash unit.

2. Customizing Internal Dividers

The internal pouch features the Flexi Camera Shell system with adjustable dividers. These dividers use hook-and-loop fasteners, allowing you to reconfigure the compartments to perfectly fit your specific camera body, lenses, and accessories. Ensure all gear is snugly secured to prevent movement during transport.



Image: The removable internal camera insert with adjustable padded dividers, demonstrating its customizable layout for various gear configurations.

3. Utilizing Laptop and Tablet Compartments

The backpack includes two padded compartments designed to hold a 15.6" laptop and an iPad Pro 9.7. These are typically located on the side or rear panel, separate from the main camera compartment, providing protection for your electronic devices.

4. Attaching a Tripod or External Items

The front of the backpack features a "Never Lose Tripod Holder System." This system uses adjustable straps and webbing to securely attach a tripod, monopod, or other personal items like a jacket or drone. To use, extend the double webbing in its front panel and secure your item.

OPERATING THE BACKPACK

1. Carrying Options

The Manhattan Mover-50 can be carried as a traditional backpack using its padded shoulder straps. For added stability and comfort, especially when carrying heavy loads, utilize the adjustable sternum and waist straps. The backpack also features a top handle for quick grabs.



Image: Back view of the Manfrotto Manhattan Mover-50 backpack, highlighting the ergonomic shoulder straps and waist belt for comfortable carrying.

2. Quick Top Access

For quick access to smaller items or a compact camera, the backpack features an easy top access zipper. This allows you to retrieve frequently used items without fully opening the main compartment.



Image: Top compartment of the backpack opened, revealing space for personal items or small camera accessories.

3. Using the Rain Protector

In adverse weather conditions, deploy the included rain protector. Locate the rain cover, typically stored in a small pocket, and stretch it over the entire backpack to shield your gear from moisture.



Image: The Manfrotto Manhattan Mover-50 backpack fully covered by its protective rain cover, ready for wet conditions.

4. Side Pocket for Water Bottle

The backpack features a side pocket designed to hold a water bottle, providing convenient access to hydration during your travels.



Image: Side view of the Manfrotto Manhattan Mover-50 backpack, showing a water bottle securely placed in the external side pocket.

MAINTENANCE

1. Cleaning

To clean the exterior of the backpack, use a soft cloth dampened with mild soap and water. Avoid harsh chemicals or abrasive cleaners. For the interior, remove the padded insert and gently wipe down surfaces. Allow all components to air dry completely before reassembling or storing.

2. Storage

When not in use, store the backpack in a cool, dry place away from direct sunlight. Ensure no heavy objects are placed on top of the backpack to maintain its shape and protect internal padding.

TROUBLESHOOTING

1. Zippers Sticking or Not Closing Properly

If zippers become stiff or difficult to operate, apply a small amount of zipper lubricant or graphite (from a pencil) to the teeth. Ensure the backpack is not overpacked, as excessive strain can cause zippers to misalign or fail.

2. Backpack Losing Shape When Loaded

The backpack is designed to hold its shape with proper loading. Ensure the internal dividers are correctly positioned and supporting your gear. Distribute weight evenly to prevent sagging. If the internal pouch is removed, the backpack may feel less rigid.

3. Water Bottle Pocket Fit

The side pocket is designed to hold a water bottle. If a bottle does not fit or is too loose, consider bottles with different diameters. The pocket is not stretchable, so bottle size compatibility is fixed.

SPECIFICATIONS

Feature	Detail
Model Number	MB MN-BP-MV-50
Product Dimensions	12.6 x 7.87 x 19.68 inches
Item Weight	3.48 pounds (approx. 3.5 Pounds)
Capacity Total	50 Liters
Manufacturer	Manfrotto
First Available	May 25, 2017
Material	Not explicitly stated, but designed for durability and protection.
Laptop Compatibility	Up to 15.6 inches
Tablet Compatibility	iPad Pro 9.7 inches

WARRANTY AND SUPPORT

Warranty Information

Manfrotto products typically come with a standard warranty. Some users have reported a 10-year warranty for this product upon registration. Please refer to the warranty card included with your purchase or visit the official Manfrotto website for the most accurate and up-to-date warranty details and registration procedures.

Customer Support

For technical assistance, spare parts, or further inquiries regarding your Manfrotto Manhattan Mover-50 Camera Backpack, please visit the official Manfrotto support website or contact their customer service department directly. Contact information can usually be found on the Manfrotto website or in the product packaging.

Official Manfrotto Store: [Manfrotto Store on Amazon](#)



