

[Manuals.plus](#) /

› [Pentel](#) /

› Pentel Hi-Polymer Block Eraser ZEH10PC10 User Manual

Pentel ZEH10PC10

Pentel Hi-Polymer Block Eraser ZEH10PC10 User Manual

Model: ZEH10PC10 | Brand: Pentel

INTRODUCTION

This manual provides instructions for the use and care of your Pentel Hi-Polymer Block Erasers, model ZEH10PC10. These high-quality, latex-free erasers are designed to remove lead markings easily and cleanly, minimizing smudges, paper tears, and ghosting. The Hi-Polymer material ensures the erasers remain soft and effective over time, without cracking or hardening.

Each block eraser includes a protective sleeve to maintain cleanliness. The design is suitable for both detailed corrections and erasing larger areas efficiently.

PACKAGE CONTENTS

- 10 x Pentel Hi-Polymer Block Erasers (ZEH10PC10)



Image: A box containing ten Pentel Hi-Polymer Block Erasers, with several individual erasers displayed in front of the box. The erasers are white with blue and black branding.

SETUP

The Pentel Hi-Polymer Block Erasers require no assembly or complex setup. They are ready for immediate use upon removal from their packaging.

1. Remove the desired number of erasers from the box.
2. Each eraser is protected by a paper sleeve. Slide this sleeve off to expose the erasing surface. The sleeve can be partially kept on to provide a grip and keep the eraser clean during use.

OPERATING INSTRUCTIONS

The Pentel Hi-Polymer Block Eraser is designed for effective removal of graphite pencil marks from paper surfaces.

1. **Positioning:** Hold the eraser firmly between your fingers.
2. **Erasing Motion:** Gently rub the eraser across the pencil mark you wish to remove. Apply light to moderate pressure. The Hi-Polymer material is effective with minimal pressure, reducing the risk of paper damage.
3. **Residue Removal:** After erasing, small eraser shavings will be left on the paper. Gently brush these away with a clean hand or a soft brush. Avoid rubbing the shavings into the paper, as this can cause smudges.



Image: A Pentel Hi-Polymer Eraser positioned on a notebook page, demonstrating the process of erasing pencil marks. Eraser residue is visible next to the erased area.

QUALITY

COMPLETELY REMOVES PENCIL MARKINGS



Image: A close-up view of a notebook page after using a Pentel Hi-Polymer Eraser, showing clean removal of pencil marks with minimal residue, highlighting the quality of erasure.

MAINTENANCE

To ensure optimal performance and longevity of your Pentel Hi-Polymer Block Erasers:

- **Keep Clean:** The protective paper sleeve helps keep the eraser clean. Slide it back on when not in use. If the eraser surface becomes dirty with graphite, gently rub it on a clean, scrap piece of paper to remove the residue.
- **Storage:** Store erasers in a cool, dry place away from direct sunlight and extreme temperatures. This prevents the material from degrading or becoming sticky.
- **Avoid Contact:** Do not allow erasers to come into prolonged contact with plastics or other materials that might react with the Hi-Polymer, potentially causing damage or sticking.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Eraser leaves smudges.	<ul style="list-style-type: none"> Eraser surface is dirty with graphite. Excessive pressure applied. Paper quality is poor or too thin. 	<ul style="list-style-type: none"> Clean the eraser surface by rubbing it on a scrap piece of paper. Use lighter pressure. Test on a less visible area of the paper first.
Eraser tears paper.	<ul style="list-style-type: none"> Excessive pressure applied. Paper is too thin or delicate. 	<ul style="list-style-type: none"> Reduce pressure during erasing. Use caution on delicate paper types.
Eraser feels hard or brittle.	<ul style="list-style-type: none"> Improper storage (e.g., extreme temperatures). 	<ul style="list-style-type: none"> Ensure erasers are stored in a cool, dry environment. While Hi-Polymer erasers are designed not to harden, extreme conditions can affect any material.

SPECIFICATIONS

Feature	Detail
Brand	Pentel
Model Number	ZEH10PC10
Material Type	Hi-Polymer
Color	White
Shape	Rectangular
Item Weight (per pack)	10.1 ounces
Product Dimensions (single eraser)	2.6 x 0.95 x 0.1 inches
Quantity	10 erasers per box
Recommended Uses	Drawing, Writing
Latex-Free	Yes

LATEX-FREE

VARIETY OF SIZES

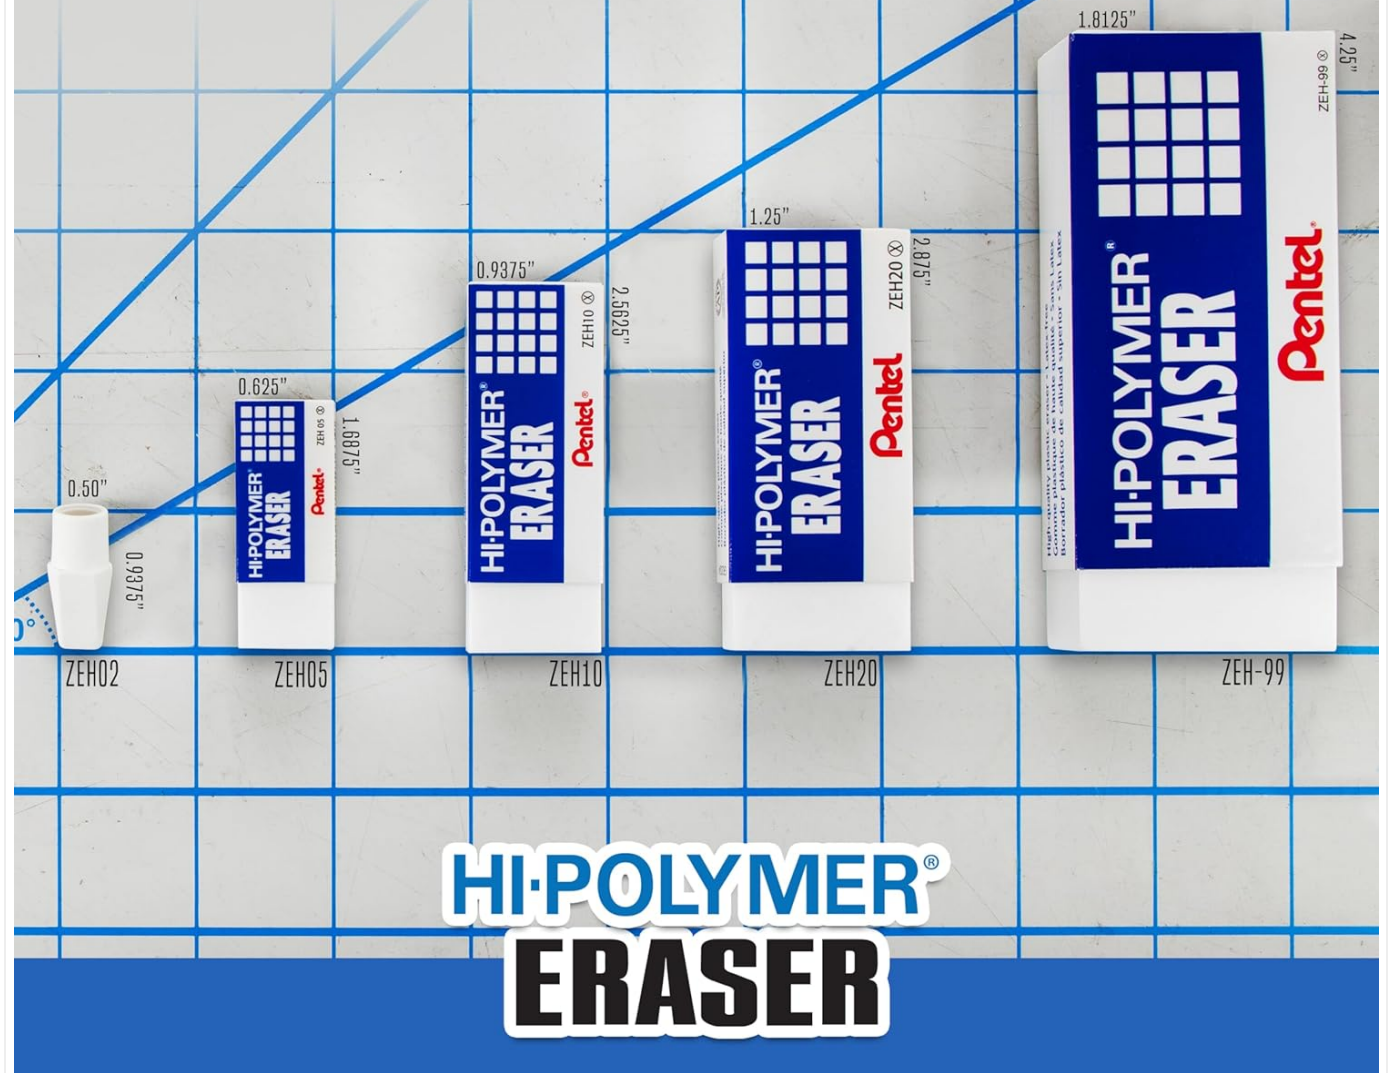


Image: A visual comparison chart displaying various sizes of Pentel Hi-Polymer Erasers, including dimensions for different models, illustrating the range of available options.

WARRANTY AND SUPPORT

Specific warranty information for the Pentel Hi-Polymer Block Erasers (ZEH10PC10) is not provided in the product details. For warranty inquiries or customer support, please refer to the official Pentel website or contact Pentel customer service directly.

You can visit the official Pentel store for more information: [Pentel Store on Amazon](#)



