

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual

Redi-Remote RTCHT940XRC

Redi-Remote Replacement Remote Control User Manual

For Craig Models: CHT940XRC, CHT940X, CHT939, CHT939M

1. INTRODUCTION

This manual provides detailed instructions for the Redi-Remote replacement remote control. This remote is specifically designed to be compatible with various Craig units, including models CHT940XRC, CHT940X, CHT939, and CHT939M. It is important to note that this is a custom replacement remote manufactured by Redi-Remote, and not an original Craig remote control.

2. KEY FEATURES

- **No Programming Required:** This remote is pre-programmed and ready to use with compatible Craig units right out of the box.
- **Dedicated Functionality:** Designed to perform every function for the specific Craig unit it is intended to control.
- **Non-Programmable for Auxiliary Devices:** Redi-Remotes cannot be programmed to control any auxiliary devices.
- **Compact Design:** Measures approximately 7 1/2" x 2 1/4" x 3/4", offering a comfortable grip.
- **Sliding Cover:** Features a sliding cover over the lower half to reveal model-specific functions.

3. SETUP AND INITIAL USE

3.1. Battery Installation

The remote control requires 4 AAA batteries for operation. To install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Close the battery compartment cover securely.

3.2. First Use

No programming is required for this remote. Once batteries are installed, point the remote towards your compatible Craig unit and begin operation.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the layout and functions of the remote control buttons. The remote features a sliding cover that conceals additional, model-specific functions.



Figure 1: Redi-Remote Replacement Remote Control. This image displays the full remote, including the top section with power, channel, volume, and number pad buttons, and the lower section with media controls and audio adjustments, revealed by sliding down the cover.

4.1. Button Functions (Top Section)

Button	Function
PWR	Power On/Off for the Craig unit.
SLEEP	Activates the sleep timer function.
TV/VIDEO	Switches between TV and Video input modes.
DISP	Displays on-screen information.
CH+ / CH-	Changes channels up or down.
VOL+ / VOL-	Adjusts volume up or down.
MUTE	Mutes or unmutes the audio.
MENU	Accesses the unit's main menu.

Button	Function
RECALL	Recalls the previously selected channel or input.
0-9, 100, ENT	Numeric keypad for direct channel entry and other numerical inputs. 'ENT' confirms entry.

4.2. Button Functions (Lower Section - Slide Down to Reveal)

Slide the lower cover of the remote downwards to access these additional functions.

Button	Function
POWER (lower)	Additional power control, possibly for specific components.
MUTE (lower)	Additional mute control.
TUNE+ / TUNE-	Adjusts tuner frequency up or down.
EQ	Accesses equalizer settings.
MO/ST SOURCE	Selects mono/stereo mode or input source.
Play/Pause (▶ /)	Controls playback (play/pause) for media.
BASS+ / BASS-	Adjusts bass levels up or down.
TREB+ / TREB-	Adjusts treble levels up or down.
VOL+ / VOL- (lower)	Additional volume controls, possibly for specific audio outputs.

5. MAINTENANCE

5.1. Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace all 4 AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

5.2. Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

6. TROUBLESHOOTING

If you experience issues with your Redi-Remote, consider the following:

- **Remote not responding:** Ensure batteries are correctly installed and are not depleted. Replace batteries if necessary.
- **Line of Sight:** Ensure there are no obstructions between the remote control and the Craig unit's infrared receiver. The remote requires a clear line of sight to function.
- **Compatibility:** Verify that your Craig unit model (CHT940XRC, CHT940X, CHT939, CHT939M) is listed as

compatible.

If you have any concerns with the remote after purchase that are not resolved by the above steps, please contact the seller directly for assistance.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	5 ounces
Model Number	RTCHT940XRC
Batteries Required	4 AAA batteries (not included)
Connectivity Technology	Infrared (IR)
Max Number of Supported Devices	1 (the specified Craig unit)
Special Feature	No Programming Required
Manufacturer	Redi-Remote

8. SUPPORT

For any questions, concerns, or issues regarding your Redi-Remote replacement remote control, please contact the seller directly through your purchase platform. They will be able to provide specific assistance and support related to your product.

© 2024 Redi-Remote. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0714KDHK4>

More documents and user manuals: <https://manuals.plus/>