

[Manuals.plus](#) /

› [DART](#) /

› DART DCCDLW626 Open-Top Dome Lid User Manual

DART DCCDLW626

DART DCCDLW626 Open-Top Dome Lid User Manual

For 16-24 oz Plastic Cups

INTRODUCTION

This manual provides essential information for the proper use and care of your DART DCCDLW626 Open-Top Dome Lids. These lids are designed for use with 16-24 oz plastic cups, providing a secure fit and an open top for various beverage and food applications.

PRODUCT OVERVIEW



Figure 1: DART DCCDLW626 Open-Top Dome Lid. This image displays a single clear plastic dome lid with an open top, designed to fit various cup sizes.

The DART DCCDLW626 is a clear, open-top dome lid made from durable plastic. It is specifically engineered to fit a range of 16 to 24 ounce plastic cups, making it versatile for different serving needs. The dome shape provides extra space above the cup rim, ideal for toppings or whipped cream, while the open top allows for straws or spoons.

SETUP

The DART DCCDLW626 lids require minimal setup. Ensure the cups you intend to use are within the 16-24 oz capacity range and have a compatible rim diameter for a secure fit. No assembly is required for the lids themselves.

1. Unpack the lids from their packaging.
2. Verify that the lids are clean and free from any damage before use.
3. Pair with appropriate 16-24 oz plastic cups.

OPERATING INSTRUCTIONS

To properly secure the lid onto a cup:

1. Fill the compatible 16-24 oz plastic cup with your desired beverage or food item.
2. Align the lid over the rim of the cup.

3. Apply gentle, even pressure around the circumference of the lid until it snaps securely into place. A distinct click or firm resistance indicates a proper seal.
4. The open top allows for the insertion of a straw or spoon as needed.

MAINTENANCE AND CARE

These lids are designed for single-use applications in most commercial settings. However, for personal or specific re-use scenarios, they are dishwasher safe.

- **Cleaning:** If re-using, wash thoroughly with warm water and mild detergent, or place in a dishwasher.
- **Storage:** Store unused lids in their original packaging or a clean, dry environment away from direct sunlight and extreme temperatures to prevent warping or damage.
- **Disposal:** Dispose of used lids according to local recycling guidelines for plastic materials.

TROUBLESHOOTING

Most issues with these lids relate to improper fit or damage.

Problem	Possible Cause	Solution
Lid does not fit securely on cup.	• Incorrect cup size (not 16-24 oz). • Cup rim is damaged or deformed. • Lid is warped or damaged.	• Ensure cup is within the specified 16-24 oz range. • Use a cup with an undamaged, compatible rim. • Inspect the lid for damage; discard if warped or cracked.
Lid cracks or breaks during application.	• Excessive force applied. • Lid stored in extreme temperatures (too cold/hot). • Manufacturing defect.	• Apply gentle, even pressure. • Store lids at room temperature. • Contact supplier if multiple lids exhibit this issue.

SPECIFICATIONS

Attribute	Detail
Model Number	DCCDLW626
Brand	DART
Material	Plastic
Color	Clear
Compatible Cup Sizes	16-24 oz Plastic Cups
Closure Type	Lid (Open-Top Dome)
Dishwasher Safe	Yes
UPC	041594994771

Attribute	Detail
Approximate Package Dimensions	23 x 19 x 8 inches
Approximate Package Weight	8.94 Pounds

WARRANTY INFORMATION

Specific warranty details for the DART DCCDLW626 Open-Top Dome Lids are not provided in this manual. For information regarding product warranties, please refer to the original purchase documentation or contact DART customer service directly.

SUPPORT AND CONTACT

For further assistance, questions, or to report any issues with your DART DCCDLW626 Open-Top Dome Lids, please contact the manufacturer or your supplier. Please have the model number (DCCDLW626) and UPC (041594994771) available when contacting support.

Note: This manual is for informational purposes only and may be updated without prior notice.

© 2024 DART. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0714M4VW1>

More documents and user manuals: <https://manuals.plus/>