

Stack-On SHD-SU-BG-E

Stack-On SHD-SU-BG-E Home Defense Safe with Electronic Lock

User Manual

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Stack-On SHD-SU-BG-E Stand Up Home Defense Safe. Please read this manual thoroughly before installation and operation to ensure proper functionality and security. This safe is designed to secure up to 3 long guns and 4 handguns, featuring an electronic lock for quick access and a carpeted interior with a removable shelf.

SAFETY INFORMATION

- Always store firearms unloaded and secured within the safe.
- Keep the safe locked and the keys (if applicable) or electronic code stored in a secure location, inaccessible to unauthorized individuals, especially children.
- Anchor the safe to a wall or floor to prevent tipping, especially when the door is open. This is crucial for stability and security.
- Do not store flammable materials or open containers of liquids inside the safe.
- Ensure the safe is placed on a level surface.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Stack-On SHD-SU-BG-E Home Defense Safe
- Electronic Lock (pre-installed)
- Backup Keys (2)
- Removable Shelf
- Mounting Hardware (bolts/screws for anchoring)
- User Manual (this document)

SETUP

1. Unpacking

Carefully remove the safe from its packaging. Inspect the safe for any signs of damage. Retain packaging materials for potential future transport or returns.

2. Mounting and Anchoring

It is highly recommended to anchor the safe to a wall or floor to prevent unauthorized removal and to ensure stability, especially when the door is open. The safe is designed to be top-heavy when the door is open and not anchored.

1. Choose a suitable location for the safe, ensuring it is level and has sufficient clearance for the door to open fully.
2. Using the provided mounting hardware, secure the safe to a structural wall stud or concrete floor. Drill pilot holes as necessary.
3. Ensure all bolts are tightened securely.

3. Battery Installation for Electronic Lock

The electronic lock requires batteries to operate. Access the battery compartment, typically located on the inside of the door or behind the keypad. Insert the specified number and type of batteries (usually AA or 9V), ensuring correct polarity.

4. Setting Your Electronic Lock Code

Refer to the specific instructions provided with your electronic lock for setting your personal access code. Typically, this involves:

1. Open the safe using the backup key or the factory default code (if provided).
2. Locate the reset button inside the safe, usually on the back of the lock mechanism.
3. Press the reset button. The lock will usually beep or flash an indicator light.
4. Enter your new desired code (typically 3-8 digits) on the keypad.
5. Confirm the code by pressing a designated button (e.g., 'Enter' or '#').
6. Test the new code multiple times with the door open before closing it.

5. Using the Backup Key

The safe includes backup keys for manual access in case of electronic lock failure or dead batteries. Insert the key into the keyhole, turn it, and then operate the handle to open the safe. Keep backup keys in a secure location away from the safe.

OPERATING THE SAFE

1. Opening with Electronic Lock

1. Enter your personal access code on the keypad.
2. The lock will indicate successful entry (e.g., green light, beep).
3. Within a few seconds, turn the handle to open the door.

2. Storing Firearms and Handguns

The safe features a patent-pending barrel rest design for long guns and handgun holders. The carpeted interior protects your items.



Image: Interior of the safe with firearms and ammunition.

- Place long guns into the barrel rests, ensuring they are stable and do not obstruct the door mechanism.
- Utilize the handgun holders to secure up to four handguns.
- The removable shelf can be used for ammunition, accessories, or other valuables.

3. Closing and Securing the Safe

1. Ensure all items are placed securely and do not interfere with the door closing.
2. Close the door firmly.
3. Turn the handle to engage the 3 live-action locking bolts and 3 dead bolts.
4. The electronic lock will automatically re-lock, or you may need to press a button to secure it, depending on the lock model.

MAINTENANCE

1. Battery Replacement

The electronic lock features a low battery warning system. When indicated, replace the batteries promptly to avoid being locked out. Use only new, high-quality batteries of the specified type.

2. Cleaning

Clean the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish. The interior carpeted surfaces can be vacuumed or wiped with a damp cloth.

3. Checking Locking Bolts

Periodically inspect the locking bolts and door mechanism for any obstructions or signs of wear. Ensure they engage smoothly and fully when the door is closed.

TROUBLESHOOTING

- **Safe will not open with electronic code:**

Ensure batteries are fresh and correctly installed. Try entering the code again carefully. If unsuccessful, use the backup key.

- **Low battery warning:**

Replace batteries immediately. The lock may still function for a short period, but performance will degrade.

- **Door will not close properly:**

Check for any obstructions inside the safe, such as firearms or accessories, that might be preventing the door from fully closing. Ensure the safe is on a level surface and properly anchored.

- **Keypad unresponsive:**

Check battery connection. If the keypad remains unresponsive, use the backup key and contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	SHD-SU-BG-E
Brand	Stack-On
Lock Type	Electronic with Backup Key
External Dimensions (W x D x H)	12 x 11 x 55 inches
Internal Dimensions (W x D x H)	11.5 x 10.75 x 54 inches
Material	Alloy Steel
Item Weight	44.45 kg (approximately 98 lbs)
Capacity	Up to 3 long guns and 4 handguns
Mounting Type	Flooring / Wall
Included Components	Safe, Instructions, Backup Key

WARRANTY INFORMATION

Stack-On products are manufactured to high-quality standards. For specific warranty details regarding your SHD-SU-BG-E safe, please refer to the warranty card included with your purchase or visit the official Stack-On website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact Stack-On customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.

Website: www.stack-on.com (Example, please verify official website)