

Kichler 49500BKTLED

Kichler Lyndon 19" Portable Bluetooth LED Lantern Instruction Manual

PRODUCT OVERVIEW


The Kichler Lyndon 19" Portable Bluetooth LED Lantern combines classic design with modern functionality, featuring a Textured Black finish and etched seeded glass. This versatile lantern is designed to provide both illumination and audio entertainment in various settings.

Key Features:

- Integrated 3000K LED light source delivering 250 lumens.
- Dimmable light functionality for adjustable ambiance.
- Built-in Bluetooth speaker for audio streaming.
- Portable design with a rechargeable battery, offering up to 8 hours of operation on a single charge.
- Durable aluminum construction with etched seeded glass.

Package Contents:

- 1 x Kichler Lyndon Portable Bluetooth LED Lantern
- 1 x Power Cord

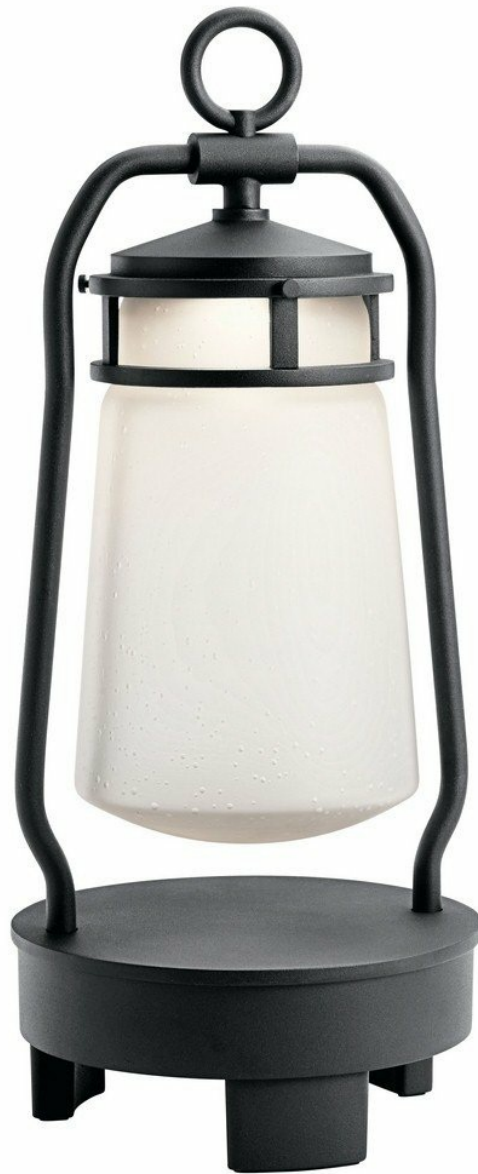

The Kichler Lyndon 19" Portable Bluetooth LED Lantern, showcasing its textured black finish and etched seeded glass.

SAFETY INFORMATION

Please read and understand all safety instructions before operating this product to prevent injury or damage.

- Always ensure the electric current is turned off before performing any cleaning or maintenance.
- This lantern is **not water resistant**. Do not expose it to rain or excessive moisture.
- Overnight outdoor usage is recommended only in covered areas to protect the unit from environmental elements.
- Use only the power cord provided by Kichler for charging the lantern.
- Keep the product out of reach of children.
- If you have any questions regarding product installation or operation, consult a licensed professional.

SETUP AND CHARGING

Initial Charging:

Before using your Kichler Lyndon LED Lantern for the first time, ensure it is fully charged. Connect the provided power cord to the charging port located on the lantern's base and then plug it into a standard electrical outlet. The charging indicator will illuminate to confirm it is charging.

A complete charge typically provides up to 8 hours of continuous operation, depending on light and speaker usage.

OPERATING INSTRUCTIONS

Powering On/Off:

- To turn the lantern **ON**, press the power button located on the base once.
- To turn the lantern **OFF**, tap the power button once.

Adjusting Brightness (Dimming):

- To **dim the light**, press and hold the power button. Release the button when the desired brightness level is achieved.
- To **increase brightness**, press and hold the power button again.

Bluetooth Pairing:

The Kichler Lyndon LED Lantern includes a built-in Bluetooth speaker for streaming audio from your compatible devices.

1. Ensure the lantern is powered on.
2. Activate the Bluetooth function on your mobile device (e.g., smartphone, tablet).
3. Search for available Bluetooth devices in your device's settings.
4. Select "Kichler Lantern" (or a similar name) from the list to pair.
5. Once paired, you can control music selection and volume directly from your mobile device.

Your browser does not support the video tag.

This video demonstrates the Bluetooth pairing process, light dimming, and charging features of the Kichler Portable LED Lantern.

MAINTENANCE

Cleaning:

- Before cleaning, always ensure the electric current is turned off.
- Clean metal components with a soft cloth moistened with a mild liquid soap solution.
- Wipe clean and buff with a very soft, dry cloth.
- Do not use abrasive cleaners, harsh chemicals, or solvents, as these can damage the finish or components.

Battery Care:

To maximize the lifespan of the rechargeable battery, avoid frequent complete discharges. It is recommended to recharge the lantern when the light dims significantly or the speaker's audio performance begins to decrease.

TROUBLESHOOTING

Light does not turn on:

- Ensure the lantern is charged. Connect it to the power cord and check if the charging indicator is active.
- Verify that the power button is pressed correctly.

Bluetooth speaker not connecting:

- Ensure the lantern is powered on and within the effective range of your Bluetooth device (typically 30 feet).
- Check that Bluetooth is enabled on your mobile device.
- If previously paired, try forgetting the "Kichler Lantern" device from your Bluetooth settings and attempt to re-pair.
- Confirm that no other device is currently paired with or actively streaming to the lantern.

Light is dim or flickers:

- The battery may be low. Recharge the lantern fully.
- Ensure the dimming function is not set to a very low brightness level.

SPECIFICATIONS

Feature	Detail
Model Number	49500BKTLED
Brand	Kichler
Light Source Type	Light Emitting Diode (LED)
Power Source	Battery Powered
Material	Aluminum, Glass
Water Resistance Level	Not Water Resistant
Maximum Compatible Light Source Wattage	7 Watts
Light Source Special Features	Dimmable
Color Temperature	3000 Kelvin
Voltage	120 Volts
Wattage	7
Number of Light Sources	1
Batteries Included	Yes (1 rechargeable NIMH 3.6V battery)

Feature	Detail
Item Weight	6 Pounds
Specification Met	ETL Listed

WARRANTY AND SUPPORT

Manufacturer Warranty:

This Kichler product is covered by a manufacturer's warranty for one (1) year from the date of purchase.

Contact Support:

For further assistance, technical support, or to explore other Kichler products, please visit the official Kichler website: www.kichler.com

If you have specific questions regarding a project or product installation, it is always recommended to consult a licensed professional.